



Ref #	Part #	Description	Qty	Context Note	Foot Note
1	TR01107A	AIR FILTER	1		
2		* PLATE, Air Filter	1		* Not a serviceable part. Order complete service assembly.
3		* COVER, Air Filter	1		* Not a serviceable part. Order complete service assembly.
4		* KNOB, Air Filter	1		* Not a serviceable part. Order complete service assembly.
5	----	* SCREW, Set, M8 x 55	2		* Not a serviceable part. Order complete service assembly.
6	----	* COVER, Starter Assembly	1		* Not a serviceable part. Order complete service assembly.
7		* HANDLE, Starter	1		* Not a serviceable part. Order complete service assembly.
8	----	* SCREW, Set, M6 x 18	4		* Not a serviceable part. Order complete service assembly.
9	----	* SCREW, Set, M5 x 20	4		* Not a serviceable part. Order complete service assembly.
10		* TANK, Fuel	1		* Not a serviceable part. Order complete service assembly.
11	----	* SCREW, Set, M5 x 25	4		* Not a serviceable part. Order complete service assembly.
12		* HOUSING, Front	1		* Not a serviceable part. Order complete service assembly.
13		* SHOE, Clutch	2		* Not a serviceable part. Order complete service assembly.
14		* WASHER, Spring, 10	2		* Not a serviceable part. Order complete service assembly.
15		* WASHER, Spring, 8	1		* Not a serviceable part. Order complete service assembly.
16		* SPRING, Clutch	1		* Not a serviceable part. Order complete service assembly.

Ref #	Part #	Description	Qty	Context Note	Foot Note
17		* SCREW, Clutch, M8	2		* Not a serviceable part. Order complete service assembly.
18		* NUT, M8 x 1	1		* Not a serviceable part. Order complete service assembly.
19	-----	* SCREW, Set, M4 x 18	2		* Not a serviceable part. Order complete service assembly.
20		* ELECTRICAL COIL	1		* Not a serviceable part. Order complete service assembly.
21		* HOUSING, Starter	1		* Not a serviceable part. Order complete service assembly.
22		* WIND DEFLECTOR	1		* Not a serviceable part. Order complete service assembly.
23		* COVER, Fly Wheel	1		* Not a serviceable part. Order complete service assembly.
24		* HEAT DEFLECTOR	1		* Not a serviceable part. Order complete service assembly.
25		* COVER, Muffler	1		* Not a serviceable part. Order complete service assembly.
26		* MUFFLER	1		* Not a serviceable part. Order complete service assembly.
27		* MOUNT, Muffler	1		* Not a serviceable part. Order complete service assembly.
28	TR01119A	FLYWHEEL	1		
29	-----	* SCREW, Self Tap, 4.2 x 9.5	8		* Not a serviceable part. Order complete service assembly.
30		* LEVER, Choke	1		* Not a serviceable part. Order complete service assembly.
31		* DOOR, Choke	1		* Not a serviceable part. Order complete service assembly.
32		* SCREW, M4 x 10	1		* Not a serviceable part. Order complete service assembly.
33		* GASKET, Muffler	2		* Not a serviceable part. Order complete service assembly.

Ref #	Part #	Description	Qty	Context Note	Foot Note
34		* SHIELD, Muffler	1		* Not a serviceable part. Order complete service assembly.
35	----	* SCREW, Set, M5 x 65	2		* Not a serviceable part. Order complete service assembly.
36	TR01239A	AIR FILTER ASSEMBLY	1	(Includes Ref. Nos. 1, 2, 3, 4, 5, 30, 31 & 32)	
37	TR01255A	STARTER ASSEMBLY	1	(Includes Ref. Nos. 6, 7, 8, 69 & 76)	
38	TR00399A	CAP, Fuel	1		
39	TR01241A	FUEL TANK ASSEMBLY	1	(Includes Ref. Nos. 9, 10, 38 & 72)	
40	TR01242A	FRONT HOUSING ASSEMBLY	1	(Includes Ref. Nos. 11, 12, 22, 29 & 83)	
41	TR01243A	CLUTCH ASSEMBLY	1	(Includes Ref. Nos. 13, 14, 15, 16, 17 & 18)	
42	TR01253A	ELECTRIC COIL ASSEMBLY	1	(Includes Ref. Nos. 19, 20 & 45)	
43	TR01246A	MUFFLER ASSEMBLY	1	(Includes Ref. Nos. 24, 25, 26, 27, 33, 34 & 35)	
44	TR01247A	REAR COWL ASSEMBLY	1	(Includes Ref. Nos. 21, 29 & 76)	
45		* IGNITION COIL	1		* Not a serviceable part. Order complete service assembly.
46		* PIN, Position	3		* Not a serviceable part. Order complete service assembly.
47		* SCREW, Set, M5 x 30	4		* Not a serviceable part. Order complete service assembly.
48	TR01164A	SPARK PLUG	1		
49		* CRANK CASE, Front	1		* Not a serviceable part. Order complete service assembly.
50		* PIN CLIP, Piston	2		* Not a serviceable part. Order complete service assembly.
51		* PIN, Piston, 8 x 30	1		* Not a serviceable part. Order complete service assembly.
52		* PISTON RING	2		* Not a serviceable part. Order complete service assembly.
53		* PULLEY, Start	1		* Not a serviceable part. Order complete service assembly.
54		* CYLINDER	1		* Not a serviceable part. Order complete service assembly.

Ref #	Part #	Description	Qty	Context Note	Foot Note
55		* OIL SEAL, 12 x 32 x 8	1		* Not a serviceable part. Order complete service assembly.
56		* BREAKWIND	1		* Not a serviceable part. Order complete service assembly.
57		* SCREW, Set, M5 x 10	1		* Not a serviceable part. Order complete service assembly.
58		* CRANK CASE, Rear	1		* Not a serviceable part. Order complete service assembly.
59		* GASKET, Cylinder	1		* Not a serviceable part. Order complete service assembly.
60		* PISTON	1		* Not a serviceable part. Order complete service assembly.
61	TR01261A	SHORT ENGINE ASSEMBLY	1	(Includes Ref. Nos. 23, 28, 46, 47, 48, 49, 50,51, 52, 53, 54, 55, 56, 57, 58, 60, 63, 62, 64,65, 66, 67, 68, 84, 85)	
62	----	* OIL SEAL, 12 x 22 x 8	1		* Not a serviceable part. Order complete service assembly.
63		* KEY, Woodruff	1		* Not a serviceable part. Order complete service assembly.
64		* SHIELD, Fan	1		* Not a serviceable part. Order complete service assembly.
65		* CRANK SHAFT	1		* Not a serviceable part. Order complete service assembly.
66		* GASKET, Crank Case	1		* Not a serviceable part. Order complete service assembly.
67		* BEARING, Needle, K10-14-14	1		* Not a serviceable part. Order complete service assembly.
68		* BEARING, Ball, 6201	2		* Not a serviceable part. Order complete service assembly.
69		* PULLEY, Starter	1		* Not a serviceable part. Order complete service assembly.
70		* PIPE, Inlet	1		* Not a serviceable part. Order complete service assembly.

Ref #	Part #	Description	Qty	Context Note	Foot Note
71		* PIPE, Outlet	1		* Not a serviceable part. Order complete service assembly.
72	TR01258A	FUEL FILTER ASSEMBLY	1	(Includes Ref. Nos. 70, 71, 73, 74 & 75)	
73		* WASHER, Fuel	1		* Not a serviceable part. Order complete service assembly.
74		* PIPE JACKET	1		* Not a serviceable part. Order complete service assembly.
75	TR00208A	FUEL FILTER	1		
76		* SCREW, Set, M5 x 12	2		* Not a serviceable part. Order complete service assembly.
77	TR01244A	CARBURETOR ASSEMBLY	1	(Includes Ref. Nos. 78, 79, 80, 81 & 82)	
78		* GASKET, Inlet	1		* Not a serviceable part. Order complete service assembly.
79		* SCREW, Throttle Limiter	1		* Not a serviceable part. Order complete service assembly.
80		* CARBURETOR	1		* Not a serviceable part. Order complete service assembly.
81		* GASKET, Carburetor	1		* Not a serviceable part. Order complete service assembly.
82		* HEAT INSULATOR	1		* Not a serviceable part. Order complete service assembly.
83		* SHIELD, Starter Housing	1		* Not a serviceable part. Order complete service assembly.
84		* SCREW, Hex Set, M5 x 20	4		* Not a serviceable part. Order complete service assembly.
85		* SCREW, Hex Set, M5 x 10	2		* Not a serviceable part. Order complete service assembly.