


BC 380 T - Engine

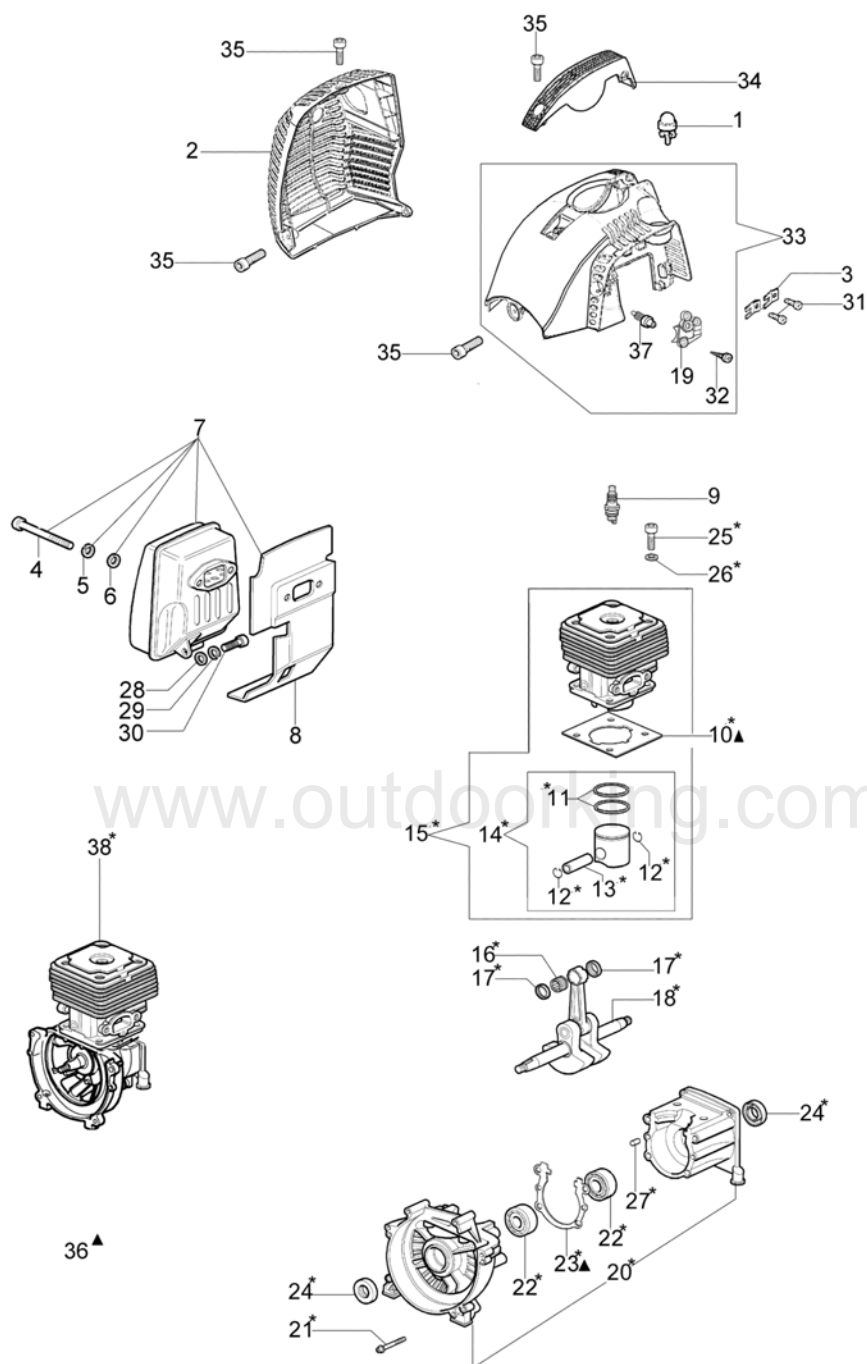


BC 380 T - Engine



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318817R	Air purge				
2	1	61250051AR	Muffler cover				
3	2	4191069B	Plate		matr.2250193407		BT3-105-01/11
4	2	3801069R	Screw				
5	2	3819036R	Washer				
6	2	3916006	Washer				
7	1	61250192AR	Compl. muffler				
8	1	61210035R	Deflector				
9	1	3055115	Spark plug				
10	1	61200007AR	Gasket				
11	1	003300015R	Piston ring				
12	2	004900061R	Ring				
13	1	50110047R	Piston pin				
14	1	61212004A	Piston assy Ø38				
15	1	61212005A	Compl. cylinder				
16	1	50110044R	Bearing				
17	2	50110043R	Spacer				
18	1	61200001R	Crankshaft				
19	1	61250250	Stopper				BT3-092-03/10
20	1	61200113AR	Crankcase assy				
21	4	3860096	Screw				
22	2	094000006R	Bearing				
23	1	61200006R	Gasket				
24	2	094000099R	Seal ring				
25	4	094000101R	Screw				
26	4	3833073R	Washer				
27	2	3023008R	Plug				
28	1	3916005R	Sealing washer				
29	1	3819006	Washer				
30	1	3801010R	Screw				
31	2	3960030	Screw		matr.2250193407		BT3-105-01/11
32	3	3960087AR	Screw				BT3-092-03/10
33	1	61250252R	Cylinder cover				BT3-092-03/10
34	1	61250046R	Plug cap				
35	4	3960070	Screw				
36	1	61202038R	Gasket set				
37	1	61250249R	Adjust. pin				BT3-092-03/10
38	1	61252075R	Short block				

BC 380 T - Starter assy and clutch


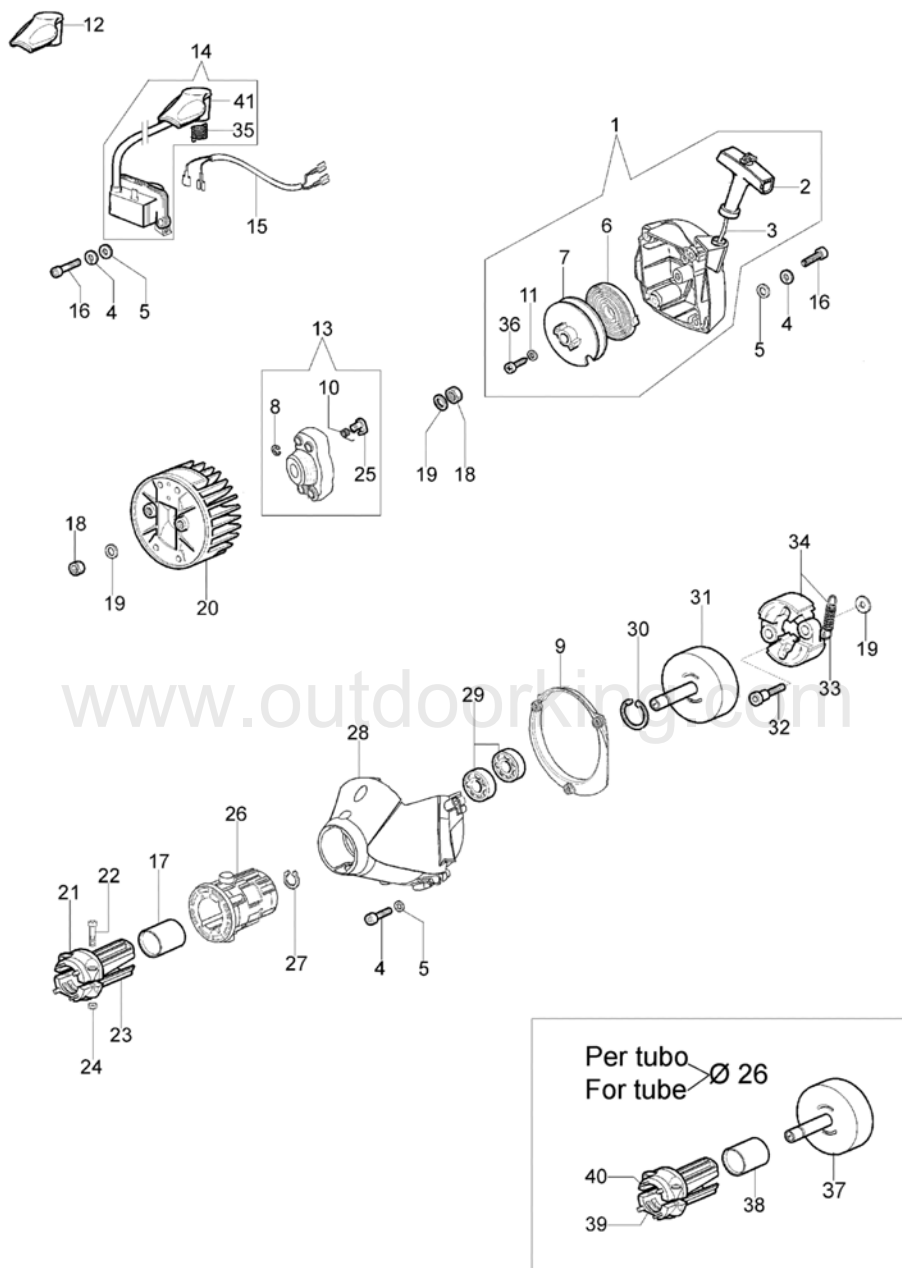


BC 380 T - Starter assy and clutch



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61250199R	Starter assy				
2	1	61200015R	Starter handle				
3	1	4098073R	Starter rope				
4	6	3916006	Washer				
5	8	3916005R	Sealing washer				
6	1	004000132R	Spring				
7	1	4191018AR	Starter pulley				
8	2	3024007	Ring				
9	1	61250056R	Flange				
10	2	4191017A	Spring				
11	3	3918006	Washer				
12	1	61200012R	Spark plug cap		matr.2251077045	Ø 7 mm	BT3-108-04/11
13	1	61252002R	Clutch driver				
14	1	61250197AR	Ignition coil	matr. 2251077046			BT3-108-04/11
15	1	61250282R	Cable	matr.2250193408			BT3-105-01/11
15	1	61250047R	Cable		matr.2250193407		BT3-105-01/11
16	6	3801013R	Screw				
17	1	4196038	Bushing				
18	1	3912009	Nut				
19	1	3818011A	Washer				
20	1	61250014AR	Flywheel				
21	1	61250019R	Clamp				
22	2	3801016R	Screw				
23	1	61250020R	Clamp				
24	1	3914003R	Nut				
25	2	4191016	Pawl				
26	1	61250023R	Sleeve				
27	1	3024015	Seeger				
28	1	61250018AR	Cover				
29	1	3035015R	Bearing				
30	1	3025022	Ring				
31	1	61250105AR	Clutch drum				BT3-096-05/10
32	2	4191027ER	Pin				
33	1	4191028R	Spring				
34	1	4191153AR	Clutch				
35	1	61250106R	Bushing				
36	1	3960099R	Screw				
37	1	61250104R	Clutch drum				BT3-096-05/10
38	1	61250106R	Bushing				
39	1	61250022R	Clamp				
40	1	61250021R	Clamp				
41	1	50050126	Spark plug cap	matr.2251077046		Ø 5 mm	BT3-108-04/11

BC 380 T - Fuel tank and air filter

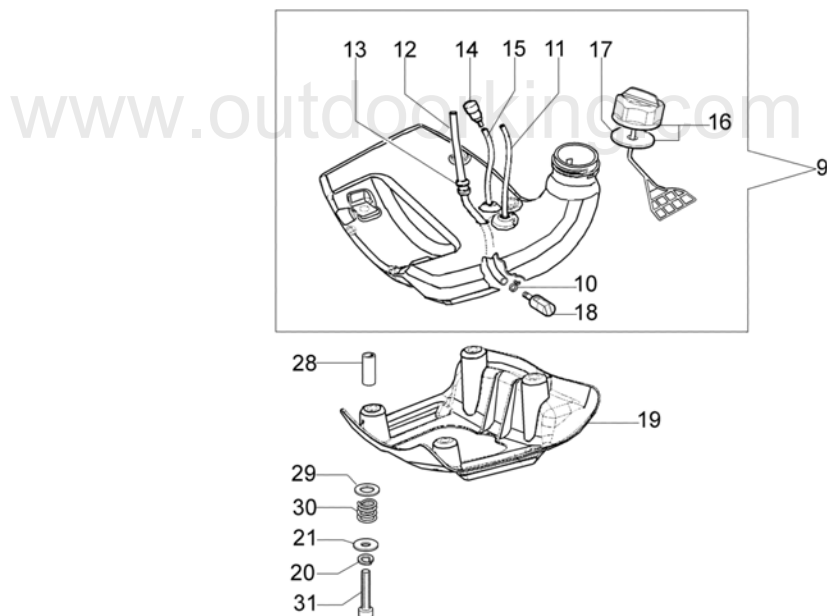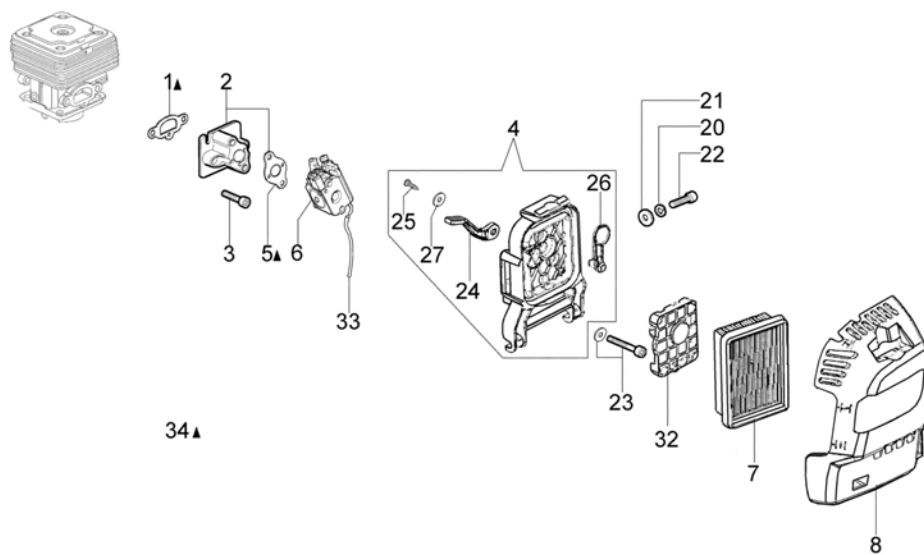


BC 380 T - Fuel tank and air filter



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	1	3801015	Screw				
4	1	61250075R	Filter cover				
5	1	61200196R	Gasket				
6	1	2318735BR	Carburetor WT-870B				BT3-092-03/10
7	1	61170016R	Air filter				
8	1	61250206R	Filter cover				
9	1	61250077R	Fuel tank				
10	1	4098377	Band				
11	1	61200092AR	Hose				
12	1	4161271	Hose				
13	1	4161211	Bush				
14	1	61070011AR	Breather valve				
15	1	61200030AR	Hose				
16	1	61252040R	Complete cap				
17	1	61070006	Gasket				
18	1	094600450R	Fuel filter				
19	1	61250035AR	Stand	s.n 2259433747			BT3-090-02/10
20	5	3819006	Washer				
21	5	3918005	Washer				
22	1	3801013R	Screw				
23	2	4175082	Screws				
24	1	61250027R	Lever				
25	1	3960087AR	Screw				
26	1	61250028BR	Shutter				
27	1	3916004	Washer				
28	4	61200128R	Spacer				
29	4	3916008R	Washer				
30	4	61200129R	Spring				
31	4	3801016R	Screw				
32	1	61250026R	Guard				
33	1	61250257	Fuel line				BT3-092-03/10
34	1	61202038R	Gasket set				

BC 380 T - Transmission Ø 28

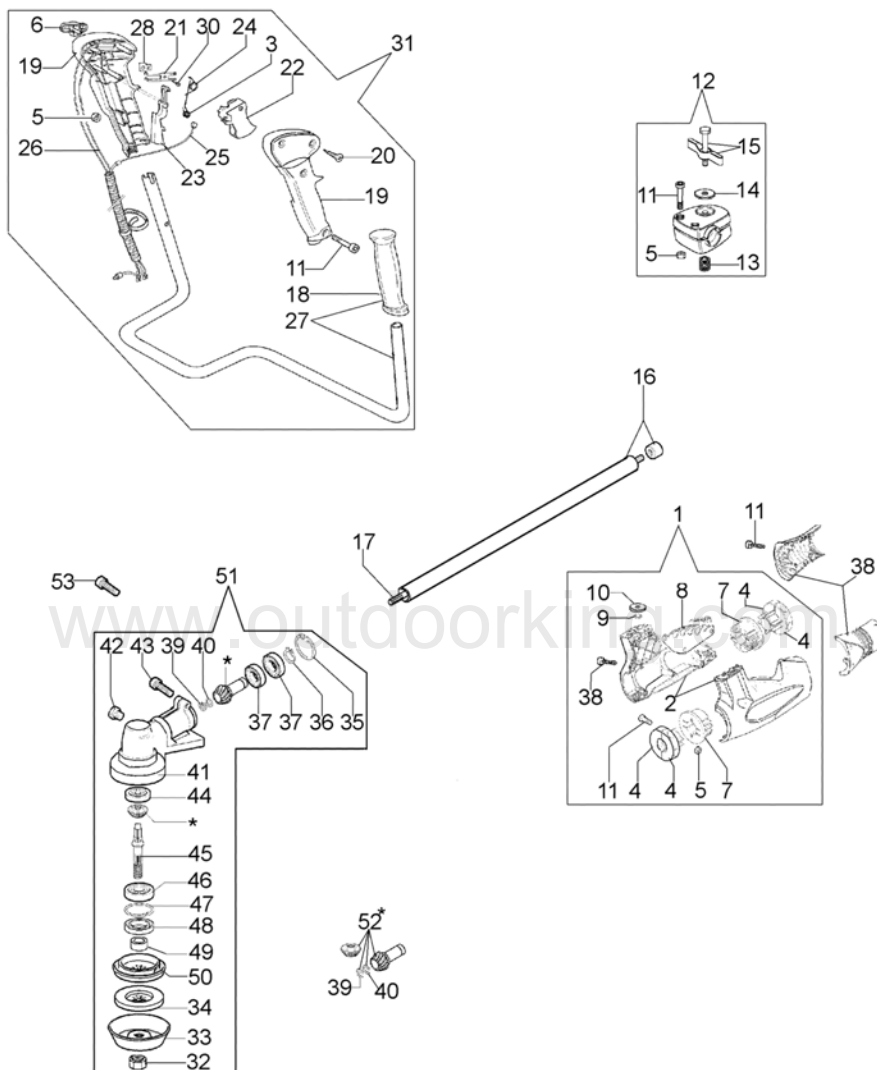

BC 380 T - Transmission Ø 28




Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61252028R	Holder - complete				BT3-096-05/10
2	1	61252042	Compl. case				
3	1	61170095	Spring				
4	4	61040110R	Clamp				BT3-096-05/10
5	5	3914003R	Nut				BT3-095-03/10
6	1	61170094	Slide control				
7	1	61250181R	Sleeve				
8	1	61250180R	Plate				
9	1	3980011	Nut				
10	1	66030012	Washer				
11	2	3801016R	Screw				BT3-095-03/10
12	1	61040155	Compl. clamp				BT3-095-03/10
13	1	61040044	Spring				BT3-095-03/10
14	1	3918013	Washer				BT3-095-03/10
15	1	61042030	Knob				BT3-095-03/10
16	1	61252049R	Tube Ø28				BT3-096-05/10
17	1	61200187R	Drive shaft				BT3-096-05/10
18	1	61040140R	Knob				
19	1	61172043	Handle kit				
20	1	3960067AR	Screw				
21	1	61170093	Plate				
22	1	61170091	Throttle lever				
23	1	61170092	Lever				
24	1	61170096	Spring				
25	1	61280067AR	Throttle cable				BT3-092-03/10
26	1	61280124R	Cable				
27	1	61072037R	Handlebar				
28	1	61170113	Plate				
30	1	3960021	Screw				
31	1	61280128	Compl. handle				
32	1	61110075R	Nut				
33	1	61110074R	Guard				
34	1	4179089R	Flange				
35	1	3025019	Ring				
36	1	3024010R	Ring				
37	2	3035040R	Bearing				
38	1	61252044	Compl. cover				
39	1	3025009	Ring				
40	1	4138311A	Ring				
40	1	4138311A	Ring				
41	1	61040144R	Gear case				
42	1	61040071R	Cap				
43	1	3901016	Screw				
44	1	3034218	Bearing				
45	1	61250054R	Pin				
46	1	3034012R	Bearing				
47	1	3025022	Ring				
48	1	3050018R	Seal ring				

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
49	1	61040066	Spacer				
50	1	61040145R	Hub				
51	1	61250066R	Bevel gear Ø28				BT3-096-05/10
52	1	61040133	Bevel gear set				
53	1	3901008	Screw				

www.outdoorking.com

BC 380 T - Transmission Ø 26

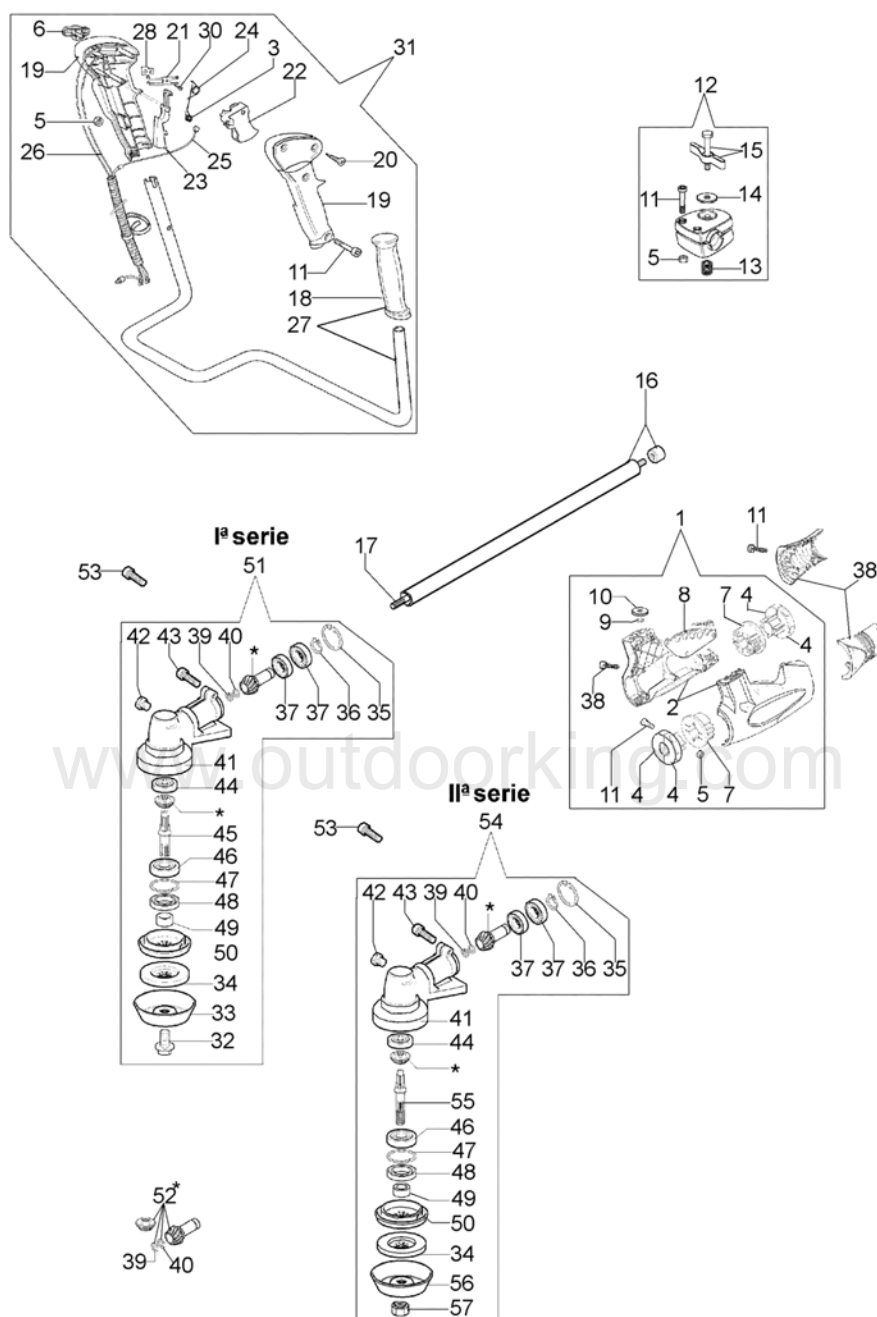

BC 380 T - Transmission Ø 26



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61252030R	Holder - complete				BT3-096-05/10
2	1	61252042	Compl. case				
3	1	61170095	Spring				
4	4	61030012R	Clamp				BT3-096-05/10
5	5	3914003R	Nut				BT3-095-03/10
6	1	61170094	Slide control				
7	1	61250181R	Sleeve				
8	1	61250180R	Plate				
9	1	3980011	Nut				
10	1	66030012	Washer				
11	2	3801016R	Screw				BT3-095-03/10
12	1	61040155	Compl. clamp				BT3-095-03/10
13	1	61040044	Spring				BT3-095-03/10
14	1	3918013	Washer				BT3-095-03/10
15	1	61042030	Knob				BT3-095-03/10
16	1	61202023R	Tube Ø26				BT3-096-05/10
17	1	61170075R	Drive shaft				BT3-096-05/10
18	1	61040140R	Knob				
19	1	61172043	Handle kit				
20	1	3960067AR	Screw				
21	1	61170093	Plate				
22	1	61170091	Throttle lever				
23	1	61170092	Lever				
24	1	61170096	Spring				
25	1	61280067AR	Throttle cable				BT3-092-03/10
26	1	61280124R	Cable	matr.2250193408			BT3-105-01/11
26	1	61250166R	Cable		matr.2250193407		BT3-105-01/11
27	1	61072037R	Handlebar				
28	1	61170113	Plate				
30	1	3960021	Screw				
31	1	61280128	Compl. handle				
32	1	61040074AR	Screw				BT3-085-03/09
33	1	4100456R	Guard				BT3-085-03/09
34	1	4179089R	Flange				
35	1	3025019	Ring				
36	1	3024010R	Ring				
37	2	3035040R	Bearing				
38	1	61252044	Compl. cover				
39	1	3025009	Ring				
40	1	4138311A	Ring				
41	1	61040144R	Gear case				
42	1	61040071R	Cap				
43	1	3901016	Screw				
44	1	3034218	Bearing				
45	1	61040106A	Pin				BT3-085-03/09
46	1	3034012R	Bearing				
47	1	3025022	Ring				


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
48	1	3050018R	Seal ring				
49	1	61040066	Spacer				
50	1	61040145R	Hub				
51	1	61052030BR	Bevel gear Ø26				BT3-085-03/09
52	1	61040132	Gear set				
53	1	3901008	Screw				
54	1	61250053R	Bevel gear Ø26				BT3-085-03/09; BT3-096-05/10
55	1	61250054R	Pin				BT3-085-03/09
56	1	61110074R	Guard				BT3-085-03/09
57	1	61110075R	Nut				BT3-085-03/09

www.outdoorking.com

BC 380 T - Carburatore WT-870



Walbro WT-870B

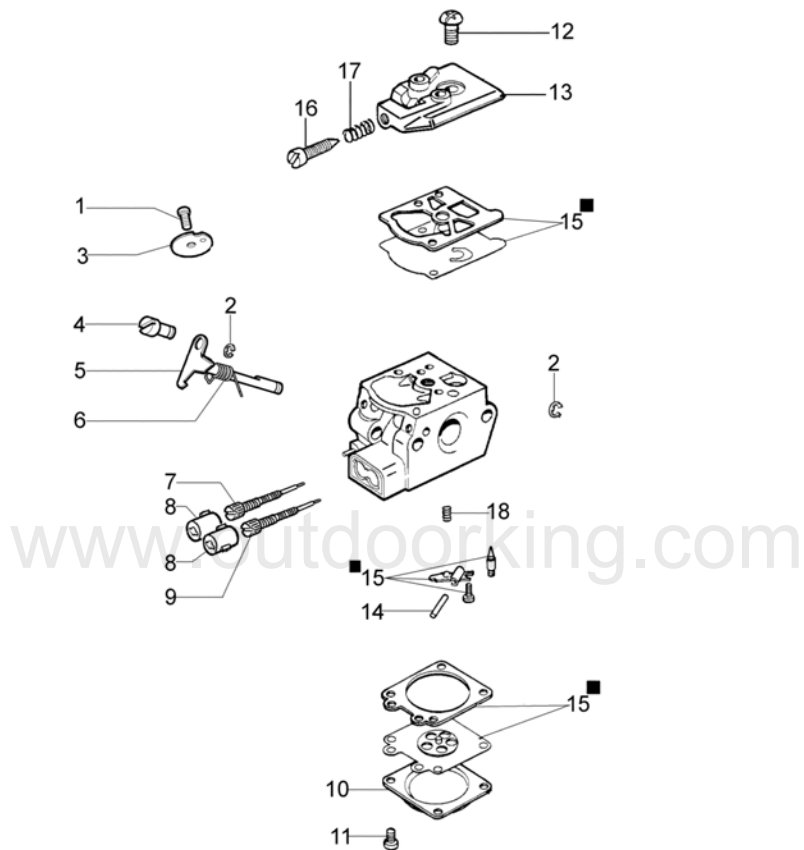

15 ■ KIT RIPARAZIONE
REPAIR KIT









BC 380 T - Carburetor WT-870



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010141	Screw				
2	2	095000164	Ring				
3	1	095000141	Shutter				
4	1	2318211	Pin				
5	1	2318786	Shaft				
6	1	094600208	Spring				
7	1	2318736	Adjust. screw				
8	2	2318687	Caps-lock				
9	1	2318631	Adjust. screw				
10	1	2318191	Cover				
11	4	035000162	Screw				
12	1	003300197	Screw				
13	1	50050107	Cover				
14	1	003300201	Spindle				
15	1	2318671	Repair kit				
16	1	074000240	Adjust.screw				
17	1	094600148	Spring				
18	1	2318607	Spring				

www.outdoorking.com

BC 380 T - Accessories

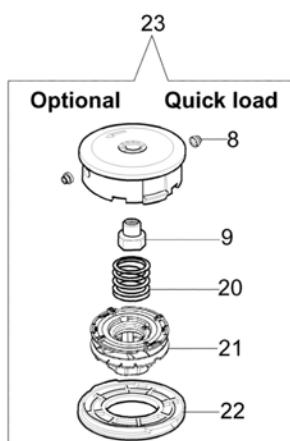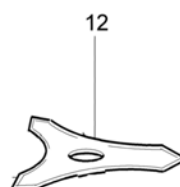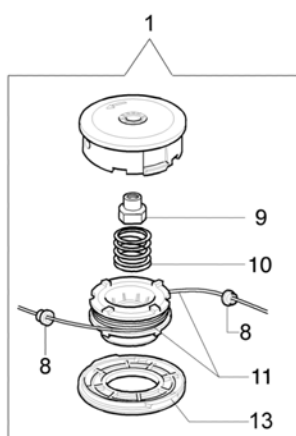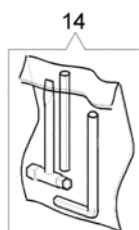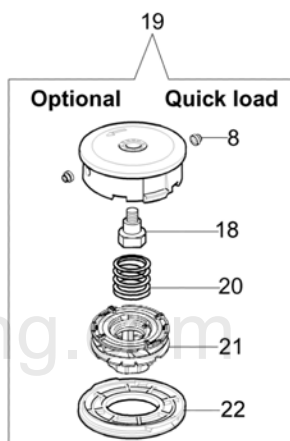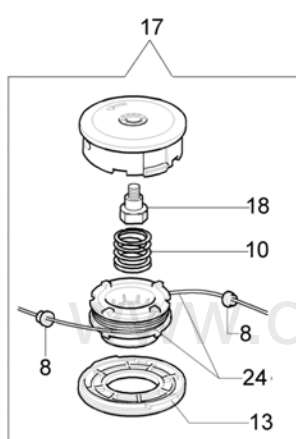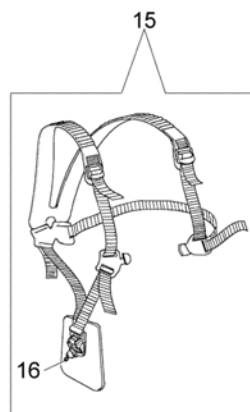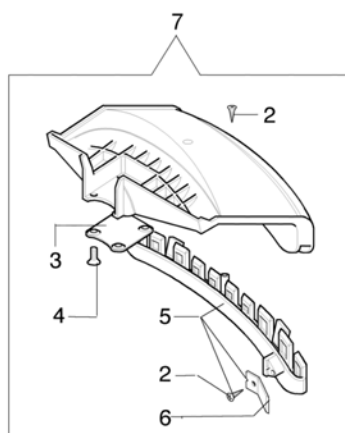

BC 380 T - Accessories



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61112059A	Compl. nylon head Ø3				
2	2	3960040R	Screw				
3	1	4174278	Plate				
4	4	3802004CR	Screw				
5	1	4179113A	Skirt w/blade				
6	1	4174275R	Blade				
7	1	61042036	Guard				
8	2	4199005A	Bushing				
9	1	61110076	Insert				
10	1	4199004	Spring				
11	1	4199031A	Nylon spool Ø3				
12	1	4095673AR	Disk				
13	1	4199035R	Cover				
14	1	61052031	Tool kit				
15	1	63050018AR	Harness				
16	1	63050016	Hooking spring				
17	1	4199039AR	Compl. nylon head Ø3				
18	1	4199008B	Insert				
19	1	63019010A	Quick load nylon head Ø3				
20	1	4199048R	Spring				
21	1	4199049	Nylon spool				
22	1	4199046	Cover				
23	1	63019012A	Quick load nylon head Ø3				