



**GENUINE SANLI
MOWERS & HANDHELDS**

Finished Units

About Us & Warranty.....	842
Dealer Exclusive Range.....	843
LCS405 Lazer Cut Lawnmower.....	843
LMS405 Lazer Mulch Lawnmower.....	843
Mainline Range.....	844 - 845
PCS355 Bull Ant Lawnmower.....	844
RCS405 RedBack Lawnmower.....	844
PMS405 Power Mulch Lawnmower.....	845
Handheld Range.....	846 - 847
BCB265 Bent Shaft Brushcutter.....	846
BCS265 Straight Shaft Brushcutter.....	846
SLB265 Outdoor Blower.....	847

Lawn Mower Spare Parts

PCS350S Bull Ant Self Propelled Lawnmower.....	848 - 849
PCS350/355 Bull Ant Lawnmower.....	850 - 851
BIG350 Big W Lawnmower.....	850 - 851
BBP400 Bumble Bee Lawnmower.....	850 - 851
BBJ300 Bumble Bee Junior Lawnmower.....	850
LBP350 Lawn Beetle Lawnmower.....	852
VTS400 Victory Lawnmower.....	852 - 853
LMS400/405 Lazer Mulch Lawnmower.....	852 - 853
LCS400/405 Lazer Cut Lawnmower.....	854 - 855
RCS400/405 RedBack Lawnmower.....	854 - 855
PCS400 Power Cut Lawnmower.....	856
PMS400/405 Power Mulch Lawnmower.....	856
PMS550 Power Mulch Lawnmower.....	856
Self Propelled SSP550 mower.....	858 - 863

Lawn Mower Engine Spare Parts

Engine Parts for BBJ300.....	850
OHV350 & OHV400 Engine (3 hole starter).....	860 - 861
OHV350 & OHV400 Engine (4 hole starter).....	862 - 863
OHV550 engine.....	864

Ride-On Mower Spare Parts

TBM1066A & TBH1066A Ride-On.....	865 - 869
Body System.....	865
Height Adjuster.....	866
Steering System.....	866
Cutting System.....	867
Mechanical Drive System (TBM).....	868
Hydraulic Drive System (TBH).....	869
ADR1130 Ride-On.....	870 - 877
Body System.....	870 - 871
Cutting Deck.....	872 - 873
Height Adjuster.....	872 - 873
Steering System.....	874
Operating System.....	875
Drive System.....	876 - 877

Brushcutter Spare Parts

BCB262/265 (split shaft) Bent Shaft Brushcutter.....	878
BCS262/265 (split shaft) Straight Shaft Brushcutter.....	879
BCB260 Bent Shaft Brushcutter.....	880
BCS260 Straight Shaft Brushcutter.....	881
26cc Engine for BCB/BCS260, 262, 265 & SPS260.....	888 - 889

Pole Saw Spare Parts

SPS260 Pole Saw & Chainsaw Attachment.....	882 - 883
SPS260 Pole Saw & Hedge Trimmer Attachment.....	884
26cc Engine for BCB/BCS260, 262, 265 & SPS260.....	888 - 889

Hedge Trimmer Spare Parts

SLHT600 Hedge Trimmer.....	885
26cc Engine for SLHT.....	891

Blower Spare Parts

SLBV260 Blower Vac.....	886
SLB260/262/265 Blower.....	887
26cc Engine for SLB/SLBV260, SLB262/265.....	890



Sanli & JAK Max

JAK Max are pleased to announce their first venture into lawn & garden finished units with the news of them becoming the exclusive distributor of Sanli Lawn Products.

Sanli and JAK Max began their partnership in 2017 when JAK Max was appointed the exclusive distributor of genuine parts for Australia & New Zealand. Manufactured in one of our industries largest production facilities in the world, Sanli currently produce over 500,000 lawnmowers per year within its 300,000m² factory in Jinjiang, China, selling majority of their power equipment within Europe and producing for market leading brands such as ALKO, Einhell, Webb, IKRA as well as many private brands.

Sanli and JAK Max know you will be impressed with the quality of products on offer and show this by backing their products with a market leading 5 year conditional domestic warranty on all mower models and a 2 year domestic warranty on all handheld products. Refer to 'Warranty' section for further details.

The dealer exclusive models offer you the ability to compete with online businesses and bigger box stores by providing your customers with a value packed product backed by spare parts availability and warranty support around the country at a reasonable & affordable price.

As it currently stands, there are five models available in the Sanli lawnmower range, starting from 16" cut through to 18" cut, featuring steel chassis with powder coated finishes, 4 stroke OHV engines and mulch & catch abilities. The Sanli handheld range is EU5 compliant and consists of a 26cc bent and straight shaft brushcutter and 26cc blower.

Part of JAK Max's offering to you of the Sanli range will be the flexibility of purchasing units in any quantity you require, no minimum order values or quantities as well as the ability to order container quantities direct to your door. As always, we are looking to assist you in selling more product and making more money.

Warranty

Sanli offers a market leading 5 year conditional domestic warranty program on its mowers. It's conditional based on having an annual service on the mower as per the logbook supplied with each product. The dealer signs and stamps the logbook after each service which extends the warranty, much like how it works with servicing of cars.

Warranty doesn't cover wear and tear or consumable items i.e. oil, blades, filters, spark plugs or bag catchers.

This warranty program has the added benefit for our dealers in driving service work to your workshop.



Sanli Customer Service, Warranty & Technical Service

Toll Free: 1800 466 068
support@sanli.com.au

Steve Zammit – 0400 770 875
Steve.zammit@sanli.com.au

Rowan Smith – 0431 915 365
rowan@sanli.com.au

Dealer Exclusive Range



* conditions apply



Lazer Cut Lawnmower

Part No: LCS405

The Sanli Lazer Cut is packed with all the features you'd expect to find in a large mower, with the size and weight of a much smaller one.

Ideal for

Smaller lawns looking for a mower big on features.

Features

- Powder coated finish
- Heavy duty steel chassis
- 42cm (16.5") cutting width
- Extra large ball bearing wheels
- Advanced OHV400 4 stroke engine
- 10 position height adjustment
- Lightweight and compact
- 4 blade cutting system
- Large capacity hard top grass catcher
- Under chassis skirt for better quality cut
- Comfort grip handle with reinforced lower loop

Lazer Mulch Lawnmower

Part No: LMS405

Discover the time saving benefits of mulching, it will cut your mowing time almost in half! Designed in Australia, the Sanli Lazer Mulch mower is packed with all of today's most popular features at a price you can afford. An easily removable mulching plug is included.

Ideal for

Medium to large sized lawns with a choice to mulch or catch.

Features

- Heavy duty steel chassis
- Powder coated finish
- 10 position height adjustment
- 46cm (18") cutting width
- Extra large ball bearing wheels
- Easy removable mulching plug
- Advanced OHV400 4 stroke engine
- 4 blade mulch or catch cutting system
- Under chassis skirt for better quality cut
- Large capacity twin grip grass catcher
- Comfort grip handle with reinforced lower loop



* conditions apply



Mainline Range

Bull Ant Lawnmower

Part No: PCS355

The Sanli Bull Ant, like its name, is a tough little compact mower ideal for small lawns and where maneuverability is important. As well as being easy to use, it is amazing value.

Ideal for

Small lawns. Great where easy maneuverability is required.

Features

- Steel chassis
- Powder coated finish
- Advanced OHV350 4 stroke engine
- Comfort grip handle
- 20cm (8") rear ball bearing wheels
- 40cm (16") cutting width
- 7 position height adjustment
- Lightweight and compact



* conditions apply

RedBack Lawnmower

Part No: RCS405

The Sanli RedBack is packed with all the features you'd expect to find in a large mower, with the size and weight of a much smaller one.

Ideal for

Smaller lawns looking for a mower big on features.

Features

- Heavy duty steel chassis
- Powder coated finish
- Advanced OHV400 4 stroke engine
- Comfort grip handle
- Large capacity hard top grass catcher
- Extra-large ball bearing wheels
- 42cm (17") cutting width
- 10 position height adjustment
- Lightweight and compact
- Tomahawk cutting system



* conditions apply

Mainline Range

Power Mulch Lawnmower

Part No: PMS405



* conditions apply



The Sanli Power Mulch is a highly featured dual function mower; traditional cut and catch mower or the time saving benefits of mulching, which ensures no nutrients are wasted from your grass clippings as they are returned to the soil.

Ideal for

Medium to large sized lawns who want the extra benefit of a mulcher.

Features

- Heavy duty steel chassis
- Powder coated finish
- Advanced OHV400 4 stroke engine
- 4 blade mulch or catch cutting system
- Comfort grip handle with reinforced lower loop
- Under chassis skirt for better quality cut
- Large capacity twin grip grass catcher
 - 46cm (18") cutting width
 - 10 position height adjustment
- Easily removable mulching plug



Handheld Range

Bent Shaft Brushcutter

Part No: BCB265

The Sanli bent shaft brushcutter is the perfect choice for those looking for sturdy, high quality brushcutter for convenient trimming around fences and trees.

Ideal for

Quick and easy line trimming.



Features

- Bent shaft
- Full crankshaft engine
- Automatic centrifugal clutch
- 26cc 2 stroke engine
- Self-feeding line trimming bump head
- Easy mount handle
- Safety guard
- Split shaft for easy freight & storage
- EUV compliant

Straight Shaft Brushcutter

Part No: BCS265

The Sanli straight shaft brushcutter comes with both a line head and metal cutting blade and is designed to tackle the most challenging gardening tasks.

Ideal for

Line trimming as well as heavy grass and weeds.



Features

- Straight shaft
- Full crankshaft engine
- Automatic centrifugal clutch
- 26cc 2 stroke engine
- Self-feeding line trimming bump head
- Metal cutting blade
- Easy mount handle
- Safety harness & guard
- Split shaft for easy freight & storage
- EUV compliant

Handheld Range

Outdoor Blower



Part No: SLB265

The Sanli outdoor blower contains all the power you need to blow away dirt, dust and leaves.

Ideal for

Cleaning driveways, garages, paths and entertaining areas.

Features

- Easy to start
- 26cc 2 stroke engine
- Lightweight and compact
- EUV compliant



Bull Ant Self Propelled PCS350S




Picture for illustration purposes only.

Item No.	Part No.	Description
Cutting System		
1	KSP-CB4	Bar blade
2	479504	Blade boss
3	479502	Blade bolt
4	479581	Blade bolt washer
5	50630S	Spring washer
Height Adjuster		
6	50489	Linkage
7	50651	Height adjuster lever
8	50279	Linkage spring
9	50280	Height adjuster segment
10	50301	Weight adjuster knob
Grass Catcher		
11	50622	Catcher frame
12	50623	Catcher bag
13	50624	Rear flap
14	50641	Rear flap spring
15	50272	Rear flap axle

Item No.	Part No.	Description
Handle		
16	50655	Top handle
17	50656	Lower loop handle
18	50283	Handle mounting plate - left
19	50284	Handle mounting plate - right
20	479031	Handle knob
21	SL46-5Z06104	Spring cord guide
22	SL40T05102	Handle knob bolt
23	50297	Handle nuts
24	50698	Handle bolt
Throttle Control		
25	SL40-3T05050	Throttle cable
26	51052	Driving cable
27	SL46-5T05010	Throttle lever assembly
28	51003	Drive bar
29	479036	Driving cable clip
Engine		
30	479773	Starter assembly (3 hole)
Chassis		
31	50480	Front axle assembly
32	50484	Rear axle assembly
33	50491	Rear axle bush
34	50496	Rear axle pressing plate
35	50497	Wheel dust cover
36	51051	Transmission
37	51053	Transmission spring
38	50648	Belt cover
39	50649	Belt (B27K)
40	SL46-5Z07213	Front belt pulley
41	SL46-5Z07207	Left driving gear
42	SL46-5Z07208	Right driving gear
43	479285	Pin $\phi 5 \times 16.5$
44	50292	Front axle bush
45	50291	Front axle clip (w type)
46	50657	Front wheel
47	50658	Rear wheel
48	479051	Bearing
49	50524	Rear axle fixing base

Bull Ant Self Propelled PCS350S

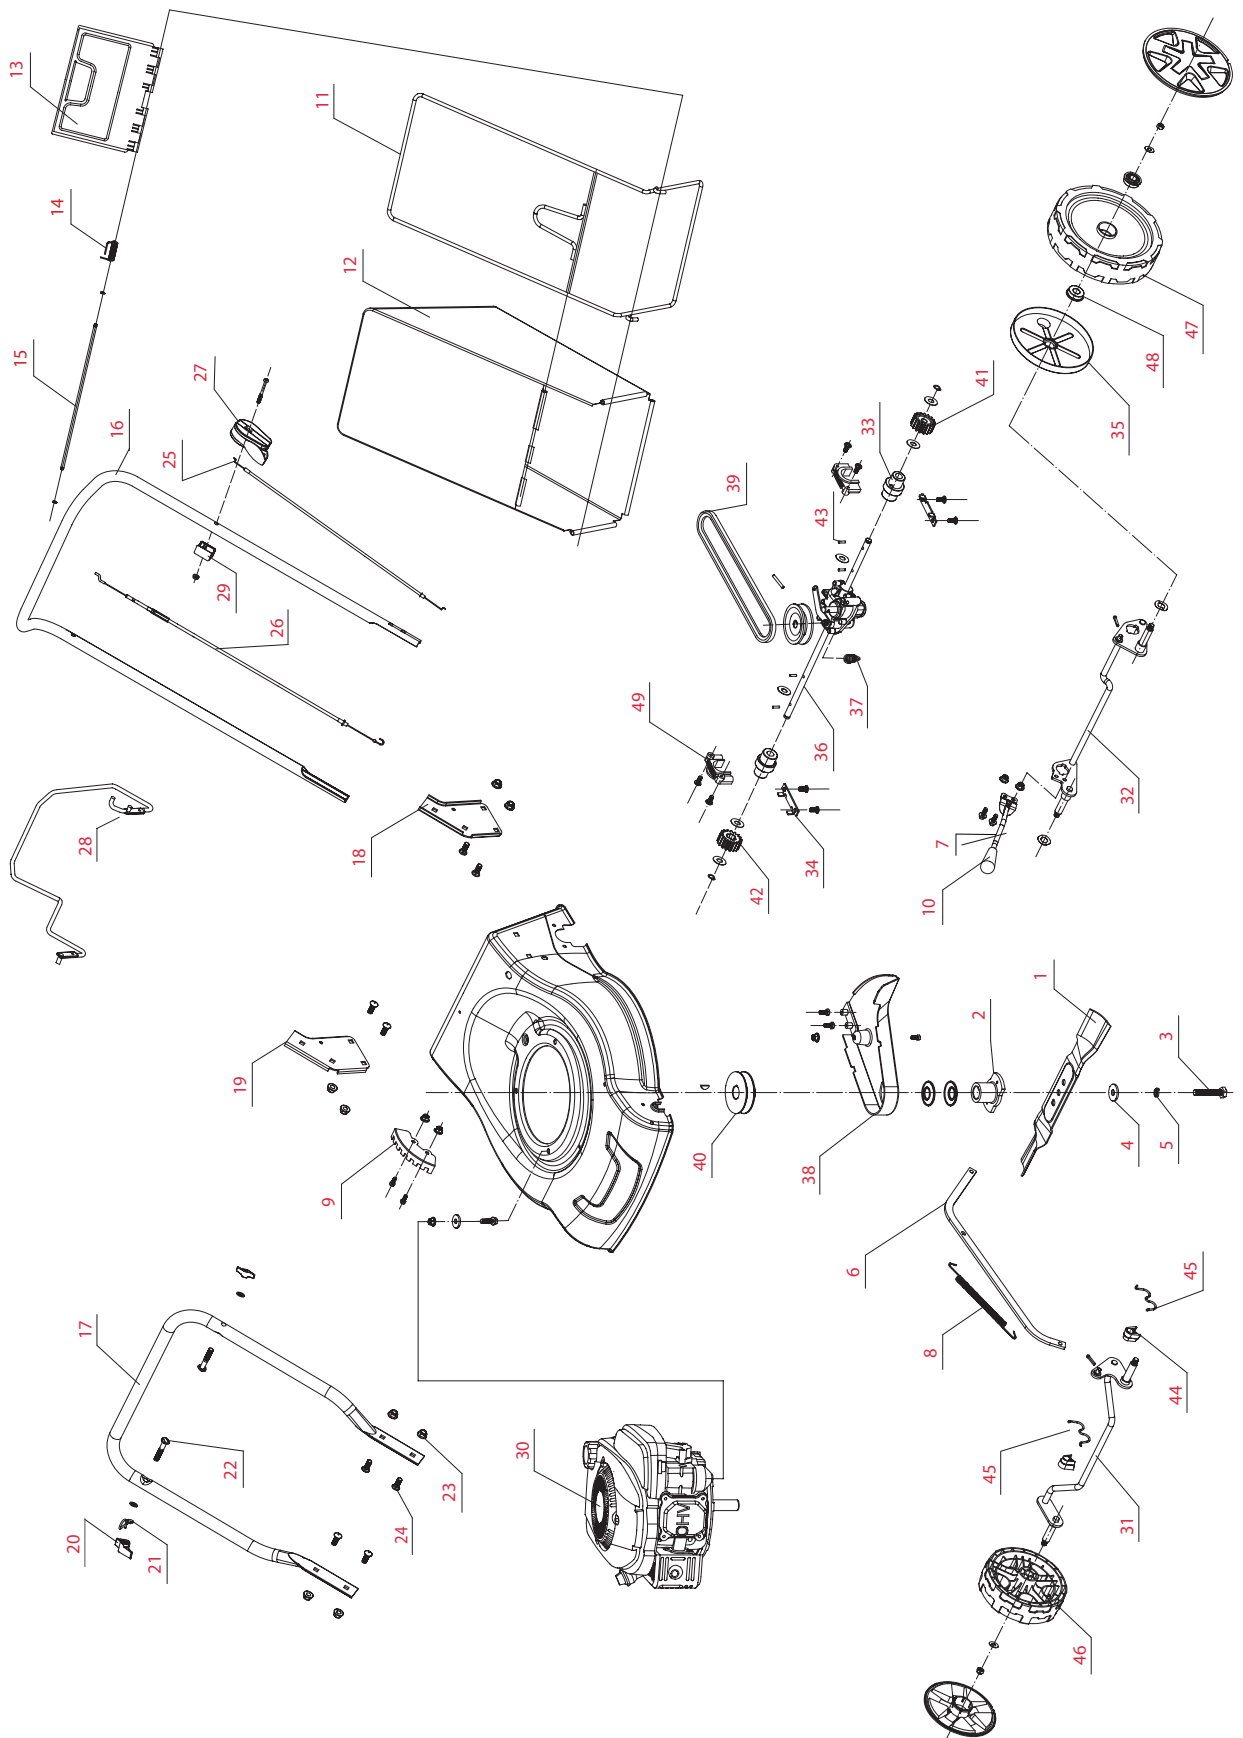

BullAnt PCS350/PCS355 & BigW BIG350/BBP400/BBJ300




Pictures for illustration purposes only.

Item No.	Part No.	Description
Handle		
1	50625	Top handle (PCS350, BP400)
	50395	Top handle (BIG350, BBJ300)
2	50626	Lower loop handle (PCS350, BP400)
	50396	Lower loop handle (BIG350, BBJ300)
3	50283	Handle mounting plate - left
4	50284	Handle mounting plate - right
5	479031	Handle knob
6	SL40T05102	Handle knob bolt
	479304	Lower handle nut
7	50698	Lower handle bolt
Throttle Control		
8	SL42Z-05050	Throttle cable
9	SL46-5T05010	Throttle lever assembly
Chassis		
10	50287	Front wheel (PCS350, BBP400)
	51498	Front wheel (BIG350, BBJ300)
11	50288	Rear wheel (PCS350, BBP400)
	51890	Rear wheel (BIG350, BBJ300)
12	479051	Bearing
13	50639	Front axle assembly (PCS350, BBP400)
	51347	Front axle assembly (BIG350, BBJ300)
14	50289	Rear axle assembly (PCS350, BBP400)
	51348	Rear axle assembly (BIG350, BBJ300)
15	50292	Front axle bush
16	50331	Rear axle bush
17	51102-136	Front hub cap (BIG350, BBJ300)
18	51106-136	Rear hub cap (BIG350, BBJ300)

Item No.	Part No.	Description
Cutting System		
19	KSP-CB4	Bar blade
20	479504	Blade boss
21	479502	Blade bolt
22	479581	Flat washer
23	50630S	Spring washer
Height Adjuster		
24	50313	Linkage
25	50651	Height adjust lever
26	50279	Linkage spring
27	50280	Height adjust segment
28	50301	Height adjust knob
Grass Catcher		
29	50622	Catcher frame
30	50623	Catcher bag (PCS350, BIG350, BBP300)
	51054	Dust-proof catcher bag (BBP400)
31	50624	Rear flap
32	50641	Rear flap spring
33	50272	Rear flap axle


Engine Parts for BBJ300 (Not pictured)	
51581	Carburettor assembly on 99cc engine
51624	Starter assembly on 99cc engine
51644	Sponge air filter on 99cc engine
52574	Throttle cable on 99cc engine
51583	Ignition coil on 99cc engine
479691	Fuel cap on 99cc engine

BullAnt PCS350/PCS355 & BigW BIG350/BBP400/BBJ300

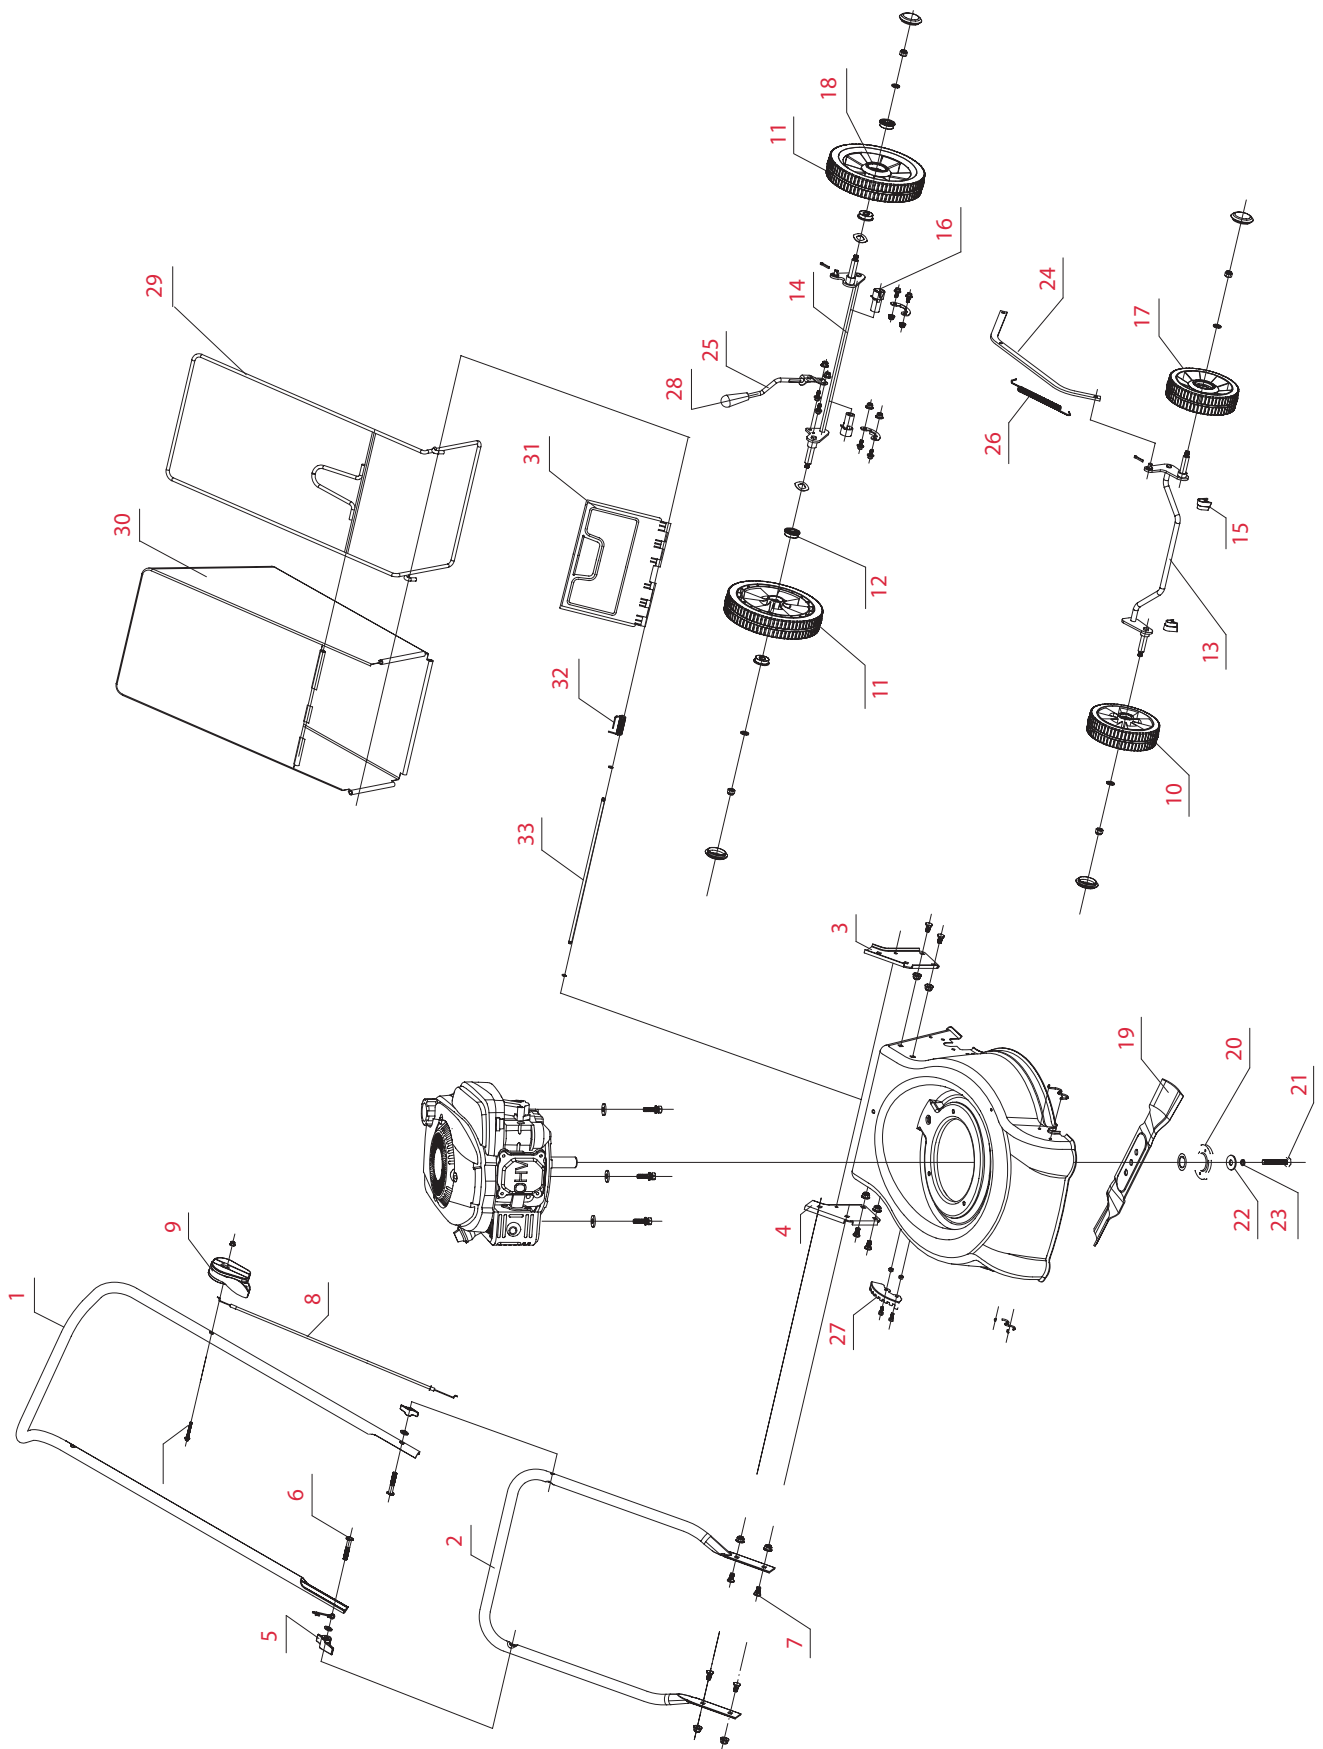

Lawn Beetle LBP350

Item No.	Part No.	Description
1	SL40T07100	Wheel & hubcap / front & rear
2	SL40T05108	Throttle cable
3	SL40T05103	Upper handle
4	SL40T05104	Throttle control lever
5	SL40T-A05050	Handle toggle
6	SL40T04101	Catcher bag
7	SL40T05102	Handle bolt
8	SL40T07204	Wheel bolt - left
9	SL40T07205	Wheel bolt - right
10	SL40T02105	Blade boss
11	KSP-CB2	Bar blade
12	GB/T6177.1-2000	Bolt

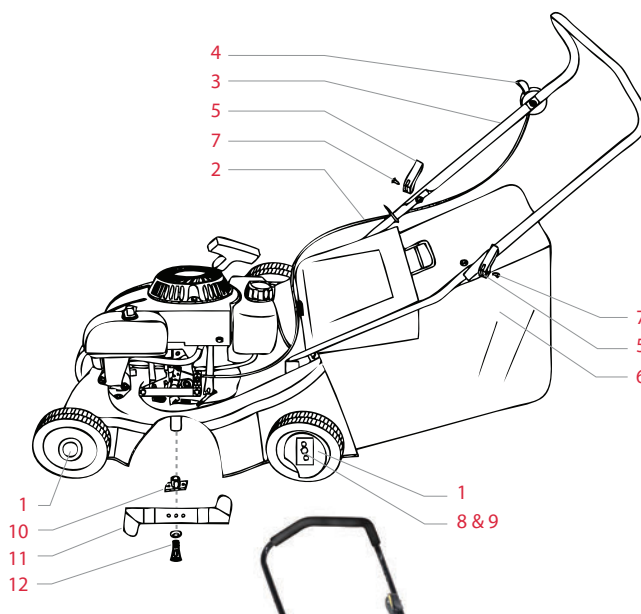

Lazer Mulch LMS400/LMS405 & Victory VTS400

Item No.	Part No.	Description
Chassis		
1	SL46-8T01102	Front skirt
2	GB/T12618-1990	Rivet 5 x 10
3	SL46-5T07102	Rear wheel hub cap
4	SL46-5T07010	Rear wheel
5	SL42T-03012	Height adjuster lever
6	SL46-8T07303	Rear axle shield
18	SL42T-07105	Wheel clip
30	SL46-5T03001	Height Adjuster assembly & Axle
31	SL46-C07102	Front wheel hub cap (grey)
	SL42T-07102	Front wheel hub cap (yellow)
32	SL42T-07010	Front wheel
33	SL46T4-01102	Height adjuster segment
	SL46-8T04108	Mulch plug
Grass Catcher		
28	SL46-8T04010	Complete Catcher
	SL46-8T04010H	Catcher Handle
29	SL46-5T04102	Rear flap
Handle		
7	479525	Handle knob
8	SL46-5T05102	Lower handle
9	SL46-5T05101	Upper handle
13	GB/T6187.1-2000	Nut M8
14	SL46-5Z04102	Left handle mounting plate
15	SL46-5Z04103	Right handle mounting plate


Picture for illustration purposes only.



Item No.	Part No.	Description
Throttle Control		
10	SL46-5T05010	Throttle lever assembly
11	GB/T6177.1-2000	Nut M6
12	SL42T-05040	Throttle cable (VTS400)
	SL46-8Z05050	Throttle cable (LMS400)
16	GB/T6187.1-2000	Nut M8
17	SL42T-05108	Starter hook
19	SL42T-03103	Extension spring
20	GB/91-1986	Split pins 2 x 20
Cutting System		
21	SL46-8T02106	Blade plate
22	52102	Blade boss
23	SL46-8T02104	Washer
24	SL46-8T02101	Loose blade. Set of 4 (VTS)
	PSS-LB1	Loose Blade Set (LMS)
25	KSP-CB1 (JM7037)	Packaged Blade Set (2BB) (LMS)
	JM7090	Bolt, nut & washer (1 set) (LMS)
26	SL46-8T02103	Blade disc
27	479502	Blade disc bolt



Lazer Mulch LMS400/LMS405 & Victory VTS400

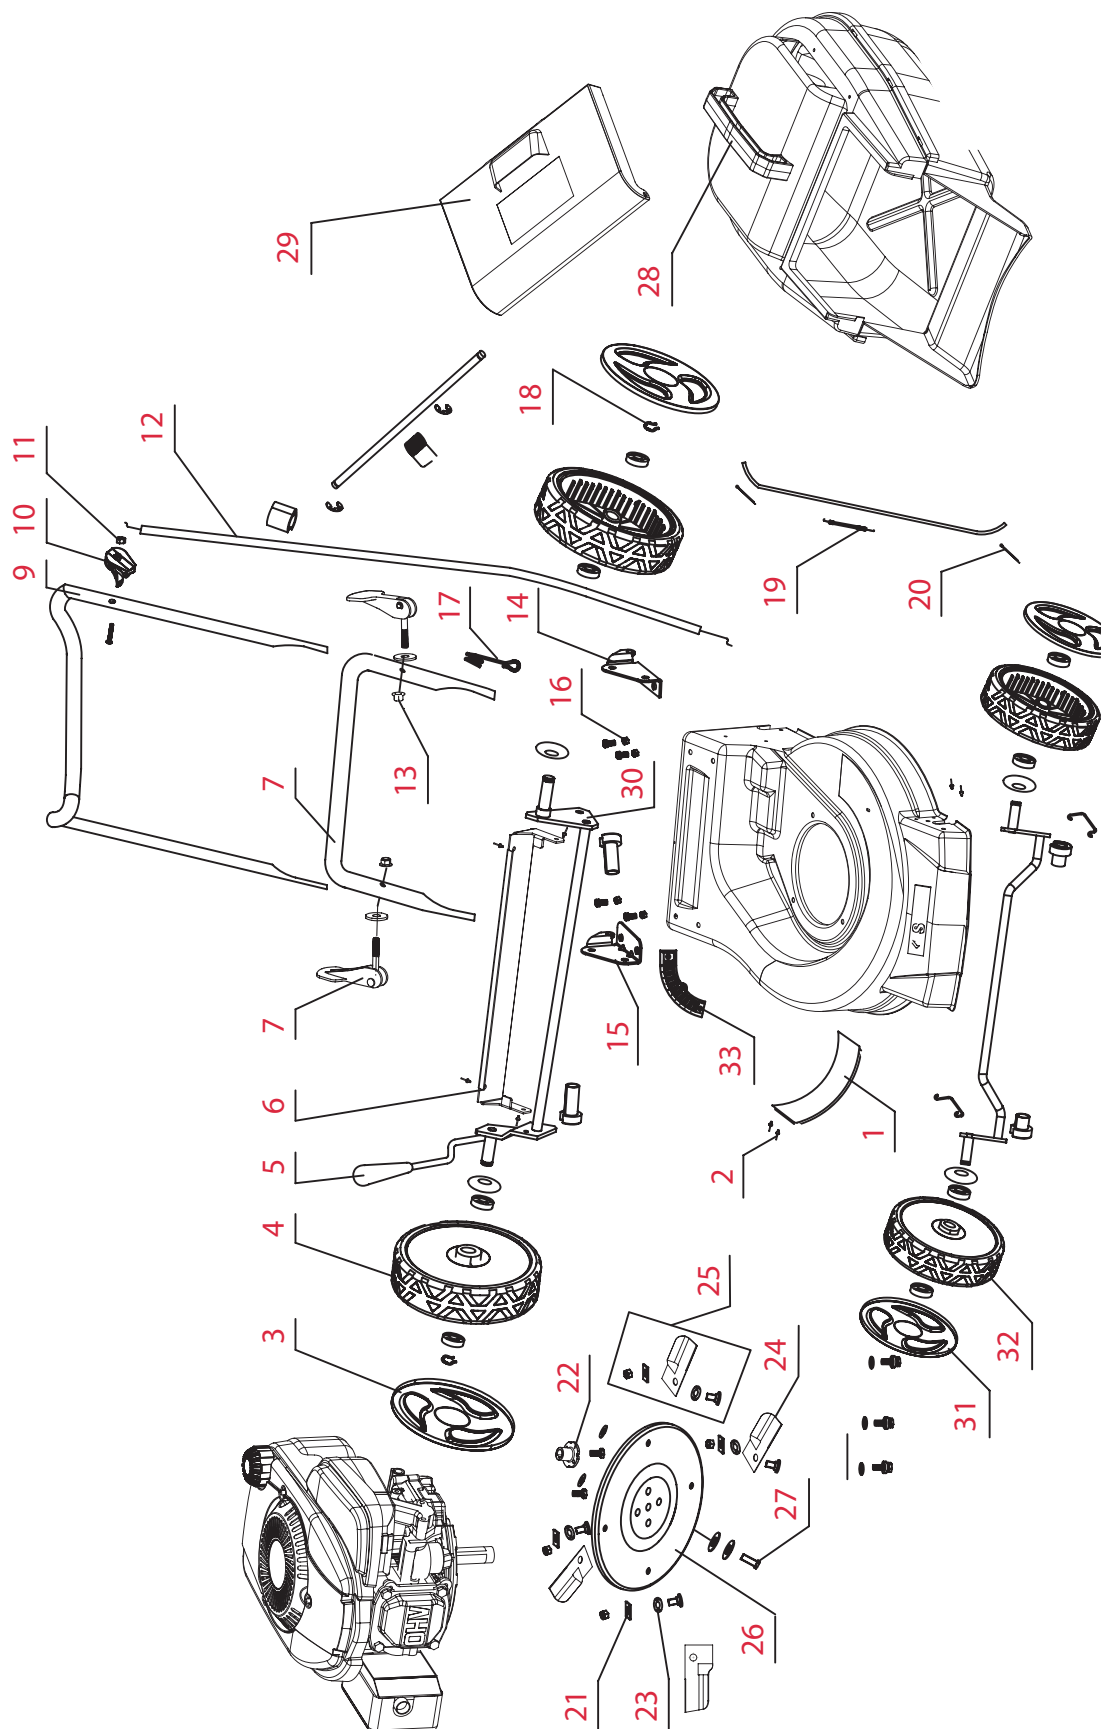


Lazer Cut LCS400/LCS405 & RedBack RCS400/RCS405

Item No.	Part No.	Description
Handle		
1	SL42T-05101	Upper handle
2	SL40T-A05050	Handle knob assembly (LCS)
	479031	Handle knob (RCS)
	SL42T-15	Quick release handle assembly (RCS)
3	SL42T-05102	Lower handle (LCS)
	SL42Z-05112	Lower handle (RCS)
4	GB/T6177.1-2000	Nut M8
Throttle Control		
5	SL46-5T05010	Throttle lever assembly
6	GB/T6177.1-2000	Nut M8
7	SL42T-05040	Throttle cable (4 hole starter)
	SL42Z-05050	Throttle cable (3 hole starter)
8	SL42T-05108	Starter hook
Grass Catcher		
9	SL42T-04104	Rear flap axle
10	SL46-5Z04107	Rear flap spring
11	SL42T-04014	Rear flap
12	SL42T-17	Catcher top cover
13	SL42T-04010	Catcher assembly
Chassis		
14	SL46-5T07010	Rear wheel
15	SL42T-07105	Axle circlip (LCS)
	SL46T4-07102	Axle clip (RCS)
16	SL46-5T07102	Rear wheel hub cap
17	SL42T-03012	Height adjuster lever
18	SL42T-07107	Rear axle bush (LCS)
	SL46T-B07210R	Rear axle bush (RCS)
19	SL46T-A04102	Right handle-mounting plate
20	SL46T-A04103	Left handle-mounting plate
21	GB/T12618-1990	Rivet 5 x 10
22	SL46T4-01102	Height adjuster segment
23	SL42T-03103	Extension spring
24	SPSNB01	Sanli nose badge
25	SL46-C07102	Front wheel hub cap (grey)
	SL42T-07102	Front wheel hub cap (yellow)
26	SL42T-07010	Front wheel
27	SL42T-07020	Front axle assembly
28	SL42T-07108	Front axle bush




Picture for illustration purposes only.


Item No.	Part No.	Description
Cutting System - Lazer Cut LCS model (below)		
29	GB/T1096-1979	Woodruff key, 4.8 x 5.5 x 31
30	SL46T02101	Blade boss
31	PSS-LB1	Cutting blade/bolt/washer/nut
	KSP-CB1 (JM7037)	Packaged blade Set (2BB)
	JM7090	Bolt, nut & washer (1 set)
32	SL42T-02103	Blade disc
33	GB/T962-2002	Flat washer (RCS)
34	479502	Blade disc bolt (RCS)

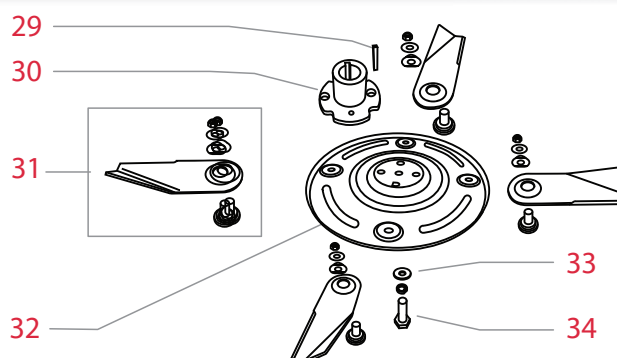

Item No.	Part No.	Description
Cutting System - RedBack RCS model (below)		
35	479504	Blade boss
36	KSP-CB3	Tomahawk bar blade

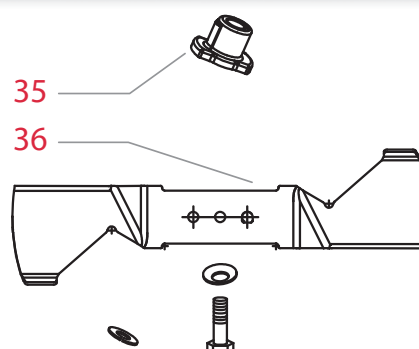


Lazer Cut LCS400/LCS405 & RedBack RCS400/RCS405

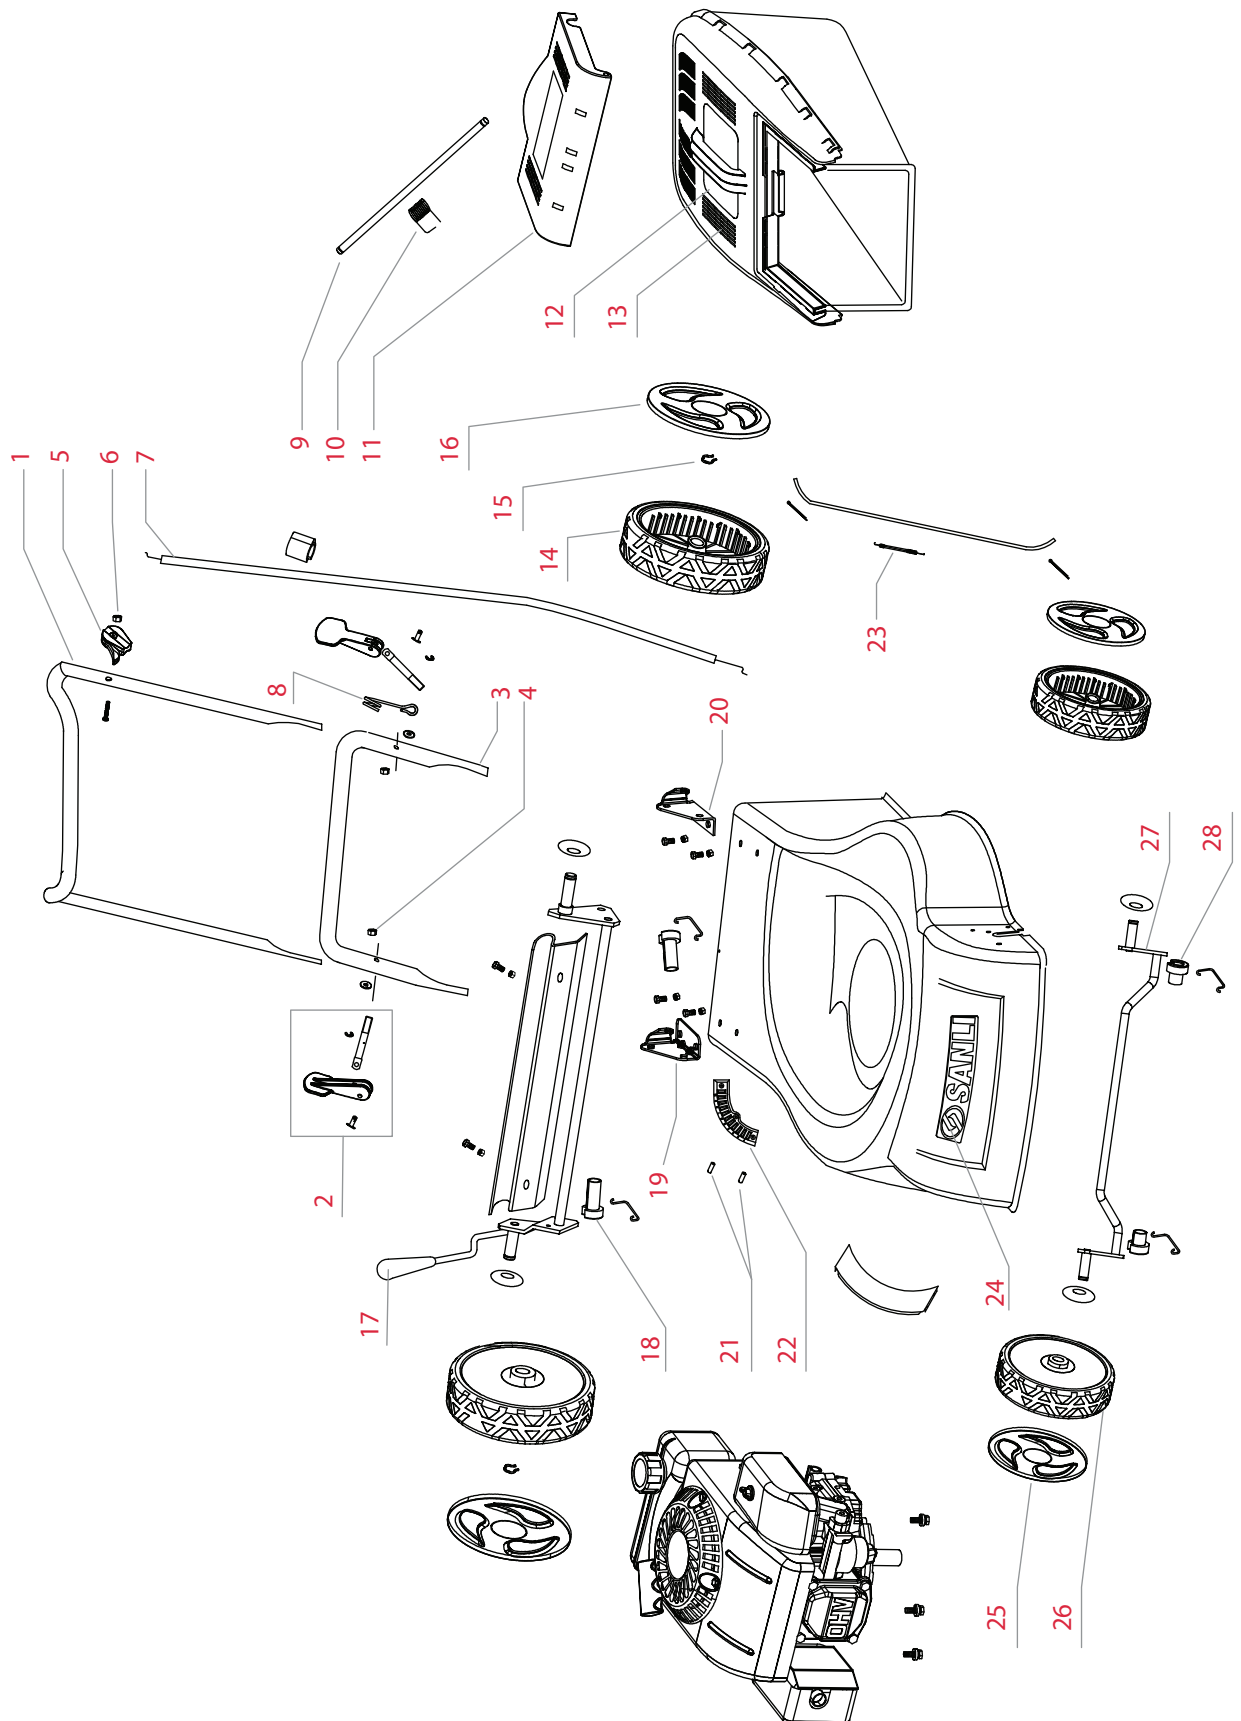

PowerCut PCS400 & PowerMulch PMS400/PMS405/PMS550

Item No.	Part No.	Description
Handle		
1	SL46T-A05101	Upper handle
2	SL46-5T05101	Lower handle
3	SL40T05030	Handle knob
4	SL42T-15	Quick release handle assembly
	SL40T05102	Handle knob bolt
Throttle Control		
5	SL46-5T05010	Throttle control lever
6	SL46T-A05030	Throttle cable
Grass Catcher		
7	SL46-5T04010	Catcher assembly
8	SL46-5T04102	Rear flap - metal
9	SL46-5Z04109	Rear flap axle
10	SL46-5T04107	Rear flap spring
11	SL46-5T04108	Mulch plug
Cutting System		
12	GB/T1096-1979	Woodruff key
13	SL46T02101	Blade boss
14	PSS-LB1	Cutting blade/bolt/washer/nut
	KSP-CB1 (JM7037)	Packaged Blade Set (2BB)
	JM7090	Bolt, nut & washer (1 set)
15	SL46-5T02103	Blade disc
16	GB/T962-2002	Blade disc spring washer
17	479502	Blade disc bolt

Item No.	Part No.	Description
Chassis		
18	SL46T4-07105	Hubcap
19	GB/T276-94	Wheel bearing
20	SL46T4-07010	Wheel & bearing
21	SL46-5T03001	Rear axle assembly with height adjuster
22	SL46-5T07001	Rear axle assembly (no height adjuster)
23	SL46T-B07210R	Rear axle bush
24	SL46T4-07102	Axle clip
25	SL46T-A04103	Handle mounting plate - left
26	GB/T12618-1990	Rivet
27	SL46T4-01102	Height adjuster segment
28	SL46T-A04102	Handle mounting plate - right
29	SPSNB01	Sanli nose badge
30	SL46T-B07210F	Front axle bush
31	SL46-5T07002	Front axle assembly
32	SL46-5T01102	Front skirt

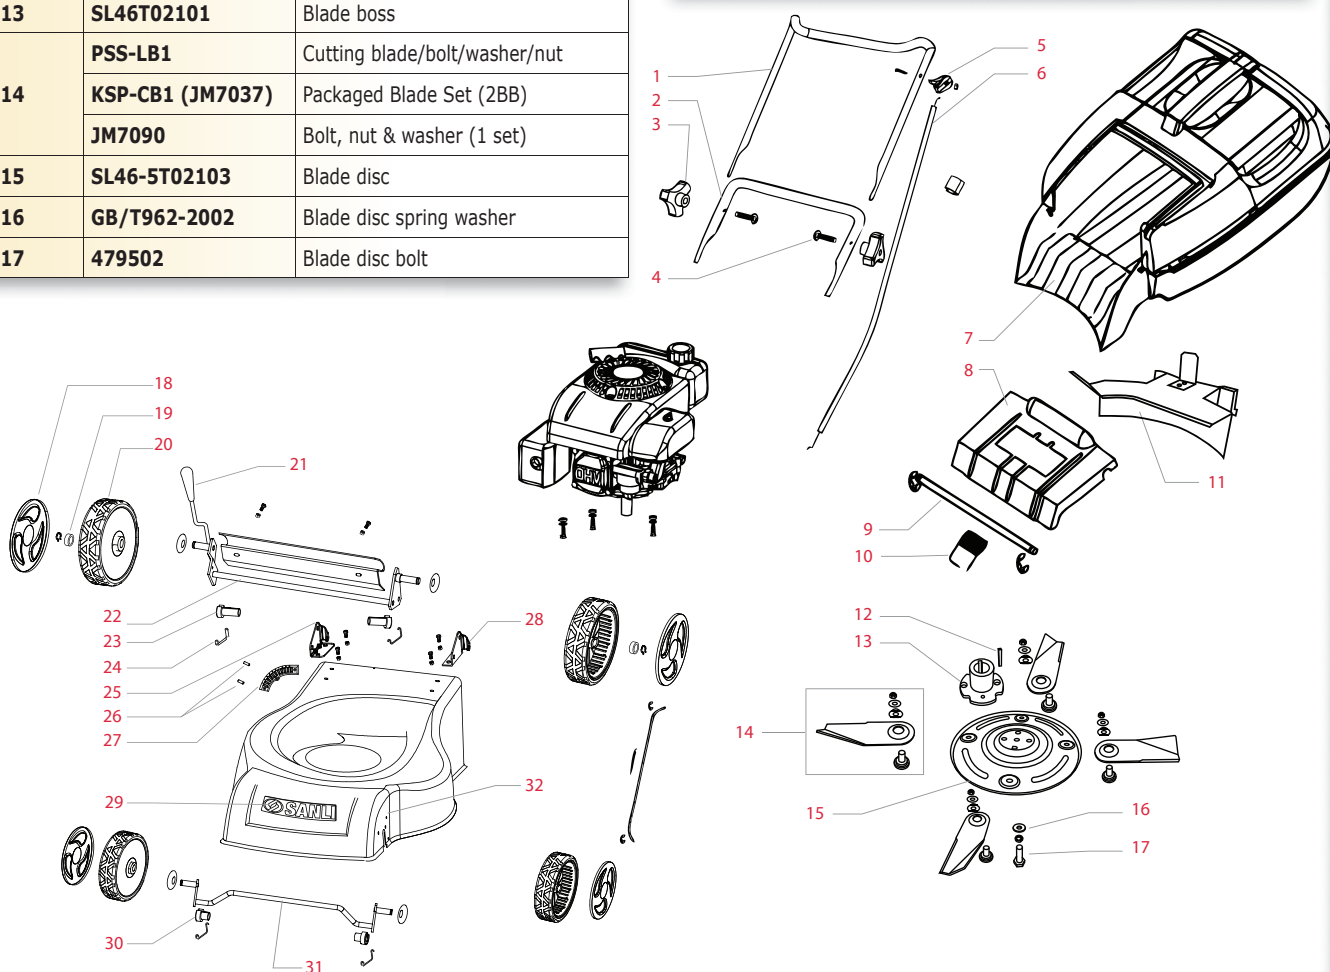

Notes




Self Propelled SSP550

Item	Part No.	Description
Catcher Assembly		
1	S01-0401	Catcher assembly
2	GB/T6177.1-2000	Nut M5
	S01-040007	Catcher plate
Handle Assembly		
3	S01-050014	Upper handle padding
4	S01-050001	Drive bar
5	S01-050008	Lower handle
6	SL42T-15	Quick release handle assembly
7	S01-050004	Lower handle fixer, left
8	S01-050005	Lower handle fixer, right
9	S01-050007	Long washer
Throttle Control		
10	S01-0601	Throttle cable (no spring)
	S01-0604	Throttle cable (no spring, drive)
11	S01-0607-TY	OPC cable
12	GB/T6177.1-2000	Bolt M6
13	S01-050021	Starter hook
Chassis		
14	S01-030001	Connecting bar (adjustable)
15	S01-010001	Clean hole bolt
	S01-0100	Clean port hose nozzle
16	S01-030003	Connecting bar spring
17	GB/T12618-1990	Rivet 5 x 12
18	S01-070015	Clip spring
19	S01-030002	Height adjuster board
20	GB/T 1098-2003	Key 4.8 x 6.5 x 16
21	S01-070002	Belt cover
22	SL40T-A02102	Bolt 3/8"-24UNF-2B
Side Discharge		
23	GB/T6187.1-2000	Nut M6
24	S02-040002	Side discharge cover
25	S02-040001	Grass discharge cover

Item	Part No.	Description
Transmission & Rear Wheel Assembly		
26	GB/T6177.1-2000	Nut
27	GB/T96-2002	Flat washer $\phi 17 \times \phi 28 \times 2$
28	S01-070007	Drive gear left
29	GB/T276-1994	Bearing 6001-2RS
30	S01-0701	Rear axle
31	S01-070003	Rear axle bushing
32	S01-070008	Drive gear right
33	S01-070016	Transmission clip
34	S01-070009	Transmission
35	S01-070006	Rear wheel dust-proof cover
36	S01-0704	Rear wheel
37	GB/T276-1994	Bearing
38	GB/T6177.1-2000	Nut
39	S01-070005	Rear wheel hub cap
Front Wheel Assembly		
40	S01-070014	Front axle bush
41	S01-0702	Front axle assembly
42	S01-0703	Front wheel
43	S01-070004	Front wheel hub cap
Cutting System		
44	SL46-8T02106	Blade plate
45	SL46-8T02104	Blade boss spring washer
46	SL46-8T02102	Blade bolt
47	S01-020003	Blade set (4 blades, nut, bolt & washer)
48	SL42T-02105	Blade boss
49	GB/T93-1987	Washer 10
Mulching Plug		
50	S01-040012	Mulching plug



Self Propelled SSP550

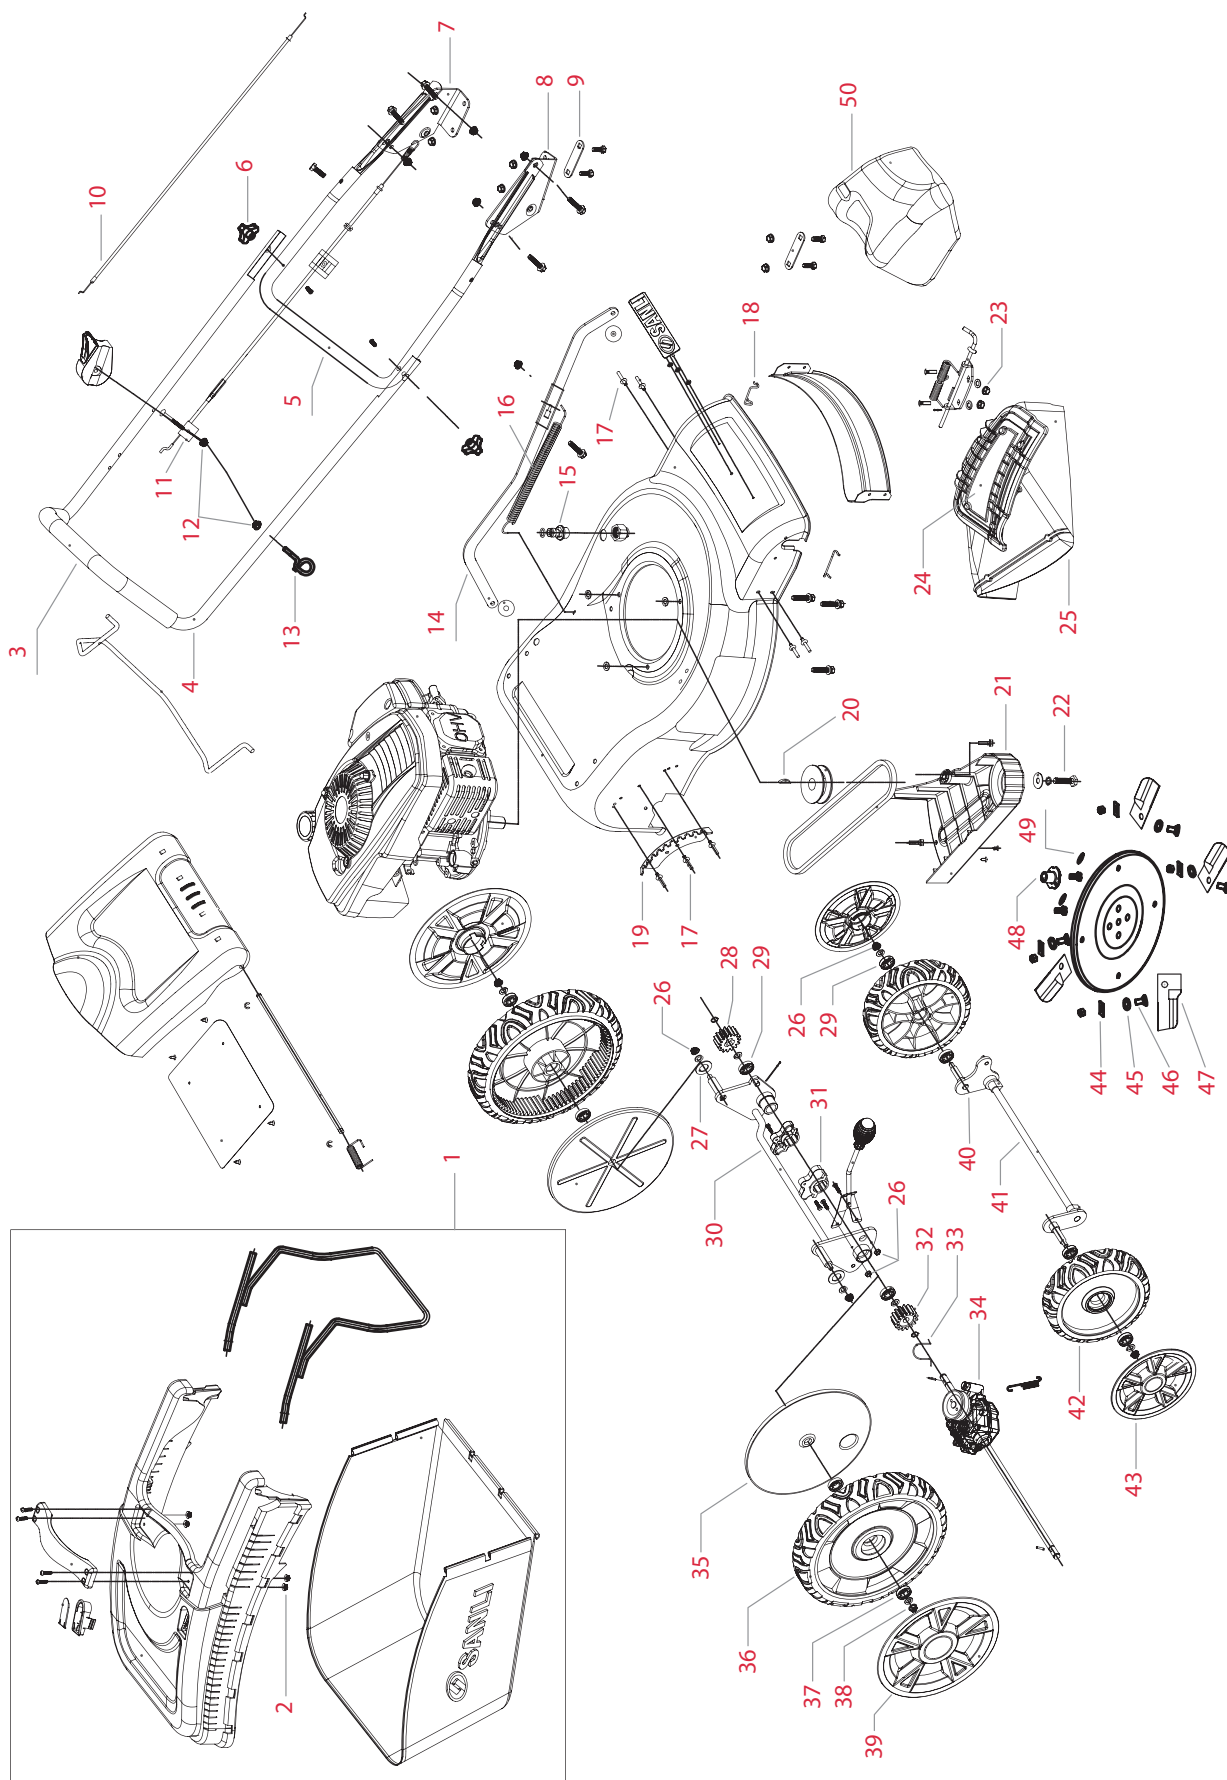


OHV350 & OHV400 Engine (new style with 3 mount starter)

Item No.	Part No.	Description
1	1P60-010005	Oil seal
2	1P60-0100014	Strainer cover
3	1P60-010006	Limited speed shaft oil seal
4	1P60-050003	Head gasket (OHV350)
	1P64-050003	Head gasket (OHV400)
5	1P60-000014	Sump Gasket
6	1P60-050013	Rocker cover gasket
7	B01001	Rocker arm locknut
8	B01002	Rocker arm nut
9	1P60-050009	Push rod guide
10	B00005	Cam follower
11	BPR5ES/N11YC	Spark plug
12	479760	Piston ring assembly (OHV350)
	479639	Piston ring assembly (OHV400)
13	1P60-030001	Piston (OHV350)
14	1P60-030005	Con rod assembly
15	1P60-130002	Dip stick
16	1P60-130003	Dip stick tube
17	B02008	Sump gasket
18	1P60-020004	Oil drainer seal
19	1P60-060003	Intake Gasket
20	1P60-060001	Gasket
21	1P60-060003	Intake Gasket
22	1P60-060000	Carburettor (OHV350)
	1P64-060000	Carburettor (OHV400)
	1P6C-000001	Carburettor 'O' Ring kit
23	1P60-060002	Space gasket
24	479826	Air filter cover & base
25	KSP-AF2	Air filter element
26	1P60-070001	Breather tube
27	B01003	Air filter lock nut
28	479679	Governor linkage spring
29	479680	Governor linkage
30	479681	Return spring
31	479685	Throttle linkage
32	480076	Stop switch
33	1P60-120002	Tank cap

Item No.	Part No.	Description
34	1P60-120005	Rubber grommet
35	479772	Fuel tank
36	1P60-120004L	Fuel hose - long
37	1P60-000010	Hose clip
38	B02022	Fuel filter
39	1P60-000010	Hose clip
40	1P60-120004S	Fuel hose - short
41	1P60-000003	Heat shield
42	1P60-080000	Muffler
43	479757	Engine cover (3 hole)
44	479773	Starter assembly (3 hole)
45	479774	Blower housing
46	479775	Starter cup
47	B02019	Ignition coil
48	B02019A	Spark plug boot

(new style with 3 mount starter) **OHV350 & OHV400 Engine**

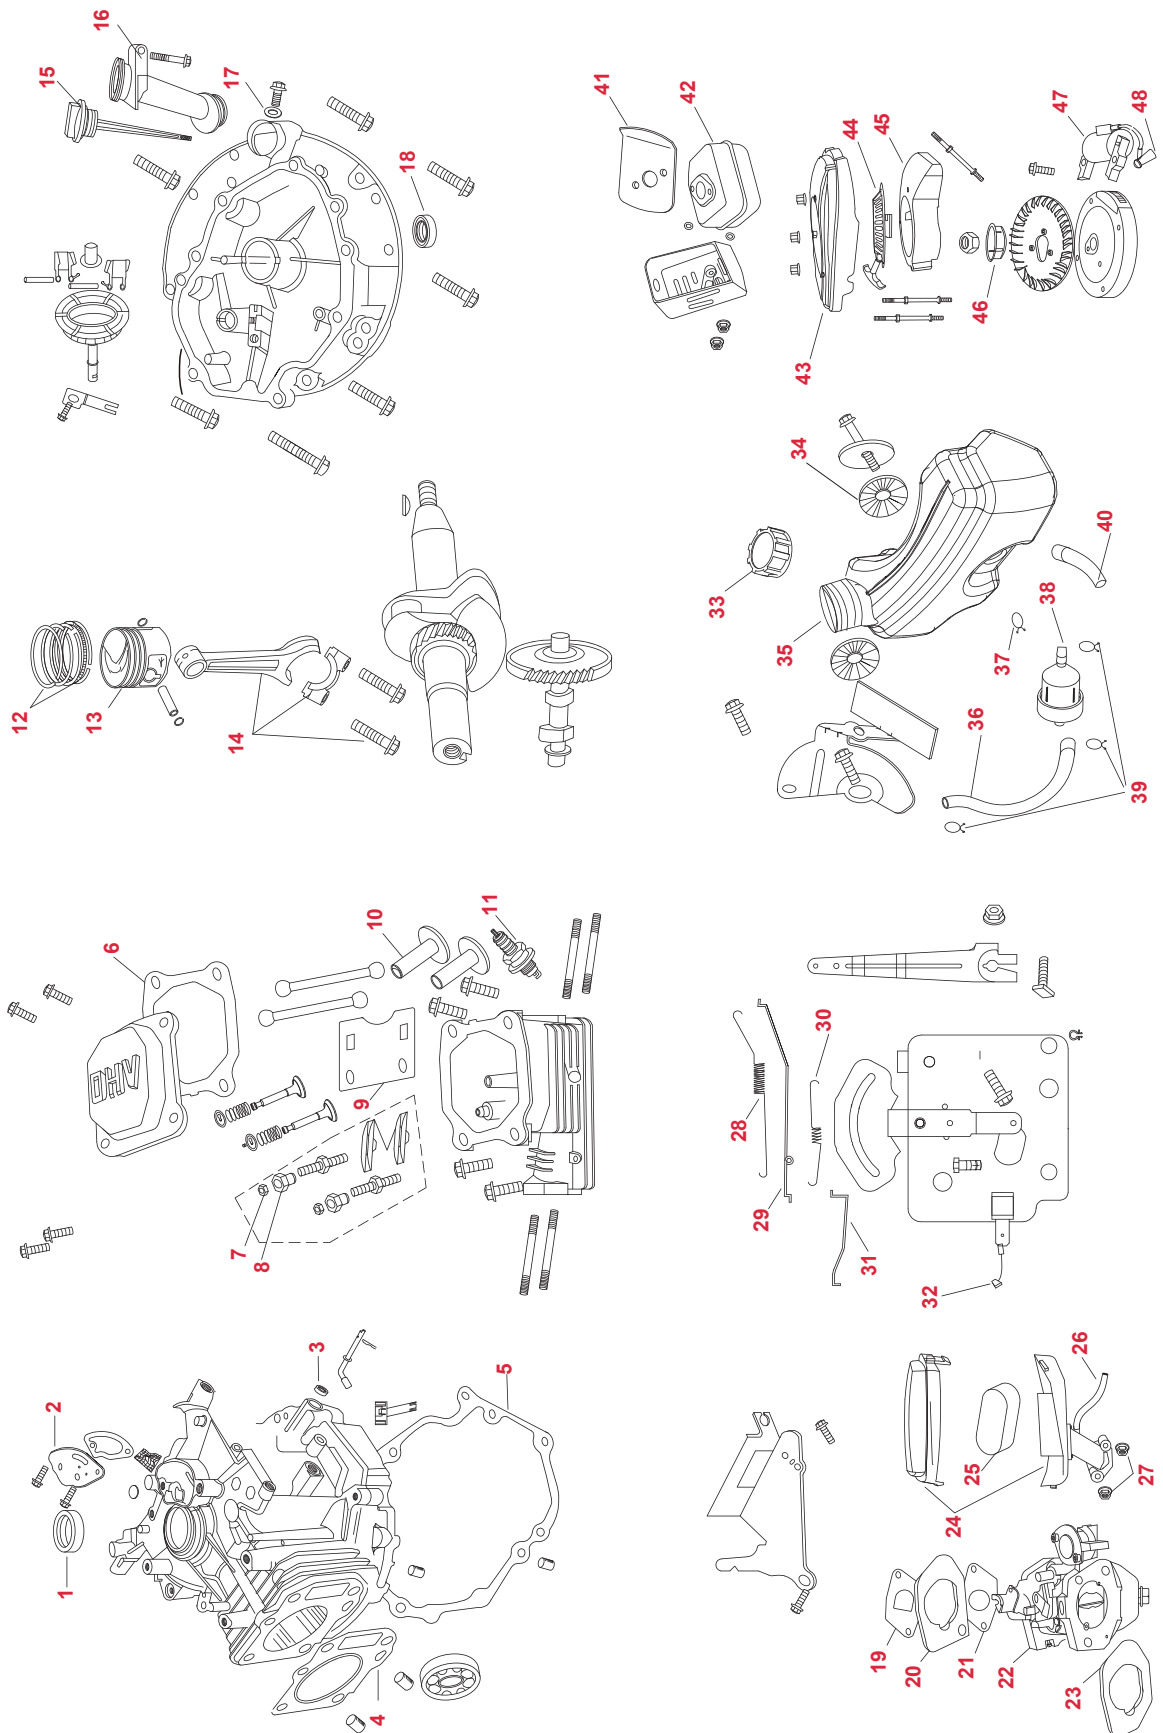


OHV350 & OHV400 Engine (old style with 4 mount starter)

Item	Part No.	Description
Throttle Linkage and Governor Plate		
1	1P60-000001	Stop switch
2	1P60-140004	Governor linkage spring
3	B02013	Governor linkage
4	1P60-000011	Return spring
5	1P60-140003	Throttle linkage
6	1P60-140000	Governor plate
7	1P60-140009	Governor return spring
8	1P60-000012	Governor spring
Cylinder Head and Valve Assembly		
9	1P60-050013	Rocker cover gasket
10	B01001	Rocker arm locknut
11	B01002	Rocker arm nut
12	1P60-050009	Push rod guide
13	B00005	Cam follower
14	BPR5ES/N11YC	Spark plug
Blower Housing, Flywheel and Ignition Coil Assembly		
15	B00021	Starter housing bolt
16	1P60-110000	Starter housing (4 hole)
17	1P60-000008	Blower housing
18	1P60-000007	Starter cup
19	B02019	Ignition coil
20	B02019A	Spark plug boot
Muffler and Heat Shield		
21	1P60-000003	Heat shield
22	1P60-080000	Muffler
23	1P60-010005	Top oil seal
24	1P60-010006	Oil seal
25	1P60-050003	Head gasket (OHV350)
	1P64-050003	Head gasket (OHV400)
26	1P60-000014	Sump gasket
27	1P64-060001	Intake gasket 'D' shape
28	1P60-060003	Intake gasket 'O' shape
29	1P60-060001	Gasket
30	1P60-060000	Carburettor (OHV350)
	1P64-060000	Carburettor (OHV400)
	1P6C-000001	Carburettor 'O' Ring kit

Item	Part No.	Description
Muffler and Heat Shield (continued)		
31	1P60-060002	Space gasket
32	B00012	Air filter cover screw
33	1P60-070000	Air filter cover & base
34	KSP-AF1	Air filter element
35	B01003	Air filter lock nut
36	1P60-070002	Clip
37	1P60-070001	Breather tube
38	B02005	Oil ring (OHV350)
	B02002	Top piston ring (OHV350)
	B02003	2nd piston ring (OHV350)
	B02004	Bush ring (OHV350)
39	1P60-030001	Piston
40	1P60-030005	Con rod
41	1P60-030006	Big end cap
42	1P60-120006	'Y' bracket
43	1P60-120002	Tank cap
44	B02015	Plate bracket
45	1P60-120001	Fuel tank
46	1P60-000010	Hose clip
47	1P60-120004L	Fuel hose long
	1P60-120004S	Fuel hose short
48	1P60-120005	Rubber grommet
49	B02022	Fuel filter
50	1P60-130002	Dip stick
51	1P60-130003	Dip stick tube
52	B02008	Sump gasket
53	1P60-020004	Sump oil seal


(old style with 4 mount starter) **OHV350 & OHV400 Engine**

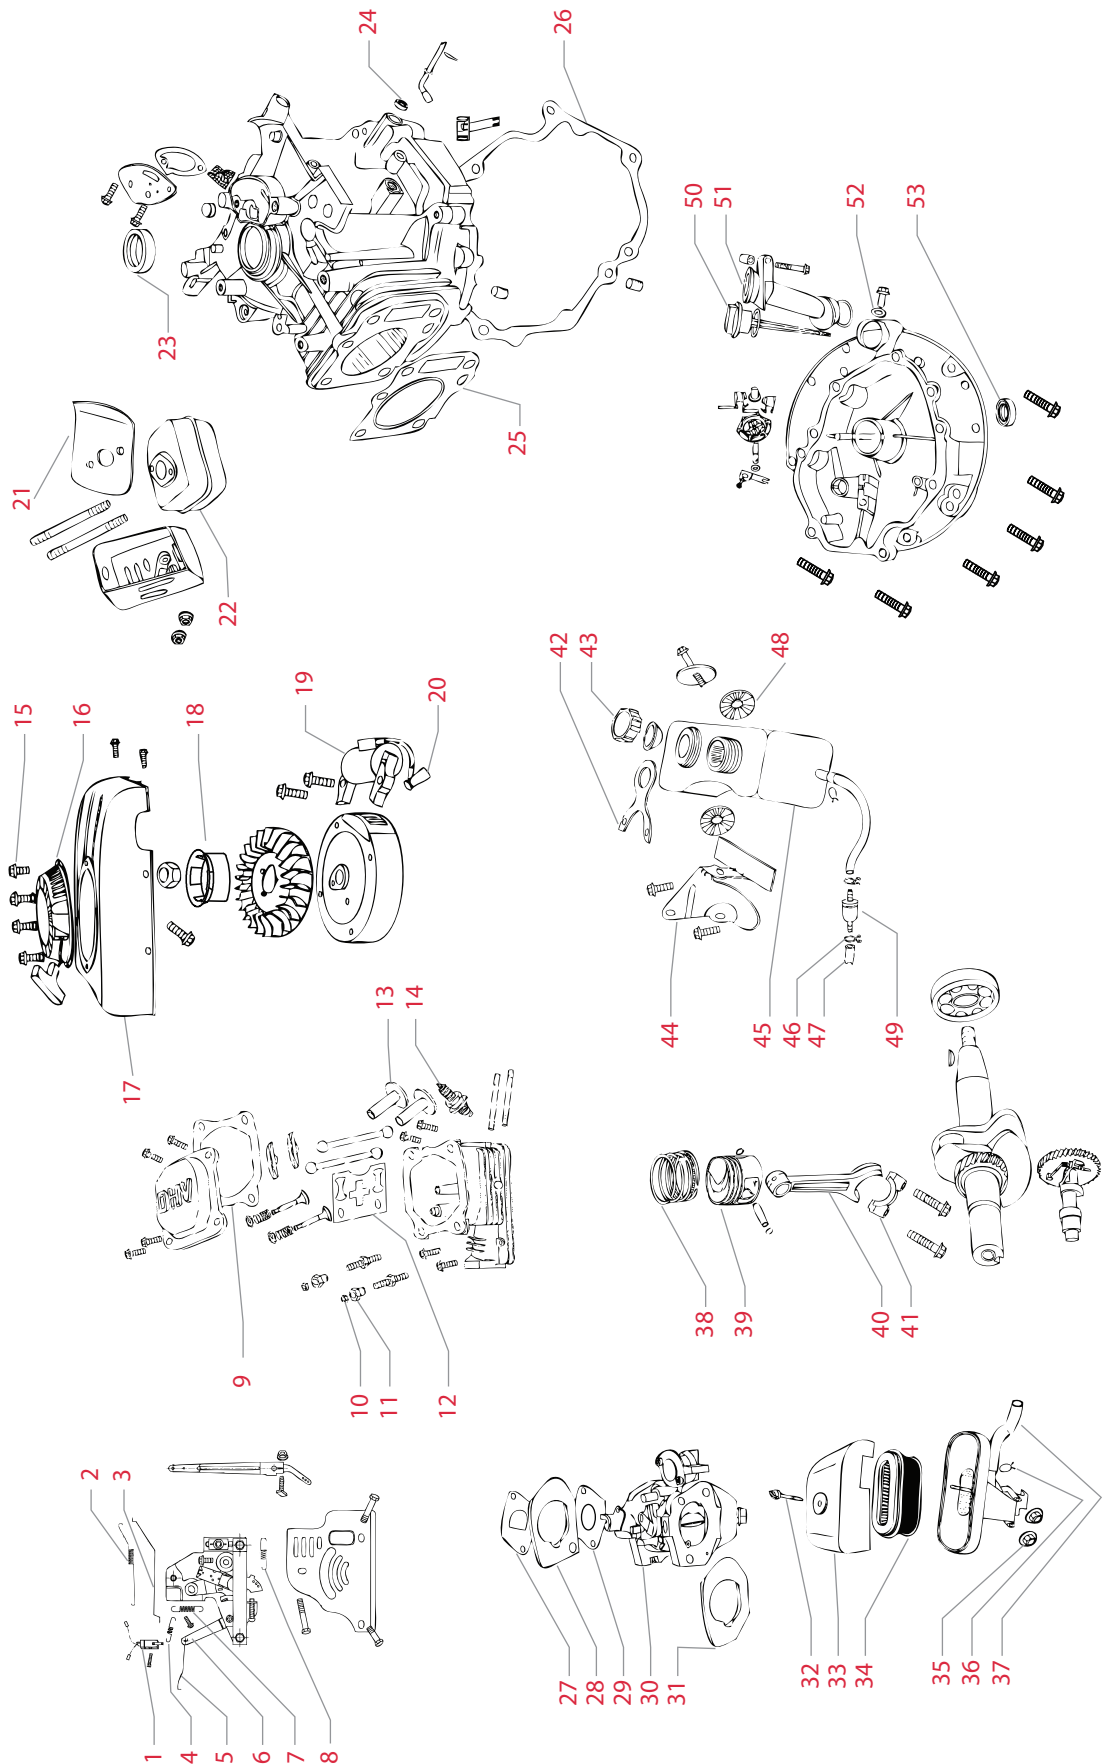

OHV550 Engine

Item	Part No.	Description
1	1P68-010015	Cylinder head gasket
2	1P68-010014	Sump gasket
3	1P68-060004	Carburettor
4	1P68-070015	Air filter cover nuts
5	1P68-060006	Air filter box (PMS550)
	SSP-478407	Air filter box (SSP550)
6	JM636	Air filter
7	1P68-040012	Sump oil seal
8	1P68-020008	Hood
9	1P60-140009	Governor return spring
10	1P68-070014	Governor cover
11	1P68-020016	Push rod
12	BPR5ES/N11YC	Spark plug
13	1P68-030001	Piston ring
14	1P68-030004	Piston
15	1P68-030003	Piston pin $\varnothing 18 \times 54$
16	1P68-030002	Piston pin clip

Item	Part No.	Description
17	1P68-030005	Connecting rod assembly
18	1P60-110000	Starter assembly (PMS550)
	1P64F-B-100002	Starter assembly (SSP550)
19	1P68-100003	Engine cover (PMS550)
	S01-06	Engine cover (SSP550)
20	1P68-100006	Starter cup
21	1P68-100008	Flywheel
22	B02019	Ignition Coil
23	B02019A	Spark plug boot
24	1P60-120006	'Y' plate
25	1P60-120002	Fuel tank cap
26	B02022	Fuel filter

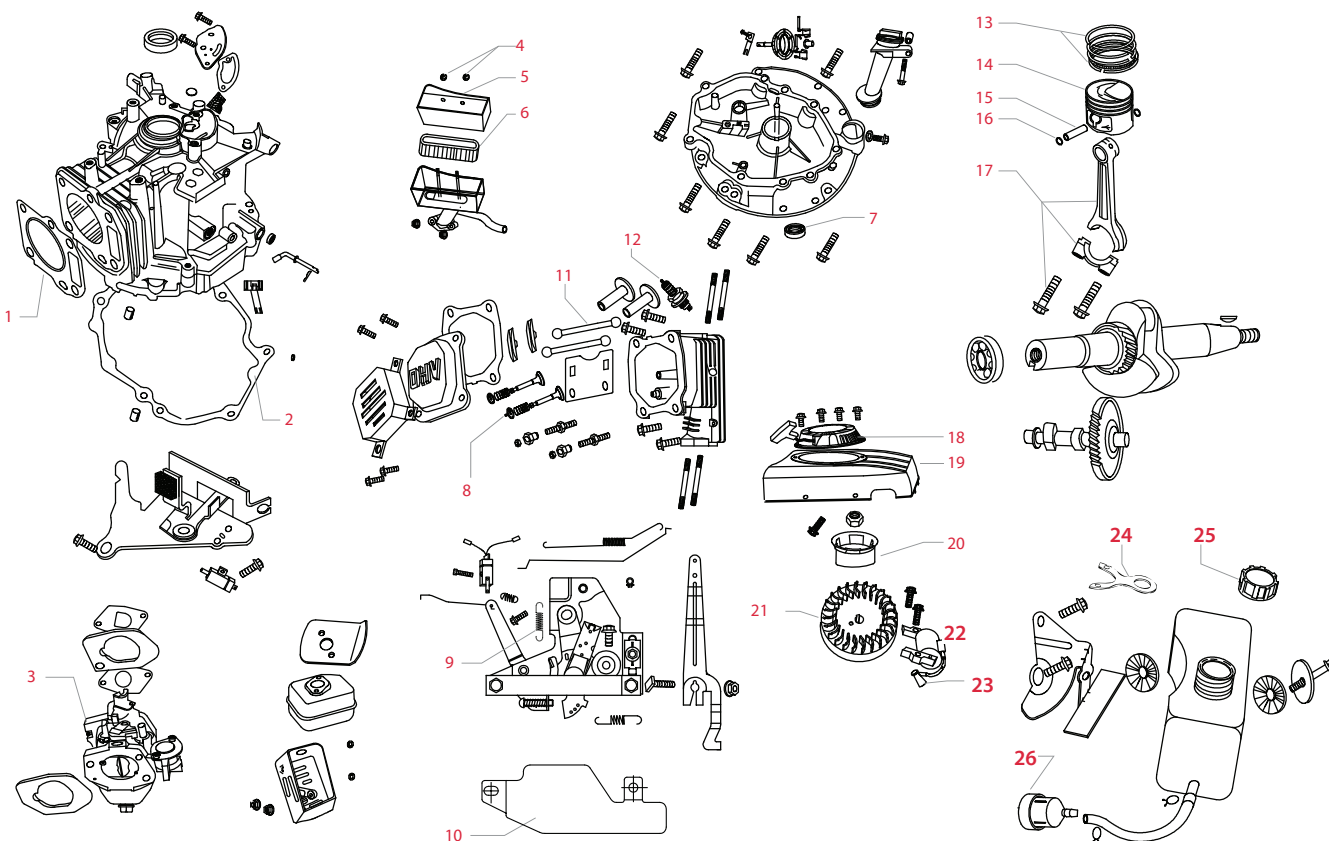


TBM/TBH1066A Body System

Item	Part No.	Description
1	TBH1066A-0128	Battery box
2	TBH1066A-0117	Control panel
3	TBH1066A-0134	Trade mark
4	TBH1066A-0132	Engine cover shock absorber
5	TBH1066A-0161	Right pedal
6	TBH1066A-0160	Left pedal
7	TBH1066A-0119	Anti-vibration rubber
8	TBH1066A-0121	Seat
9	TBH1066A-0131	Seat spring
10	TBH1066A-0125	Left front light
11	TBH1066A-0126	Right front light
12	TBH1066A-0802	Oil tank
13	TBH1066A-0139	Switch bush
14	TBH1066A-0140	Switch spring
15	TBH1066A-0138	Switch card
16	TBH 066A-0705A	Safety switch
17	GB/T6177.1-2000	Nut M8
18	TBH1066A-0711	Head light switch
	SL12.7A0809	Blade engage switch




Picture for illustration purposes only.

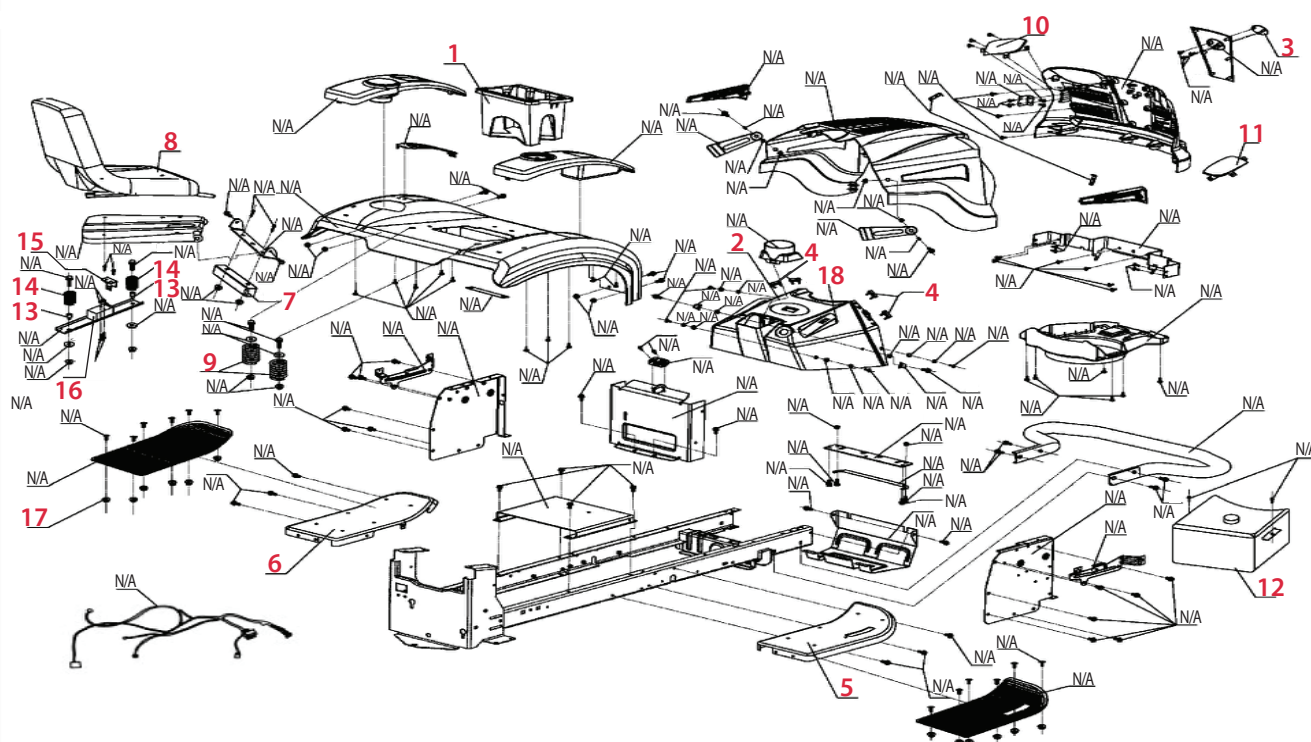

TBM/TBH1066A Height Adjuster

Item	Part No.	Description
1	TBH1066A-0312	Spring
2	TBH1066A-0315	Height adjust bolt (with hole)


Item	Part No.	Description
3	TBH1066A-0316	'8' Shape pin A
4	GB/T6177.1-2000	Nut M8

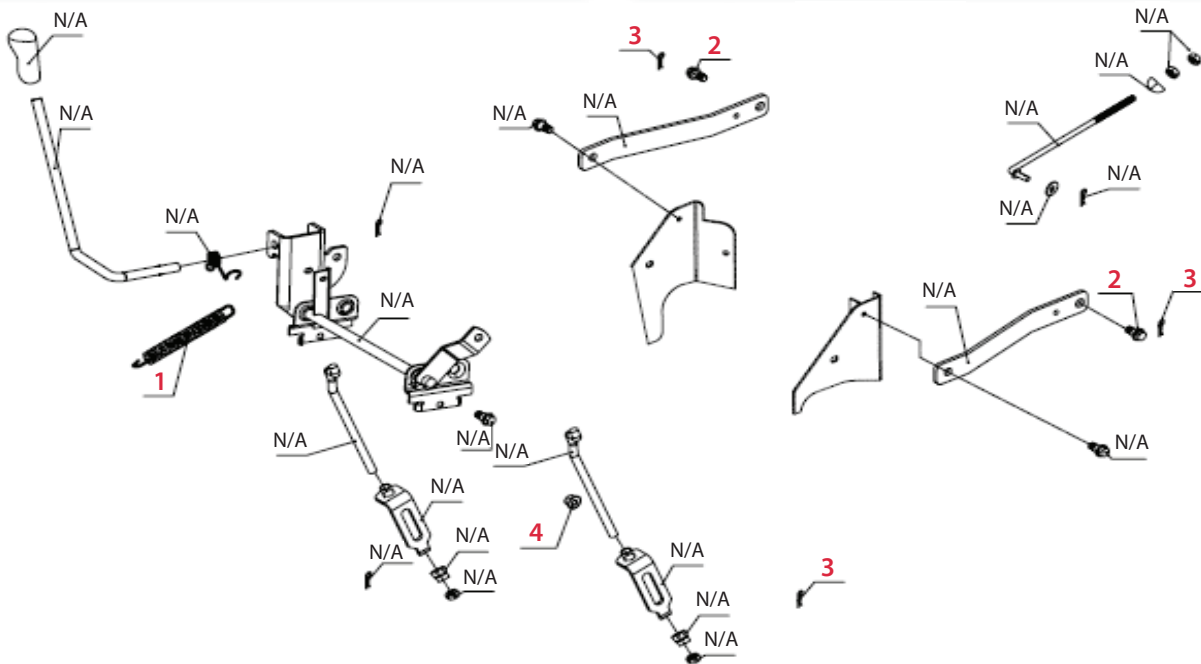

TBM/TBH1066A Steering System

Item	Part No.	Description
1	TBH1066A-0504	Steering wheel
2	TBH1066A-0515	Steering gear


Item	Part No.	Description
3	TBH1066A-050700	Direction lever
4	TBH1066A-0506	Direction lever connection bar
5	GB/T6173-2000	Nuts
6	GB/T276-1994	Front axle wheel bearings
7	GB/T6177.1-2000	Front axle wheel lock nut

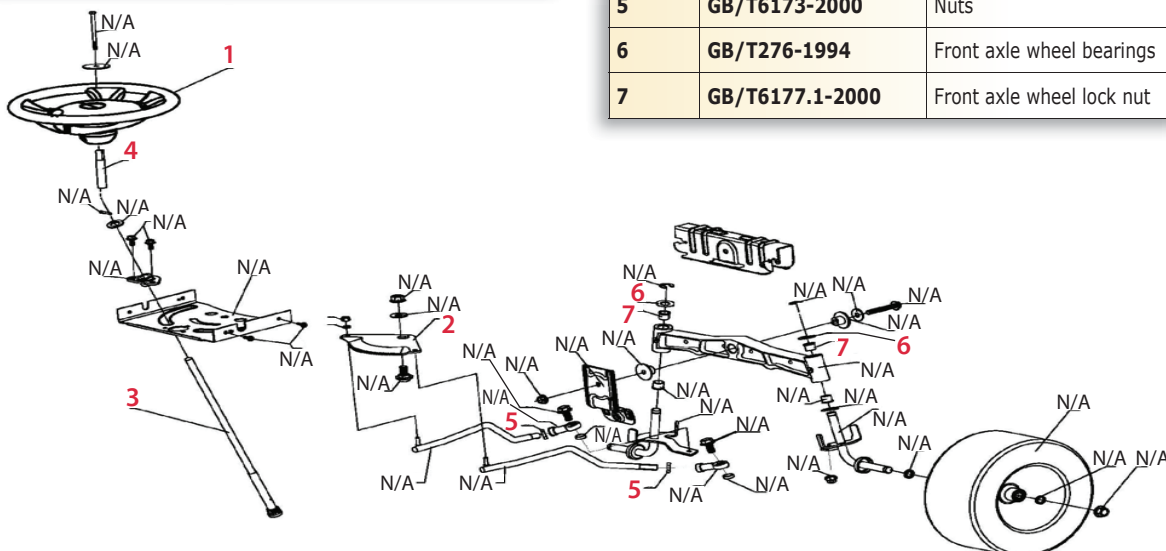

TBM/TBH1066A Cutting System

Item	Part No.	Description
1	TBH1066A-041000	Pulley
2	TBH1066A-0420	Deck wheel
3	TBH1066A-0421	Deck wheel Bolt
4	TBH1066A-0414	Belt position limited board
5	TBH1066A-0431	Spring Pin - side chute
6	TBH1066A-0430	Spring - side chute


Item	Part No.	Description
7	TBH1066A-0429	Side chute
8	B1RS45	Spindle assembly
9	TBH1066A-0405	Blade washer
10	TBH1066A-0402	Bar blade (2 for 42" cut)
11	TBH1066A-0424	Belt (A94K)
	S01-0100	Clean port hose nozzle

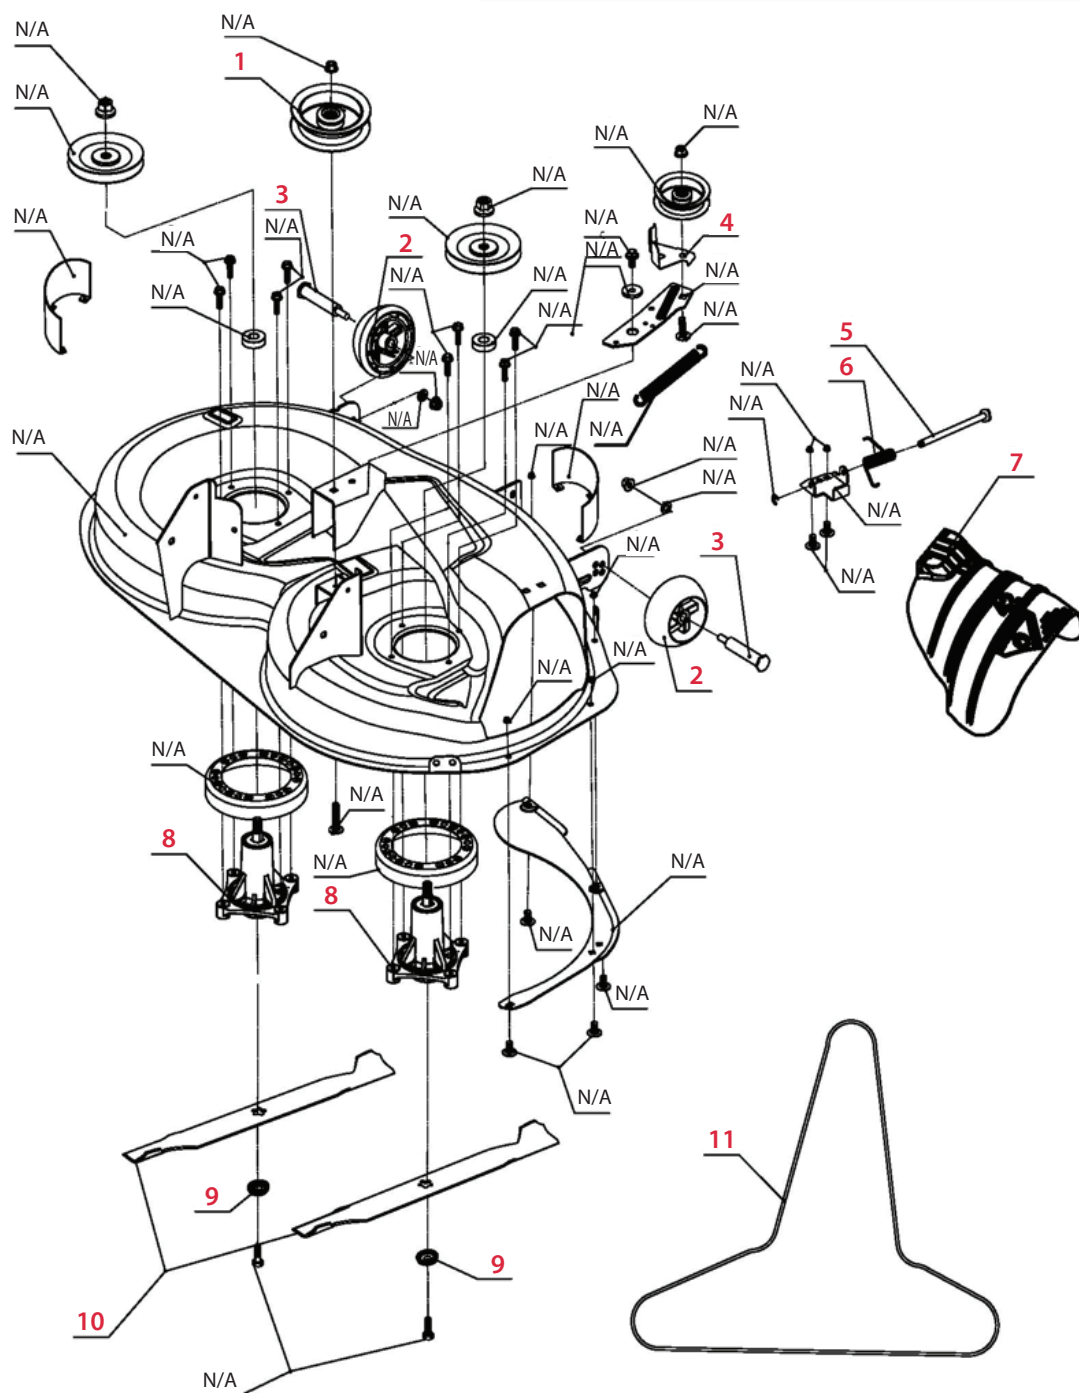

TBM1066A Mechanical Drive System

Item	Part No.	Description
1	TBH1066A-0642	Drive pulley frame B
2	TBH1066A-063600	Drive pulley
3	TBH1066A-0628	Steering pulley bush
4	TBH1066A-0624	Tension pulley bracket A
5	TBH1066A-0623	Driving belt guard board


Item	Part No.	Description
6	TBH1066A-0626	Driving belt tension spring
7	TBH1066A-062700	Driving belt steering pulley
8	TBH1066A-063100	Driving belt tension pulley A
9	TBH1066A-0692	Manual transaxle
10	TBH1066A-068800	Speed adjust double head rod combination
11	TBH1066A-0640	Drive belt

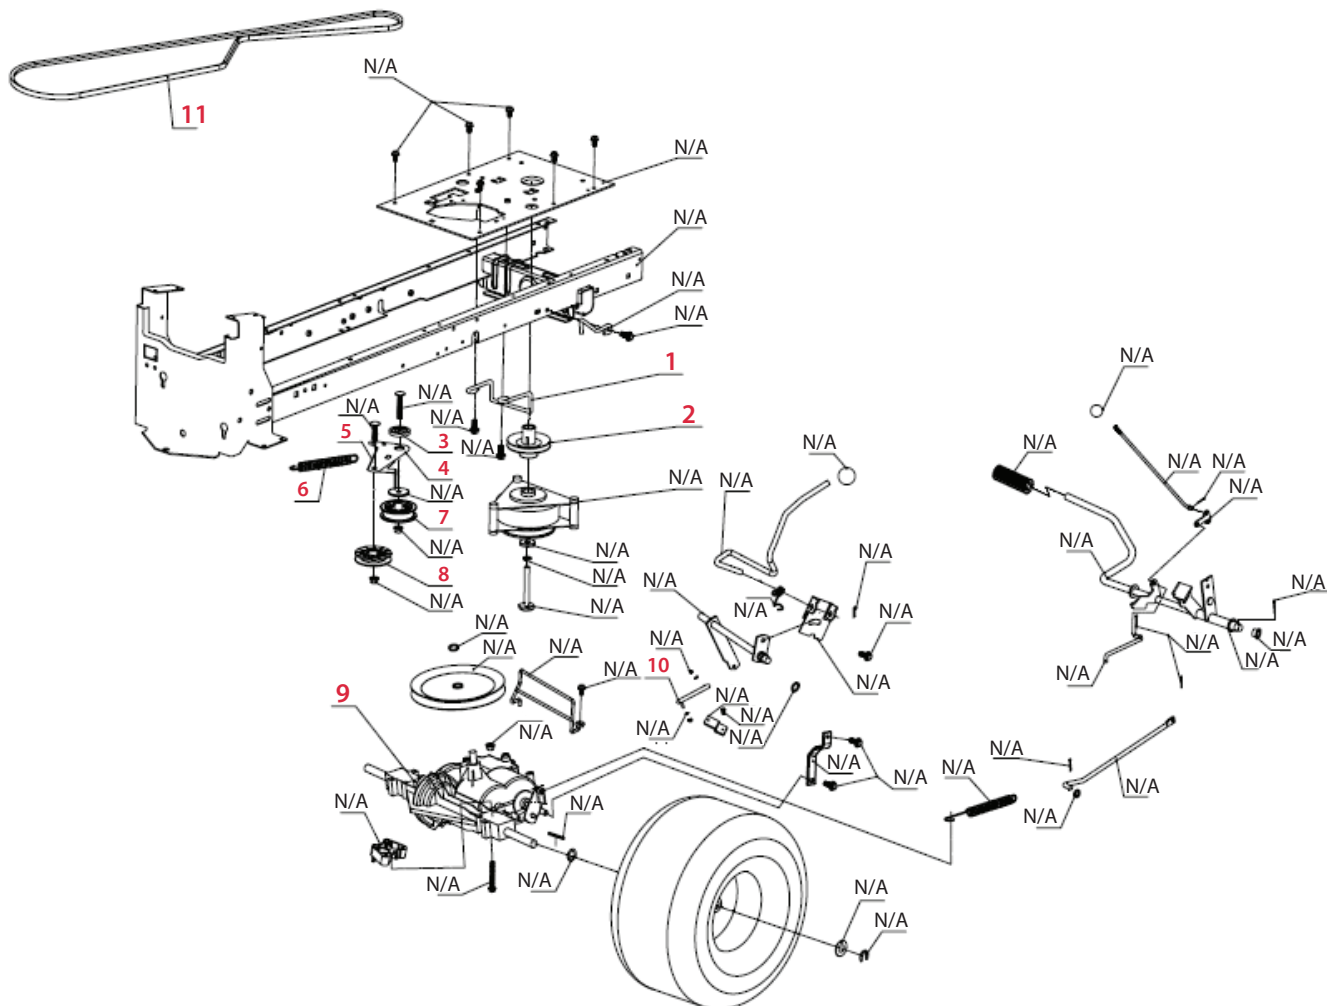

TBH1066A Hydraulic Drive System

Item	Part No.	Description
1	TBH1066A-0642	Drive pulley frame B
2	TBH1066A-063600	Drive pulley
3	TBH1066A-0628	Steering pulley bush
4	TBH1066A-0624	Tension pulley bracket A
5	TBH1066A-0623	Driving belt guard board
6	TBH1066A-0626	Driving belt tension spring

Item	Part No.	Description
7	TBH1066A-062700	Driving belt steering pulley
8	TBH1066A-063100	Driving belt tension pulley A
9	TBH1066A-0632	Driving belt tension pulley B Bracket
10	TBH1066A-0633	Spring detent ring 15 for shaft
11	TBH1066A-0640	Drive belt
12	TBH1066A-K46DD	Hydrostatic transmission
13	TBH1066A-0603	Forward pedal sheath
14	TBH1066A-0604	Backward pedal sheath

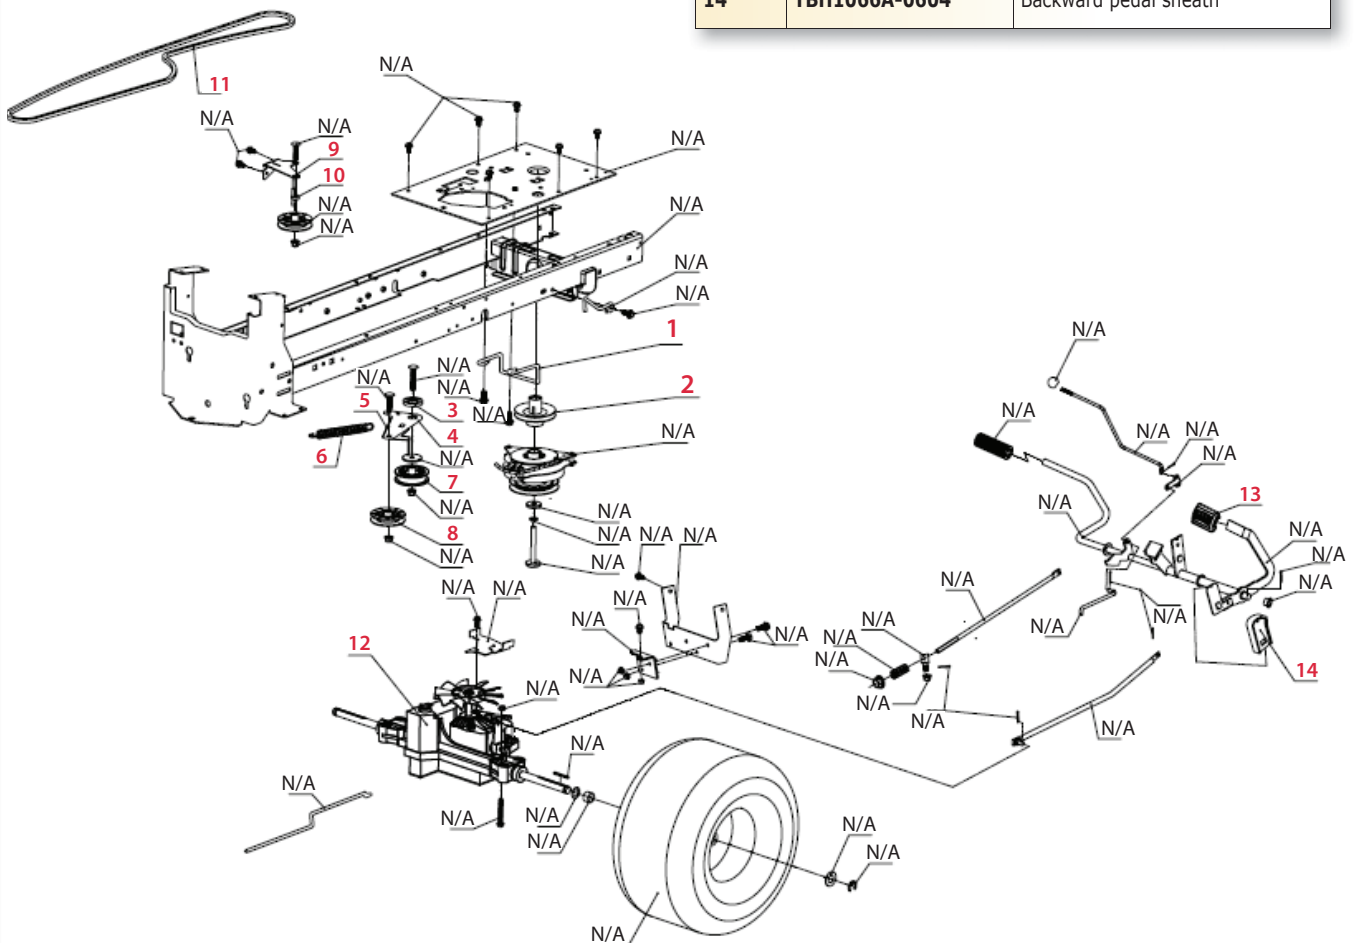


ADR1130 Body System

Item	Part No.	Description
1	ADR01-0120	Seat - complete
2	ADR01-0131	Switch mount plate
3	ADR01-0705	Seat switch
4	ADR01-0102-03	Steering shaft cover assembly
5	ADR01-0102-01	Front cowl assembly
6	ADR01-0110	Height adjustment panel
7	ADR01-0115	Seat switch spring
8	ADR01-0117	Battery hold down clamp
9	ADR01-0502	Throttle control plastic bar
10	ADR01-0501-06	Throttle
	ADR01-0501	Throttle control assembly
11	ADR01-0106	Footrest rubber LH
12	ADR01-0704	Limit switch



Picture for illustration purposes only.


Item	Part No.	Description
	ADR-0701	Wiring loom
	ADR-0707	Relay
	ADR01-0710	Wiring harness
	ADR-0706	Ignition switch with key

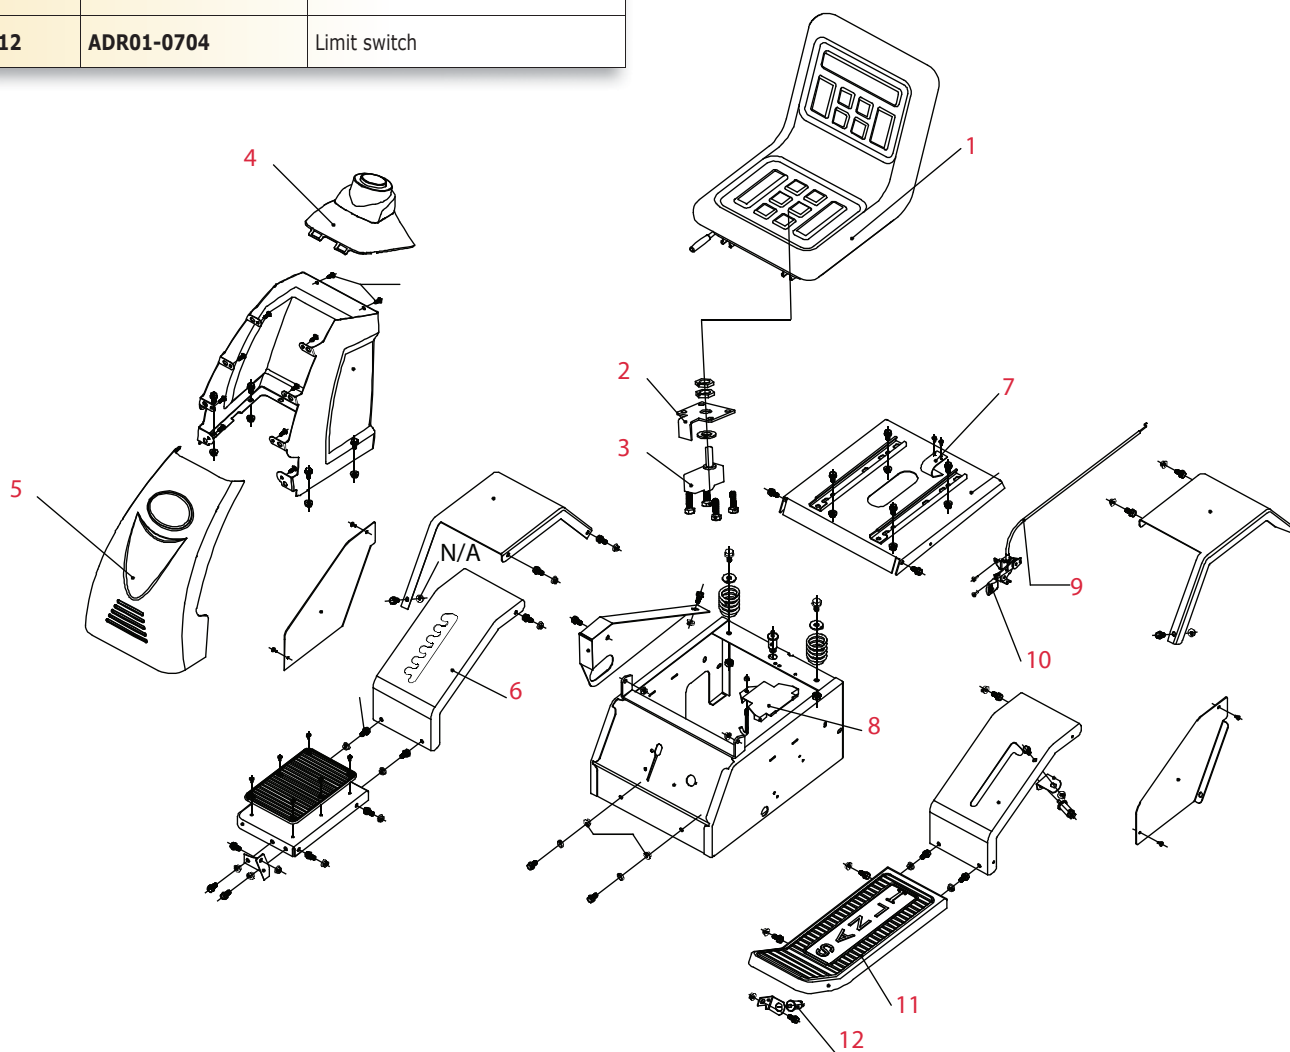

ADR1130 Body System

Item	Part No.	Description
1	ADR01-0221	Rubber handle for selector lever
2	ADR01-0310	Selector lever - right
	ADR01-0220	Selector lever - left
3	ADR01-0126	Rear safe bar assembly
4	ADR01-0303	Height selector shaft assembly
5	ADR01-0304	Deck selector arm assembly
6	ADR01-0311	Spring
7	ADR01-0305	Deck lifting rod
8	ADR01-0238	Spring
9	ADR01-0223	Deck engage selector assembly

Item	Part No.	Description
10	ADR01-0227	Spring
11	ADR01-0234	Engagement shaft assembly
12	ADR01-0228	Push rod assembly
13	ADR01-0223	Deck engage arm assembly
14	ADR01-0231	Brake rod assembly
15	ADR01-0104	Plastic end cap
16	ADR01-0103	Front bumper bar assembly

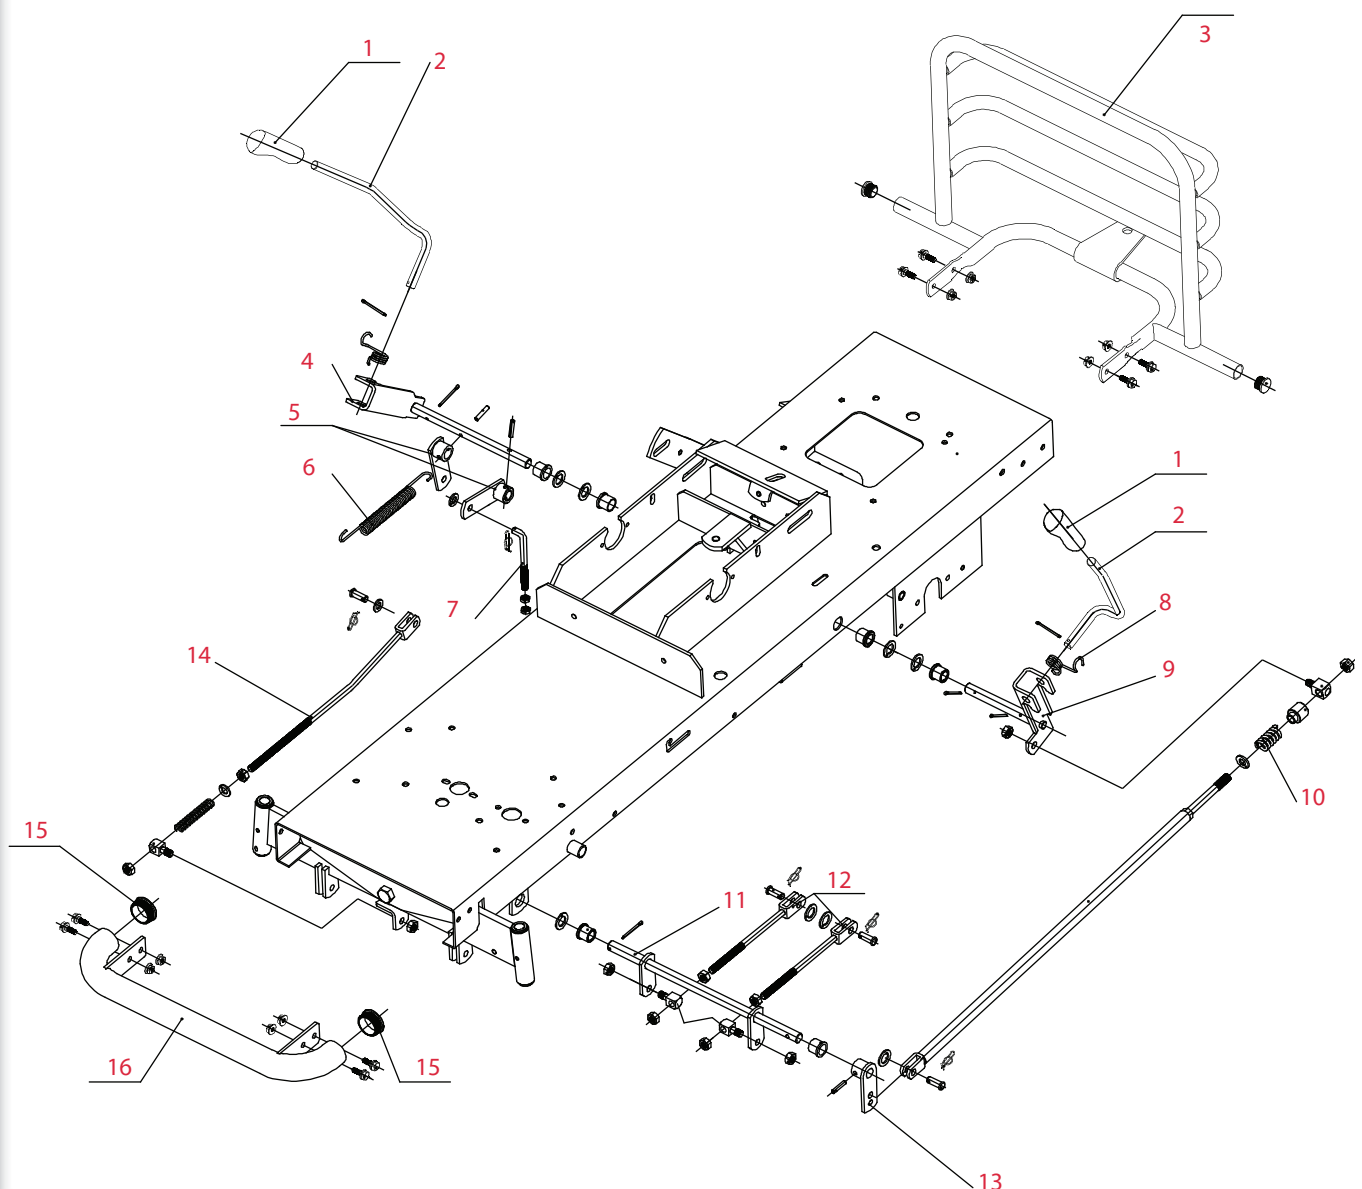


ADR1130 Cutting System & Height Adjuster

Item	Part No.	Description
1	ADR02-GB/T6176-2000	Hexagon nut M18 x 1.5.12
2	ADR02-GB/T97.1-2002	Flat washer
3	ADR02-0212	Pulley
4	ADR02-0213	V-belt - cutter belt (B69K)
5	ADR02-0216	Spindle housing
6	ADR02-0214	Deck spindle
7	ADR02-0219	Felt washer
8	ADR02-0218	Spacer boss
9	ADR02-GB/T896-1986	E retainer - circlip (8 dia.)
10	ADR02-0235-04	Rubber discharge chute
11	ADR02-0235	Deck chute assembly - upper
12	ADR02-0237	Chute spring
13	ADR02-0239	Mulching plate
14	ADR02-0240	Mulching plate bolt
15	ADR02-0235-03	Deck chute assembly - lower
16	ADR02-0201	Cutting deck
17	ADR02-0204	U-bolt cutterhead
18	ADR02-0202	Brake plate assembly
19	ADR02-GB/T6184-2000	Nut
20	ADR02-0205	Washer plate
21	ADR02-GB/T6184-2000	Nut M10
22	ADR02-0217	Back plate
23	ADR02-GB/T6184-2000	Nut M10
24	ADR02-0208	Disc boss assembly
25	ADR02-0207	Cutting disc assembly.
26	ADR02-GB/T6184-2000	Nut M10
27	ADR02-GB93-1987	Spring washer (10 dia.)

Item	Part No.	Description
28	ADR02-0209	Blade
29	ADR02-0211	Washer (10 dia.)
30	ADR02-GB/T97.1-2002	Flat washer
31	ADR02-GB/T6176-2000	Hexagon nut M18 x 1.5.12
32	ADR03-GB/T882-1986	Pin 10 x 28
33	ADR03-0241	Clip
34	ADR03-0308	Retaining washer 10.3 x 70 x 3
35	ADR03-0307	Spacer
36	ADR03-0309	Spring
37	ADR03-0306	Spacer
38	ADR03-GB/T6184-2000	Nut M10
	S01-0100	Clean port hose nozzle
	ADR04-0419	Boss


ADR1130 Cutting System & Height Adjuster

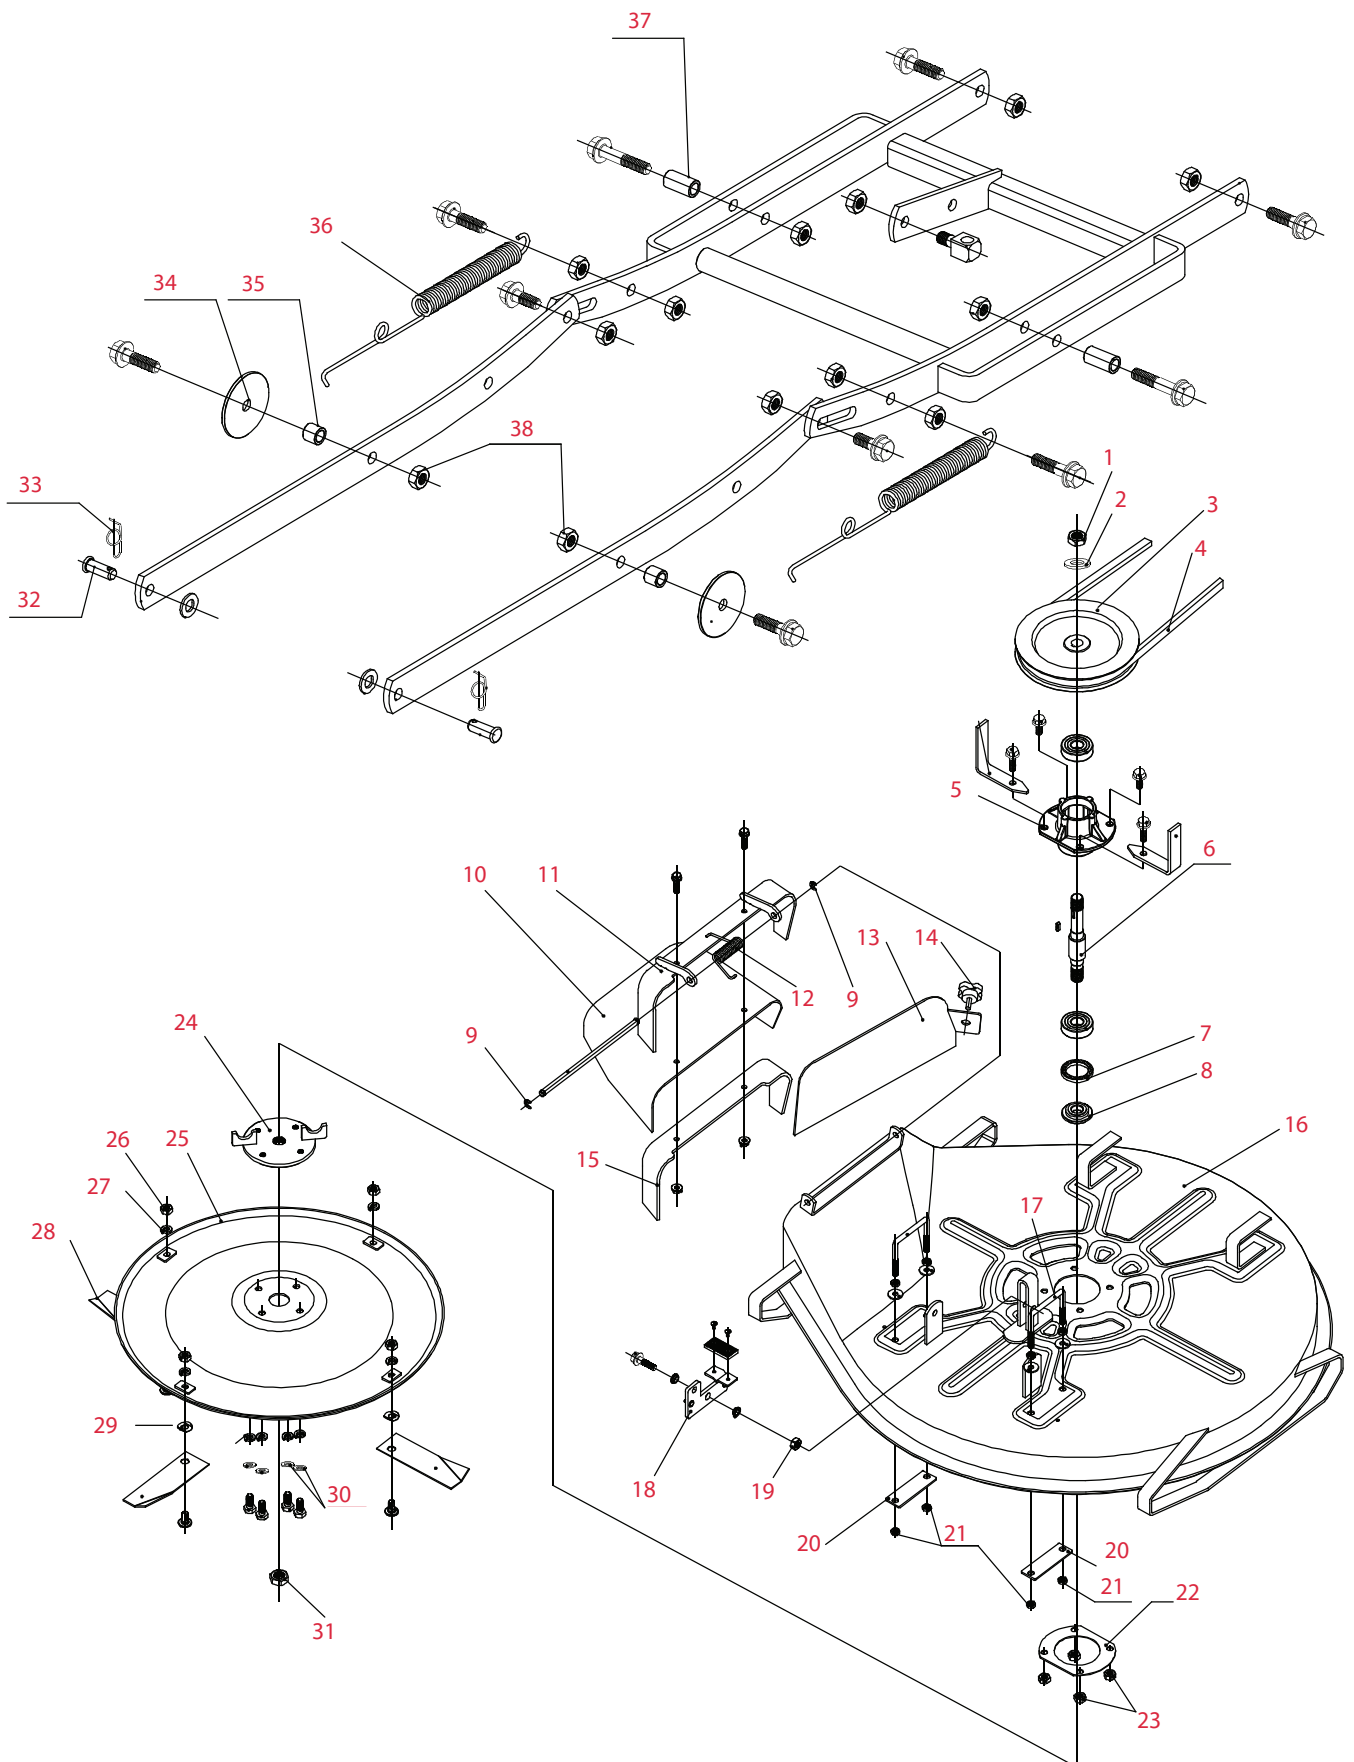

ADR1130 Steering System

Item	Part No.	Description
1	ADR04-0405-02	Steering cap
2	ADR04-GB5789-1987	Steering bolt
3	ADR04-GB/T96.1-2002	Steering bolt washer
4	ADR04-0405	Steering wheel assembly
5	ADR04-0407	Bush
6	ADR04-0406	Steering shaft assembly
7	ADR04-0408	Layshaft assembly
8	ADR04-0408-03	Layshaft spacer
9	ADR04-GB/T6184-2000	Nut M10
10	ADR04-0411	Steering block assembly
11	ADR04-0403-01	Left tie rod bearing M10 x 1.25
12	ADR04-0404	Tie rod bush
13	ADR04-0403-02	Right tie rod bearing M10 x 1.25
14	ADR04-GB/T6173-2000	Nut M10 x 1.25
15	ADR04-0401	Tie rod - rear
16	ADR04-0601	Front beam assembly includes sub axle


Item	Part No.	Description
17	ADR04-0605	Circlip
18	ADR04-0402	Tie rod - front
19	ADR04-0606-02	Wheel hub
20	ADR04-0606-04	Bush for front wheel

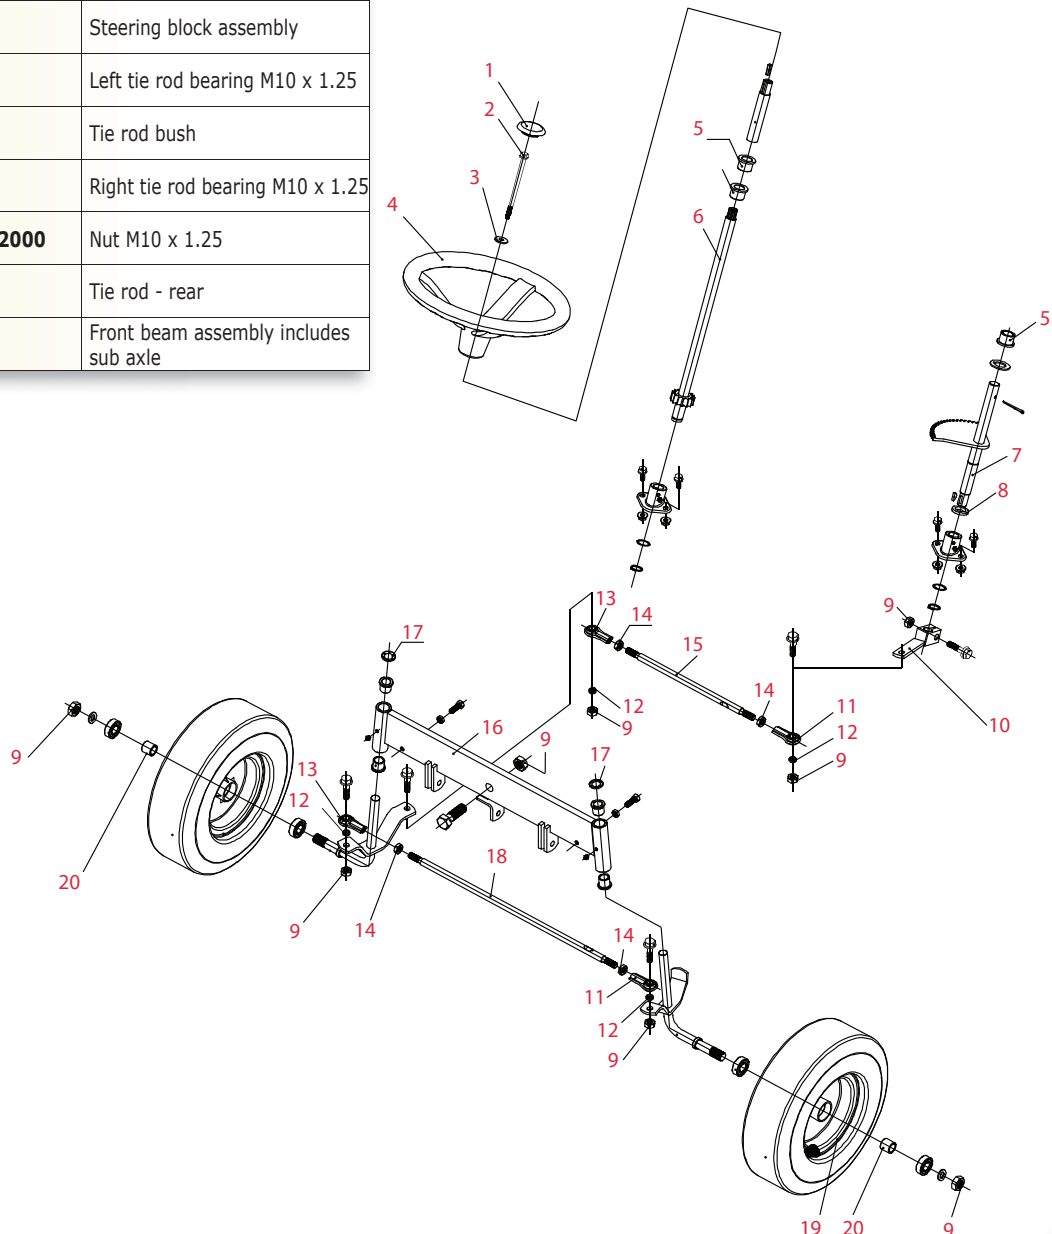

ADR1130 Operating System

Item	Part No.	Description
1	ADR05-0522	Pivot bolt
2	ADR05-0523	Fibre washer
3	ADR05-0521	Engagement lever assembly
4	ADR05-0524	Engagement pivot assembly
5	ADR05-0526	Grease nipple
6	ADR05-0527	Brake caliper assembly
7	ADR05-0527-01	Brake pad
8	ADR05-0516	Neutral rod

Item	Part No.	Description
9	ADR05-0506	Brake rod
10	ADR05-0509	Park brake rod
11	ADR05-0512	Drive selector pedal rubber
12	ADR05-0515	Swivel block
13	ADR05-0517	Spring
14	ADR05-0503	Brake pedal assembly
15	ADR05-0505	Brake pedal rubber

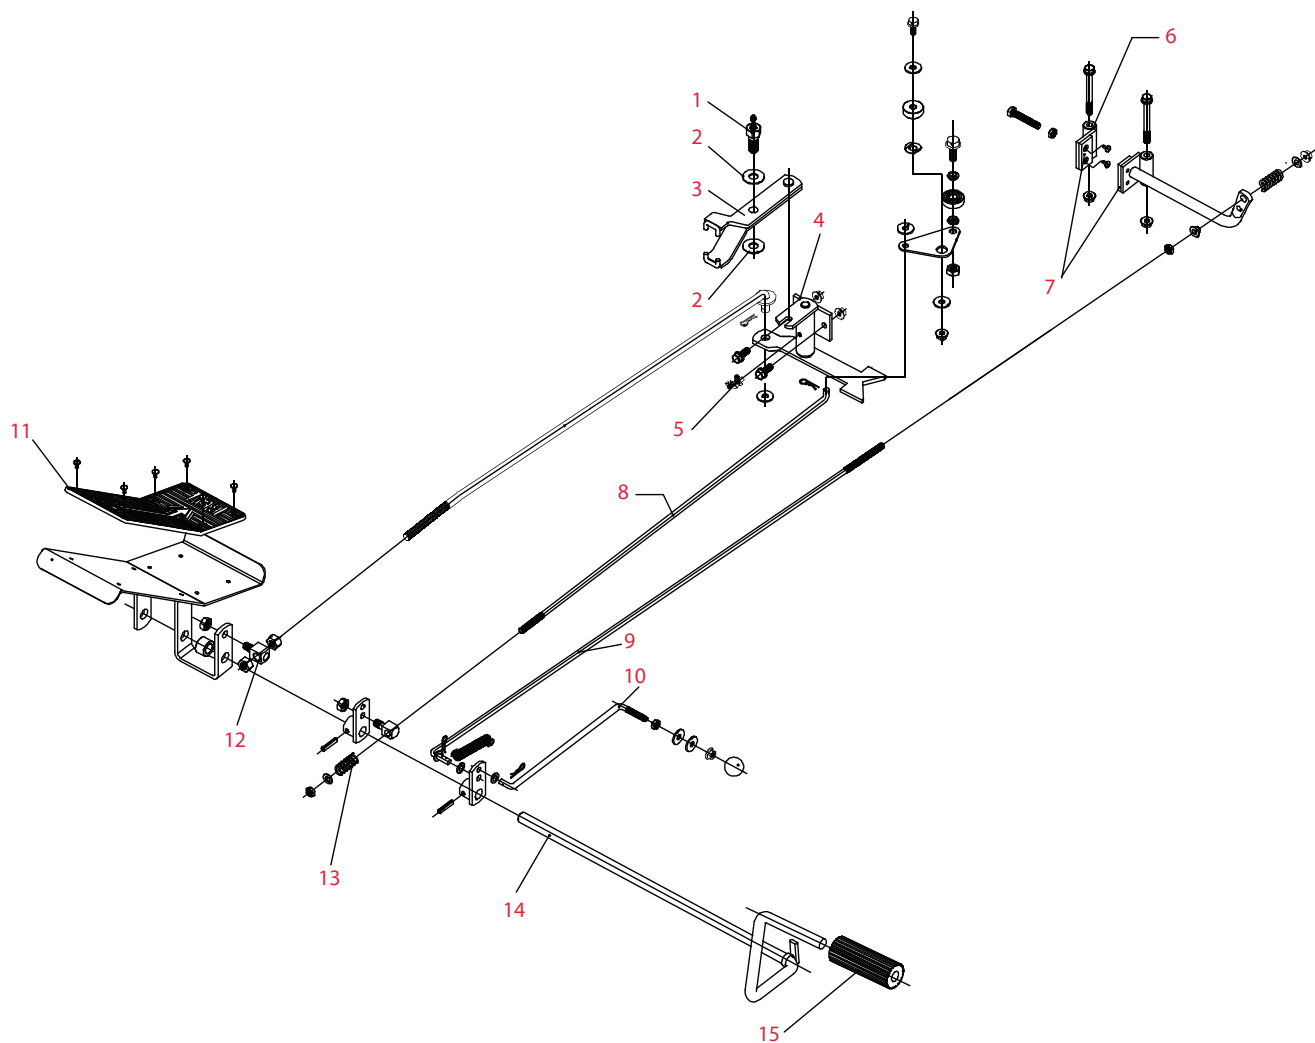


ADR1130 Drive System

Item	Part No.	Description
1	ADR06-0607-02	Rear rim assembly (8 x 5.375)
2	ADR06-0608	Rear wheel hub
3	ADR06-0640	Chain-secondary (08B-1x91)
4	ADR06-0610-02	Rear axle drive sprocket
5	ADR06-0630	Sprocket
6	ADR06-GB/T276-1994	Bearing (6201-2Z)
7	ADR06-0642	Nut with adjusting rod
8	ADR06-GB/T7810-1995	Bearing (U EPFL205)
9	ADR06-0614	Disk brake assembly
10	ADR06-0638	Belt guard assembly
11	ADR06-0637	Engine pulley
12	ADR06-GB/T5789	Bolt
13	ADR06-0606-03	Valve stem
14	ADR06-0639	Chain-primary (085-1 x 54)
15	ADR06-0625	Idler sprocket assembly
16	ADR06-0633	Return drive pulley
17	ADR06-0623	Drive sprocket
18	ADR06-GB/T7810-1995	Bearing (U EPFL203)
19	ADR06-GB/T893.1-1986	Circlip
20	ADR06-GB/T276-1994	Bearing (6304)
21	ADR06-0641	Belt (A102K)
22	ADR06-0617	Drive pulley
23	ADR06-0619-01	Spacer (203 x 4 x 1 dia)
24	ADR06-0409	Woodruff key 4 x 6.5 x 16
25	ADR06-0616	Drive shaft
26	ADR06-0619	Spring

Item	Part No.	Description
27	ADR06-0618	Friction disc ass
28	ADR06-0621	Bearing clamp
29	ADR06-GB/T276-1994	Bearing (6206-2RZ)
30	ADR06-0620	Wire clip
	ADR06-0649	Pulley adjuster plate
	ADR06-0650	Pulley fixed plate

ADR1130 Drive System

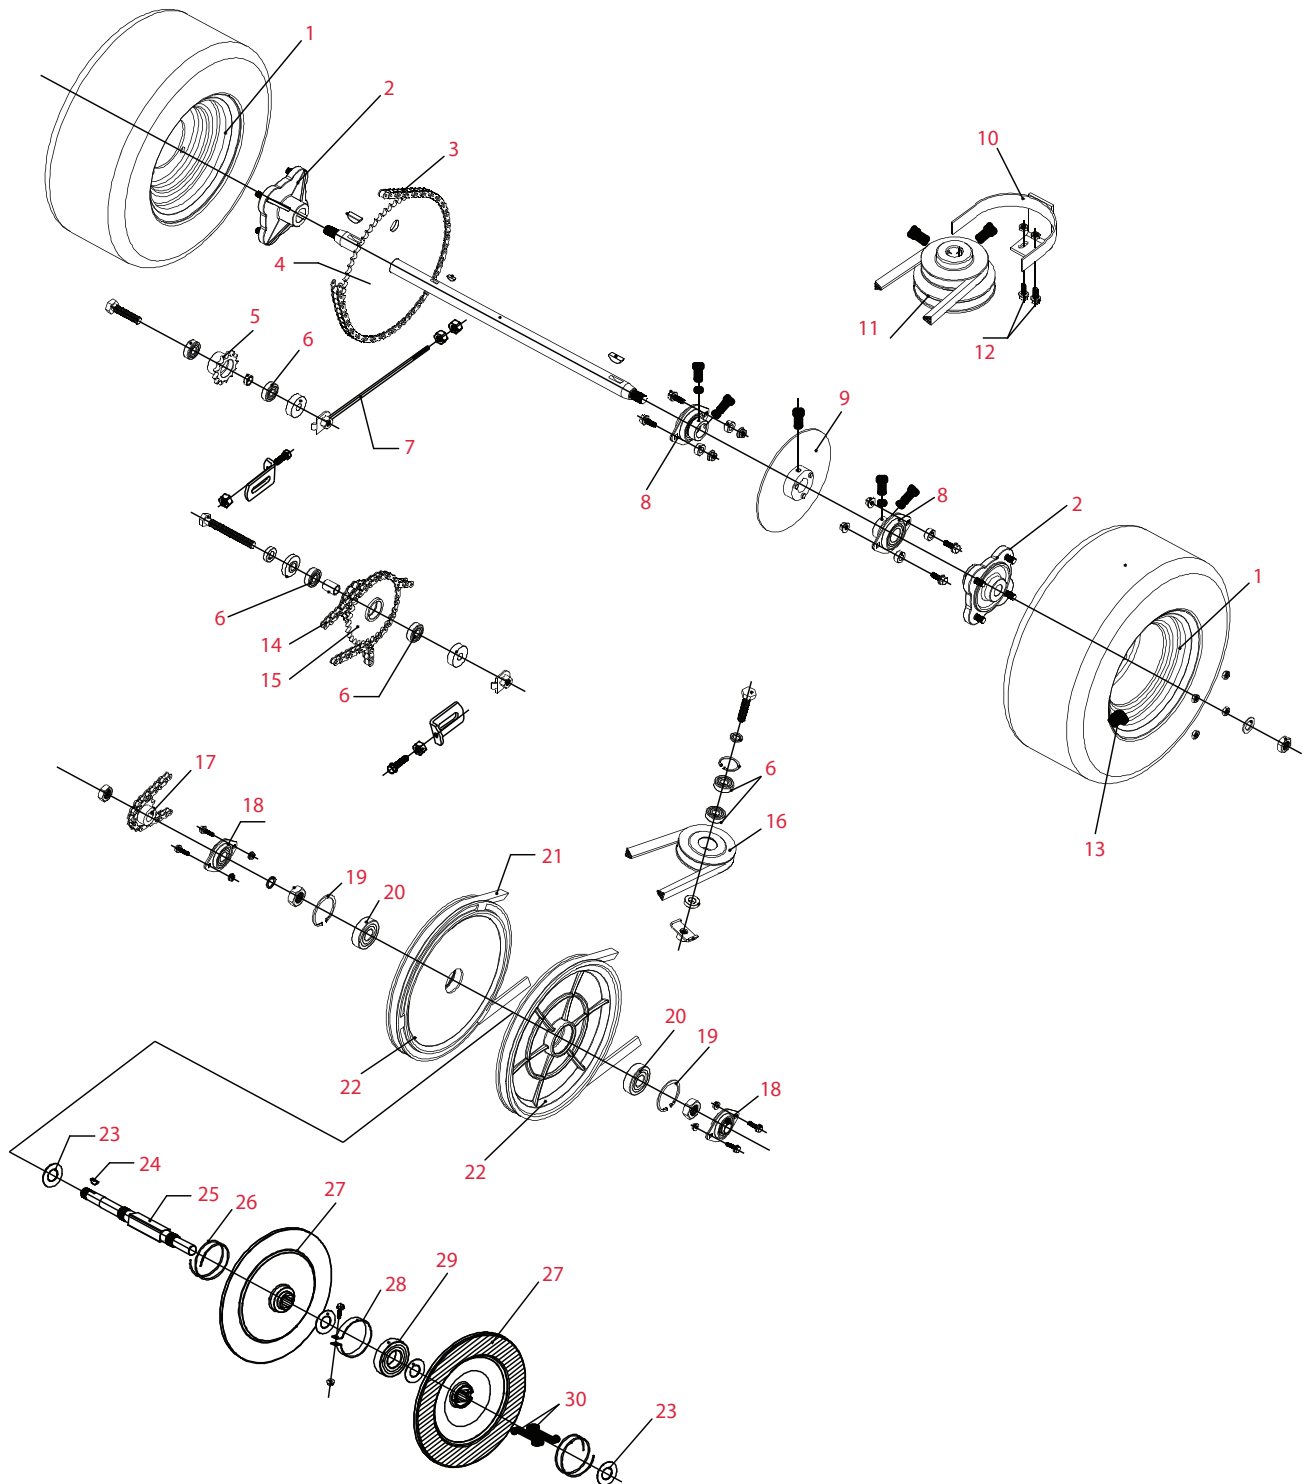


Bent Shaft Brushcutter BCB262/BSB265 (split shaft)

Item	Part No.	Description
1	BCB2-C	Trimmer head
2	BCB2-6	Locking nut
3	BC2-24	Handle top
4	BCB2-25	Handle plate
5	BC2-11	Inner hexagon screw assembly
6	BC2-61	Inner hexagon screw assembly
7	BC2-57	Upper fixed plate
8	BC2-36	Clutch drum case
9	BC2-35	Circlip
10	BC2-33	Circlip
11	BC2-56	Lower fixed plate
12	BC2-60	Inner hexagon screw assembly
13	BC2-L	Lever assembly complete
14	BC2-49	Throttle lever
15	BC2-003	Spacer sleeve
16	BC2-036	Drive shaft
17	BC2-072	Aluminium pipe 1

Item	Part No.	Description
18	BC2-008	Oil bearing rubber sleeve assembly
19	BC2-969	Connector
20	BC2-016	Coupling
21	BC2-005	Bolt
22	BC2-047	Washer A
23	BC2-132	Screw assembly
24	BC2-004	Inner hexagon screw assembly
25	BC2-089	Screw
26	BCB2-803	Soft shaft
27	BCB2-009	Supporter
28	BCB2-309	Bent aluminium pipe
29	BCB2-044	Connector
30	BCB2-040	Clutch
31	BCB2-057	GB/T276 6202-2RS/P5
32	BCB2-104	Rubber sleeve

**Refer to page 888 & 889 for engine breakdown*

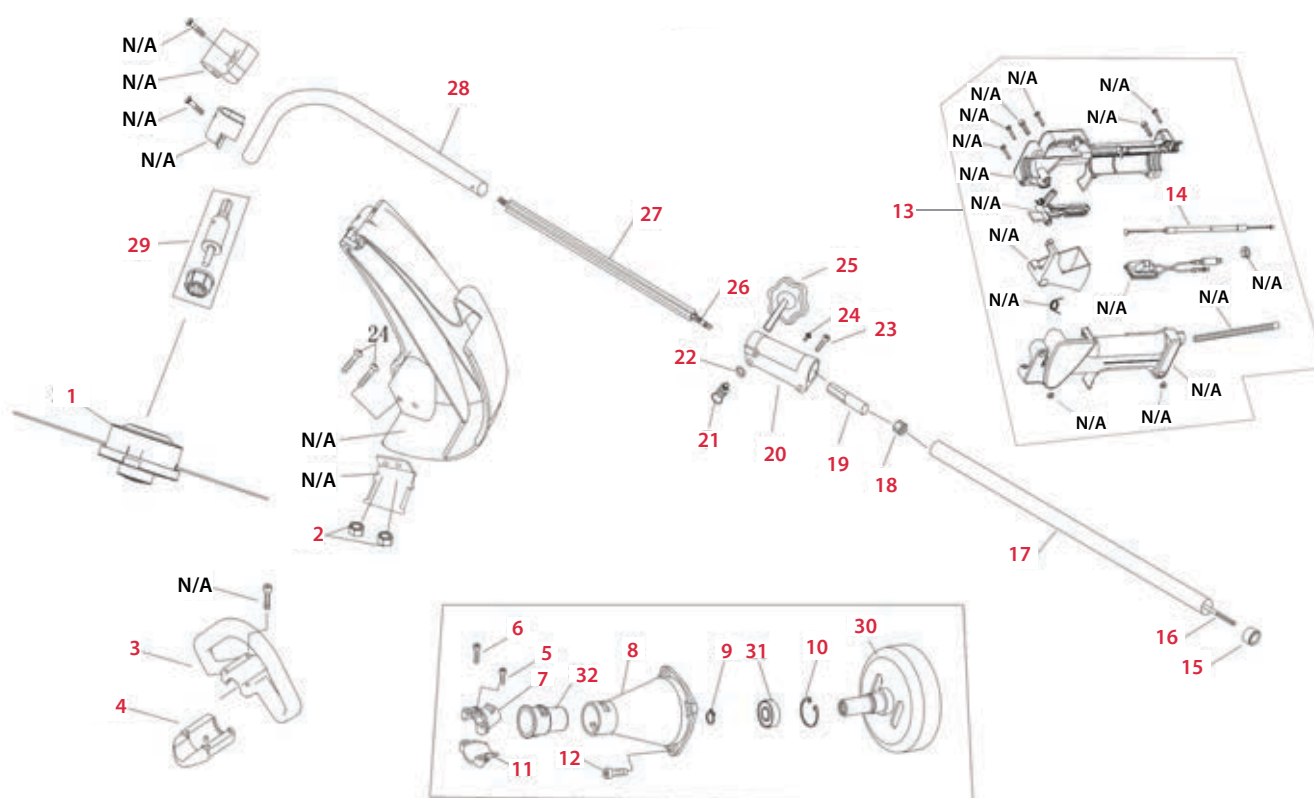


(split shaft) Straight Shaft Brushcutter BCS262/BCS265

Item	Part No.	Description
1	BCS2-1	Gearbox assembly
2	BCS2-17	Blade holder (A)
3	BCS2-18	Blade holder (B)
4	BCS2-19	Washer
5	BCS2-21	Split pin 2 x 16
6	BCS2-23	Clutch drum component
7	BCS2-24	Clutch
8	BC2-33	Circlip
9	BC2-35	Circlet
10	BC2-36	Terminal pad (clutch drum case)
11	BC2-60	Screw assembly M6x20
12	BC2-55	Rubber protector
13	BC2-11	Inner hexagon screw assembly
14	BC2-61	Inner hexagon screw assembly
15	BC2-57	Upper fixed plate
16	BC2-56	Lower fixed plate
17	BCS2-38	Holder assembly
18	BC2-036	Drive shaft
19	BC2-072	Aluminium pipe 1

Item	Part No.	Description
20	BC2-008	Oil bearing sleeve assembly
21	BC2-003	Spacer sleeve
22	BCS2-48	Handle assembly
23	BC2-24	Handle
24	BCS2-51	Holder protector
25	BCS2-22	Blade assembly
26	BCS2-85	Brushcutter head
27	BC2-L	Lever assembly complete
28	BCS2-034	Drive shaft 2
29	BCS2-233	Aluminium pipe 2
30	BC2-969	Connector
31	BC2-016	Coupling
32	BC2-047	Washer A
33	BC2-005	Bolt
34	BC2-089	Screw
35	BC2-004	Inner hexagon screw assembly
36	BC2-132	Screw assembly
37	BCS2-240	Complete guard

**Refer to page 888 & 889 for engine breakdown*

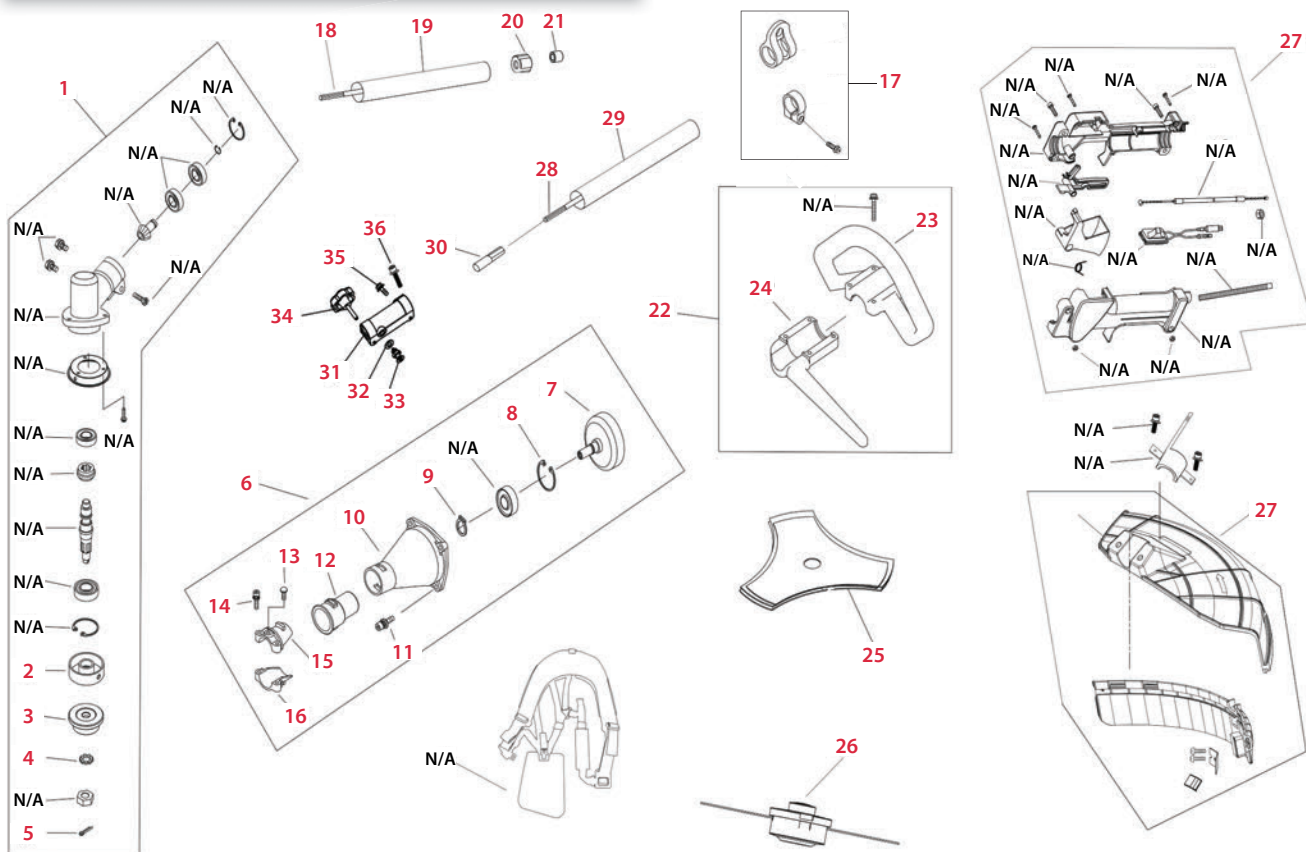


Bent Shaft Brushcutter BCB260 (non split shaft)

Item	Part No.	Description
Safety Guard Components		
S	BCB2-S	Safety guard assembly
1	BCB2-17	Safety guard
2	BCB2-18	Safety guard blade
Cutting head components		
C	BCB2-C	Brushcutter head
	BCB2-CS	Brushcutter head - small
Gear Head Assembly		
G	BCB2-G	Gear head assembly
3	BCB2-8	Gear head drive
4	BCB2-10	Sleeve
5	BCB2-13	Gear head housing
6	BCB2-14	Holder / gear head drive
Holder Components		
7	BCB2-23	Handle assembly
8	BCB2-22	Handle tube sleeve
9	BCB2-25	Handle lower
Drive Shaft		
10	BCB2-3	Outer tube
11	BCB2-1	Flexible inner drive shaft
12	BCB2-2	Drive shaft sleeve

Item	Part No.	Description
Clutch Compartment		
13	BCB2-31	Clutch assembly
14	BC2-62	Washer 5
15	BC2-59	Washer 6
16	BC2-58	Washer 6
17	BC2-55	Rubber cover
18	BC2-33	Circlip 35
19	BCB2-32	Clutch drum
Lever Assembly		
20	BC2-L	Lever assembly
21	BC2-7	Nut M5
22	BC2-39	Rubber handle cover
23	BC2-41	Clamp
24	BC2-45	Spring
25	BC2-46	Spring
26	BC2-47	Safety lever
27	BC2-48	Throttle trigger
28	BC2-49	Throttle cable
29	BC2-38	Clamp
30	BC2-53	Stop switch

*Refer to page 888 & 889 for engine breakdown

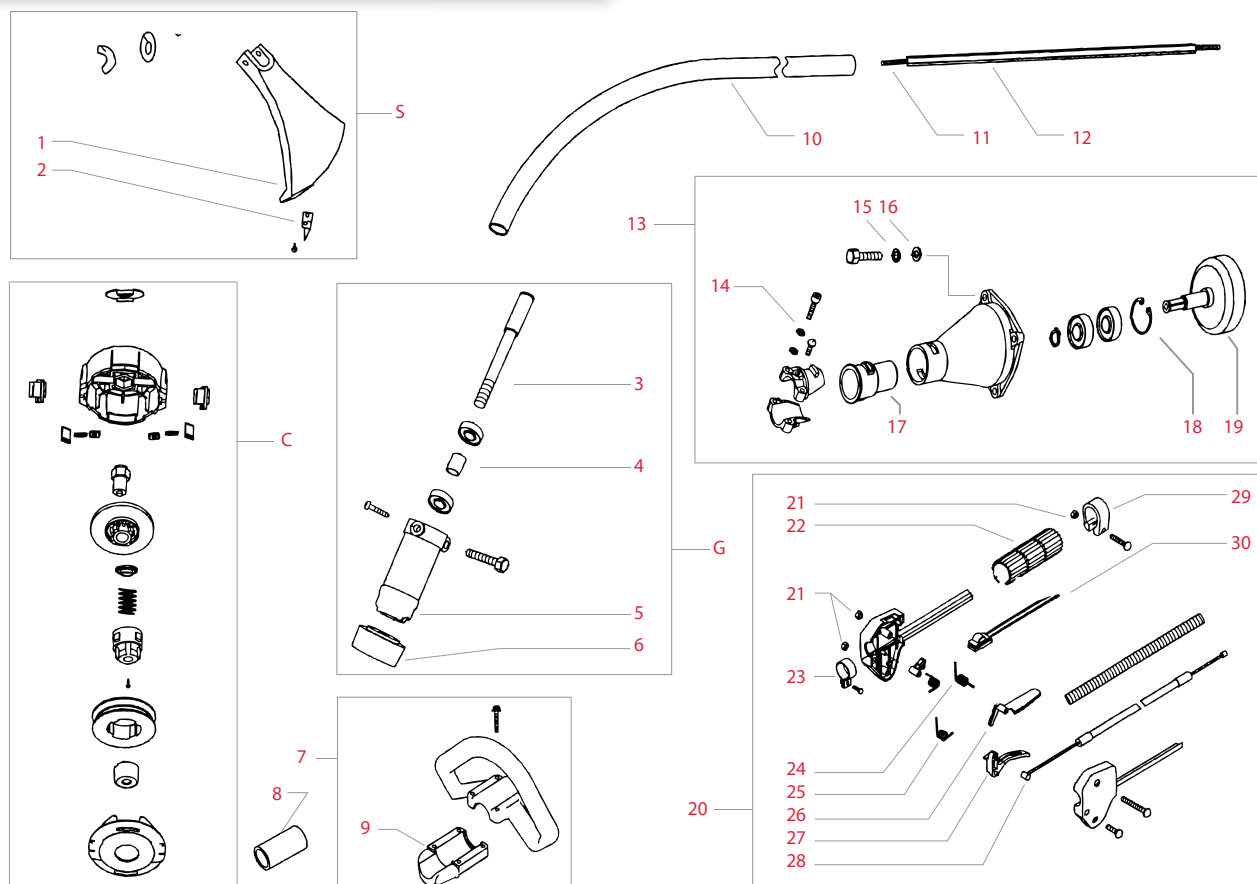


(non split shaft) *Straight Shaft Brushcutter BCS260*

Item	Part No.	Description
Gear case components		
1	BCS2-1	Gear case assembly
2	BCS2-17	Blade holder (A)
3	BCS2-18	Blade holder (B)
4	BCS2-19	Washer
5	BCS2-21	Split pin 2 x 16
Harness tube clamp		
6	BCS2-38	Harness tube clamp assembly
Shaft component		
7	BCS2-43	Straight shaft assembly
8	BCS2-45	Oil bearing 8 x 14 x 14
9	BCS2-44	Rubber bush
Harness Assembly		
10	BCS2-84	Harness
Blade		
11	BCS2-22	Blade
Clutch drum component		
12	BCS2-23	Clutch drum component
13	BC2-62	Washer 5
14	BC2-55	Rubber cover
15	BC2-33	Circlip 35
16	BCS2-24	Clutch drum
17	BC2-58	Washer 6
18	BC2-59	Washer 6

Item	Part No.	Description
Safety guard components		
19	BCS2-74	Safety guard bracket
20	BCS2-76	Safety guard
21	BCS2-77	Safety guard spacer
22	BCS2-83	Safety guard blade holder
Throttle lever components		
23	BC2-L	Throttle control assembly
24	BC2-41	Clamp
25	BC2-7	Nut M5
26	BC2-46	Spring
27	BC2-45	Spring
28	BC2-53	Stop switch
29	BC2-39	Rubber handle cover
30	BC2-38	Clamp
31	BC2-47	Safety lever
32	BC2-48	Throttle trigger
33	BC2-49	Throttle cable
Handle		
34	BCS2-48	Handle assembly
Nylon cutting head		
35	BCS2-85	Brushcutter head

**Refer to page 888 & 889 for engine breakdown*

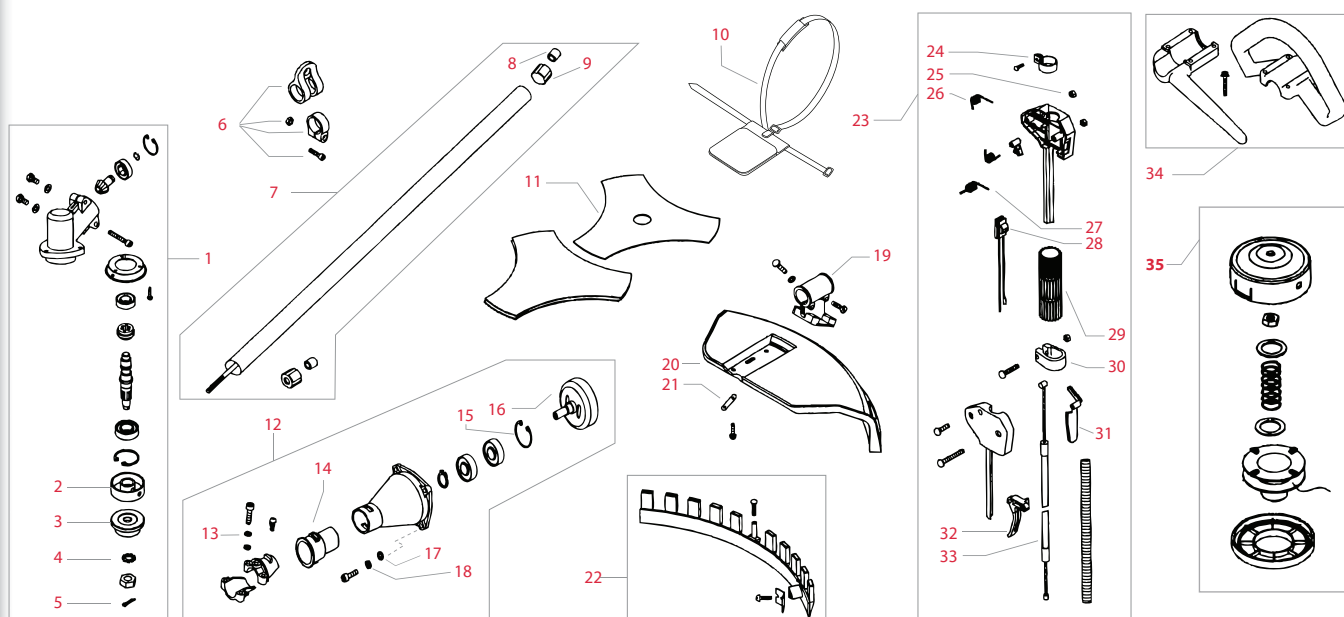

SPS260 Pole Saw & Chainsaw Attachment

Item	Part No.	Description
Case Cover		
1	PS3-1	Oil cover screw M4 x 12
2	PS3-2	Oil cover
3	PS3-3	Oil cover gasket
Chainsaw Head Components		
4	PS3-6	Oil pump assembly
5	PS3-5	Chain bar safety cover
6	D-050-50DL	Chain
7	10D0-CL-PO	Chainsaw bar
Oil Filler Components		
F	PS3-F	Oil filler cap assembly
8	PS3-50	Oil filler cap
9	PS3-51	Inner oil cover
10	PS3-52	Sleeve
11	PS3-53	Valve
12	PS3-54	O-ring
Gear case components		
G	PS3-G	Gear case assembly inc. bar
13	PS3-28	Gear case cover
Clutch Drum Component		
14	BCS2-23	Clutch drum component
15	BC2-55	Rubber cover
16	BC2-58	Washer 6
17	BC2-33	Circlip 35
18	BCS2-24	Clutch drum
	BC2-62	Washer 5
Long Shaft Component		
19	PS3-38	Washer
20	BCS2-44	Rubber bush
21	BCS2-45	Oil bearing 8 x 14 x 14
22	PS3-77	Joint B
23	PS3-93	Rubber pipe 2
Short Shaft Component		
20	BCS2-44	Rubber bush
21	BCS2-45	Oil bearing 8 x 14 x 14
24	PS3-85	Short shaft
25	PS3-84	Short tube
26	PS3-38	Washer
27	PS3-94	Rubber pipe 1




**Refer to page 888 & 889 for engine breakdown*

Picture for illustration purposes only.


Item	Part No.	Description
Pipe Connector Components		
C	PS3-C	Pipe connector assembly
28	PS3-55	Screw M6 x 35
29	BC2-59	Spring washer 6mm black
30	BC2-58	Flat washer 6mm black
31	PS3-89	Locking knob
32	BC2-22	Screw M5 x 12
33	PS3-90	Pipe joint
34	PS3-92	Locating pin
Harness tube clamp		
35	BCS2-38	Holder assembly
Throttle lever component		
36	BC2-L	Throttle lever assembly
37	BC2-46	Spring
38	BC2-48	Throttle trigger
39	BC2-49	Throttle cable
40	BC2-41	Clamp
41	BC2-7	Nut M5
42	BC2-7	Nut M5
43	BC2-47	Safety lever
44	BC2-45	Spring
45	BC2-53	Stop switch assembly
46	BC2-39	Rubber handle cover
47	BC2-7	Nut M5
48	BC2-38	Clamp

SPS260 Pole Saw & Chainsaw Attachment

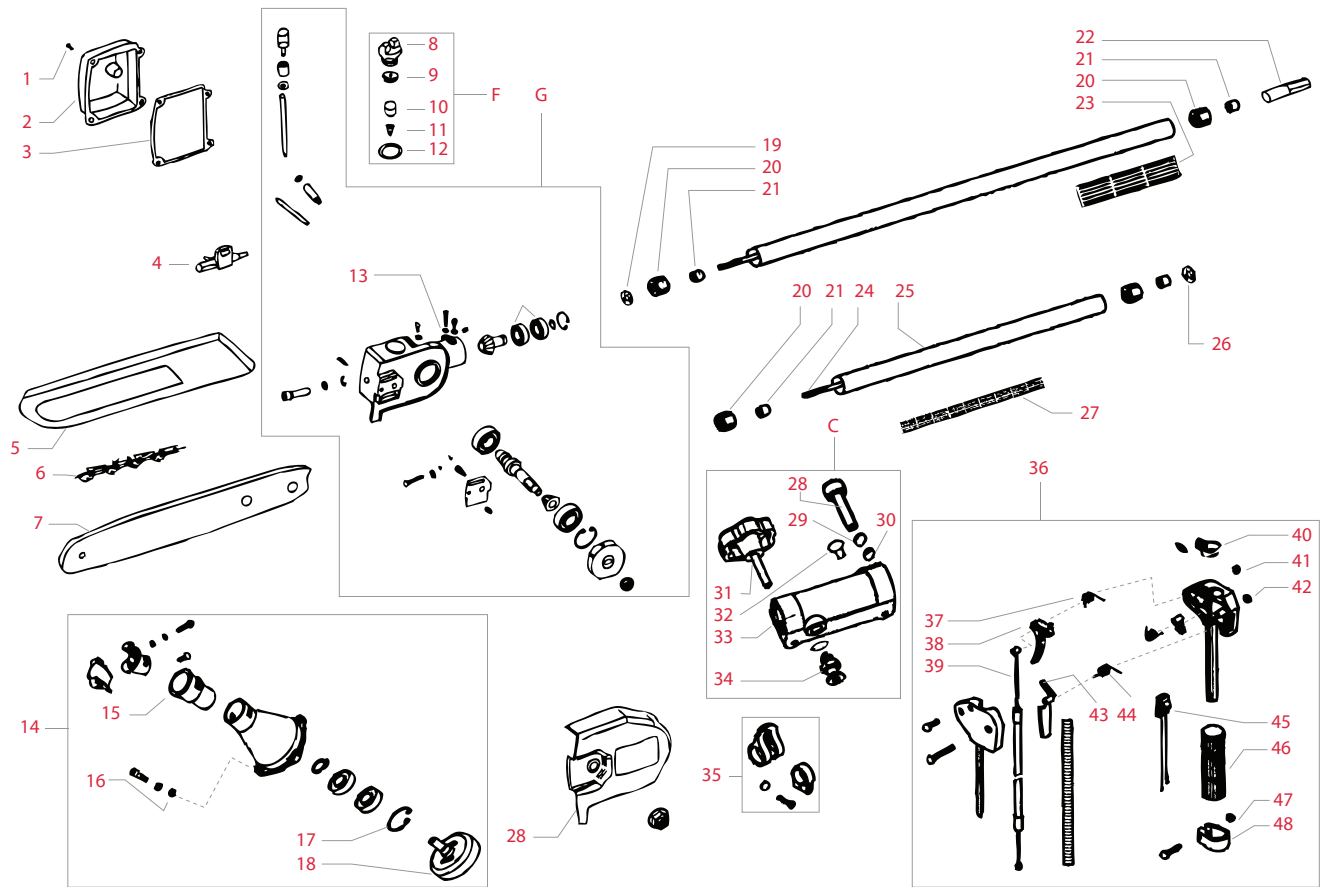

SPS260 Pole Saw & Hedge Trimmer Attachment


Item	Part No.	Description
Trimmer Components		
1	PS2-3	Grease nipple
2	PS2-4	Nut M6
3	PS2-6	Blade support
4	PS2-8	Blade assembly
5	PS2-9	Seal felt
6	PS2-10	Washer 6
7	PS2-11	Bolt
Gear Case Components		
G	PS2-G	Gear case assembly
8	PS2-16	Gear case gasket
9	PS2-15	Gear case cover
10	PS2-12	Washer 4
11	PS2-13	Washer 4
12	PS2-14	Screw M4 x 12

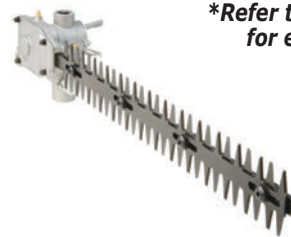

**Refer to page 888 & 889 for engine breakdown*

Picture for illustration purposes only.

Item	Part No.	Description
Gear Case Components (cont'd)		
H	PS2-H	Handgrip assembly
13	PS2-37	Handgrip
14	PS2-38	Screw
15	BC2-59	Spring washer 6mm black
16	PS2-39	Swivel bracket
17	PS2-48	Connector shaft
	SPS2600001	Complete hedge trimmer attach

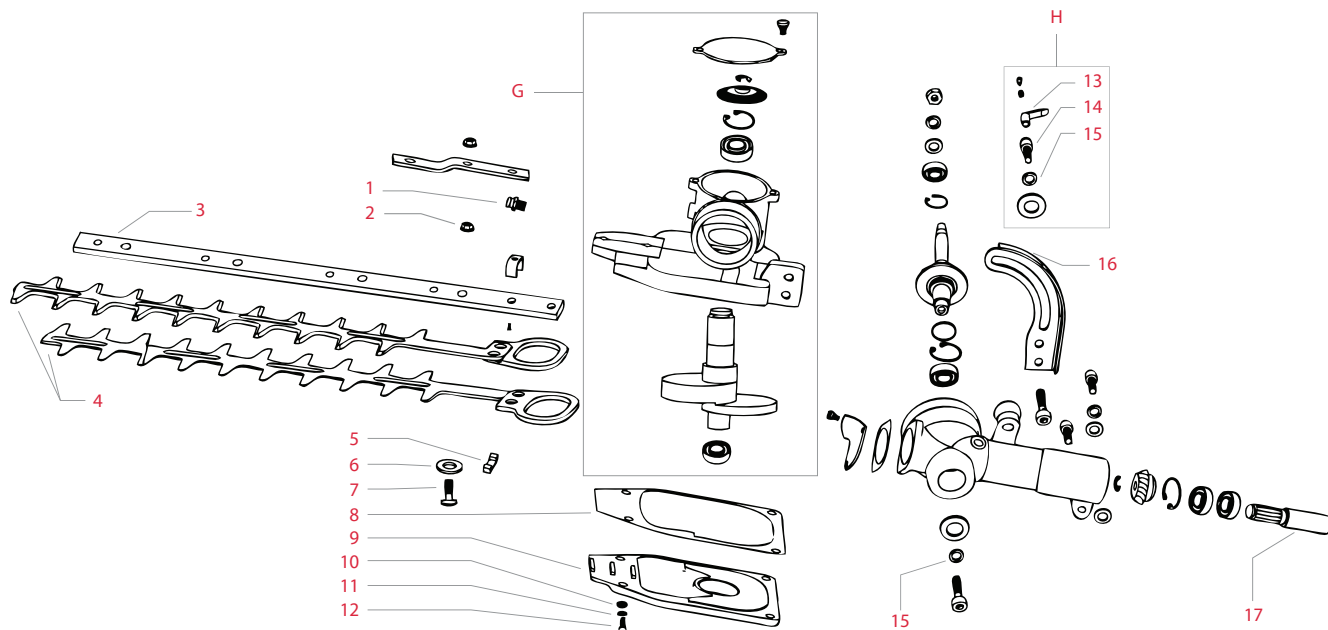

Hedge Trimmer SLHT600


Item	Part No.	Description
Blade		
1	HT2-39	Nylon lock nut
2	HT2-33	Safeguard
3	HT2-34	Blade settle plate
4	HT2-9	Blade end protection
5	HT2-32	Blade support bracket
6	HT2-35	Blade
7	HT2-4	Blade cover
Gear Assembly		
8	HT2-46	Throttle cable
9	HT2-11	Gear case front felt seal
10	HT2-12	Gear case gasket
11	HT2-10	Gear case inside lid
12	HT2-42	Gear case lid
13	HT2-49	Right handle connect
14	HT2-50	Grease nipple
15	HT2-53	Damping cover
16	HT2-52	Damping seat
17	HT2-54	Bracket
18	HT2-26	Gear case
19	HT2-28	Needle bearing



Picture for illustration purposes only.

**Refer to page 891 for engine breakdown*

Item	Part No.	Description
Protecting Handle		
20	HT2-8	Protecting handle
21	HT2-48	Knob camp
22	HT2-47	Spacing cover
Handle Assembly		
23	HT2-5	Stop switch assembly
24	HT2-19	Safety lever
25	HT2-20	Throttle trigger
26	HT2-1	Handle right side (A)
27	HT2-2	Handle left side (B)
28	HT2-18	Handle cover seat
29	HT2-43	Left handle connect

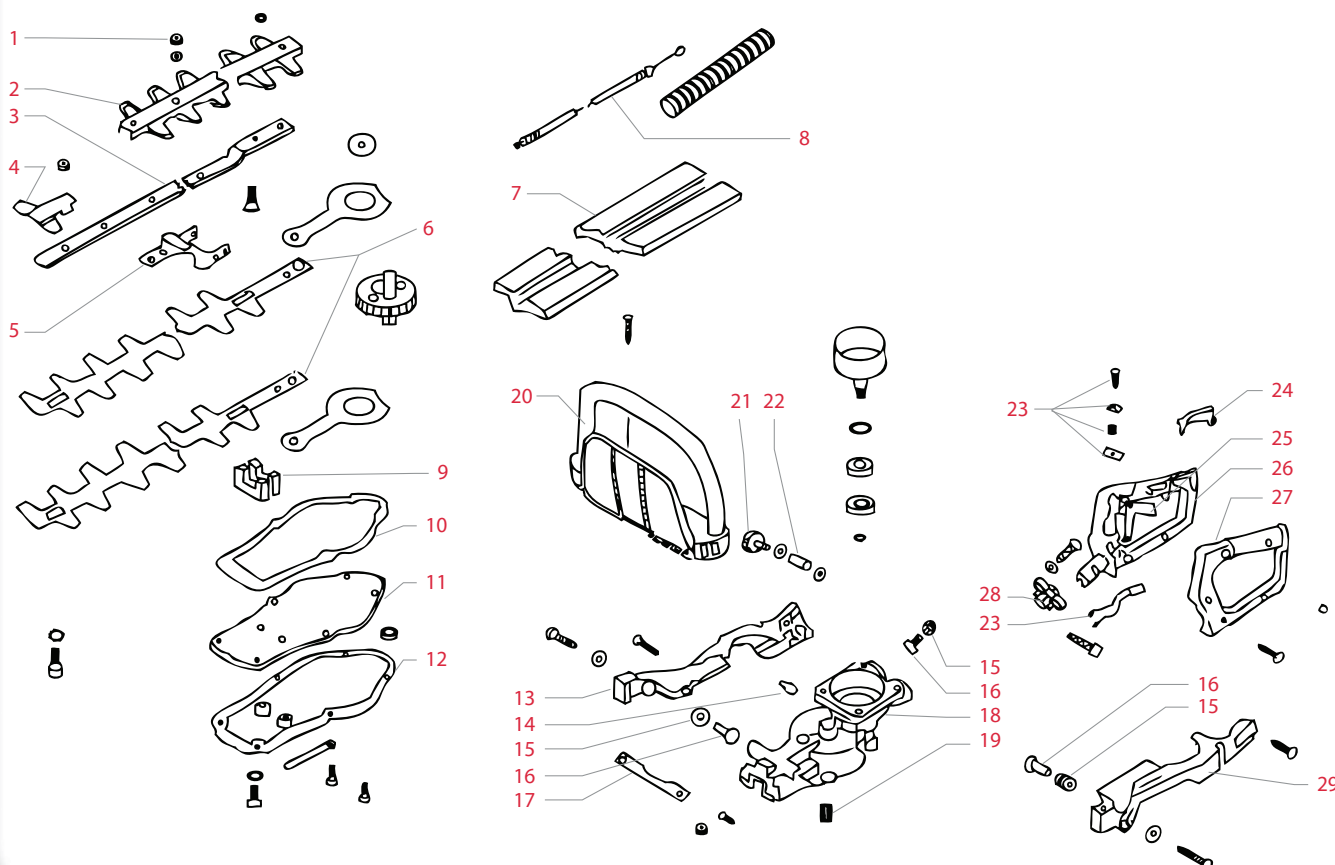

Blower Vac SLBV260


Item	Part No.	Description
1	BL2-18	Rear cochlea case
2	BL2-16	Screw M5 x 10
3	BV2-8	Safety switch
4	BV2-2	Inhale pipe B
5	BV2-1	Inhale pipe A
6	BL2-3	Fan net cover
7	BL2-5	Spring
8	BV2-16	Nut M8 x 1
9	BV2-17	Shatter tooth
10	BL2-17	Impeller
11	BL2-20	Connect cover
12	BL2-21	Front Cochlea case
13	BL2-9	Stop Switch
14	BL2-11	Throttle lever
15	EN1-76	Outlet fuel hose
16	EN1-74	Fuel tank grommet
17	EN1-75	Inlet fuel pipe
18	BL2-33	Filter cleaner

**Refer to page 890 for engine breakdown*



Picture for illustration purposes only.

Item	Part No.	Description
19	BL2-35	Throttle wire component
20	BV2-42	Tail pipe
21	BL2-22	Fuel tank
S	BL2-S	Starter assembly
22	BV2-45	Harness assembly
23	BV2-44	Leaf bag

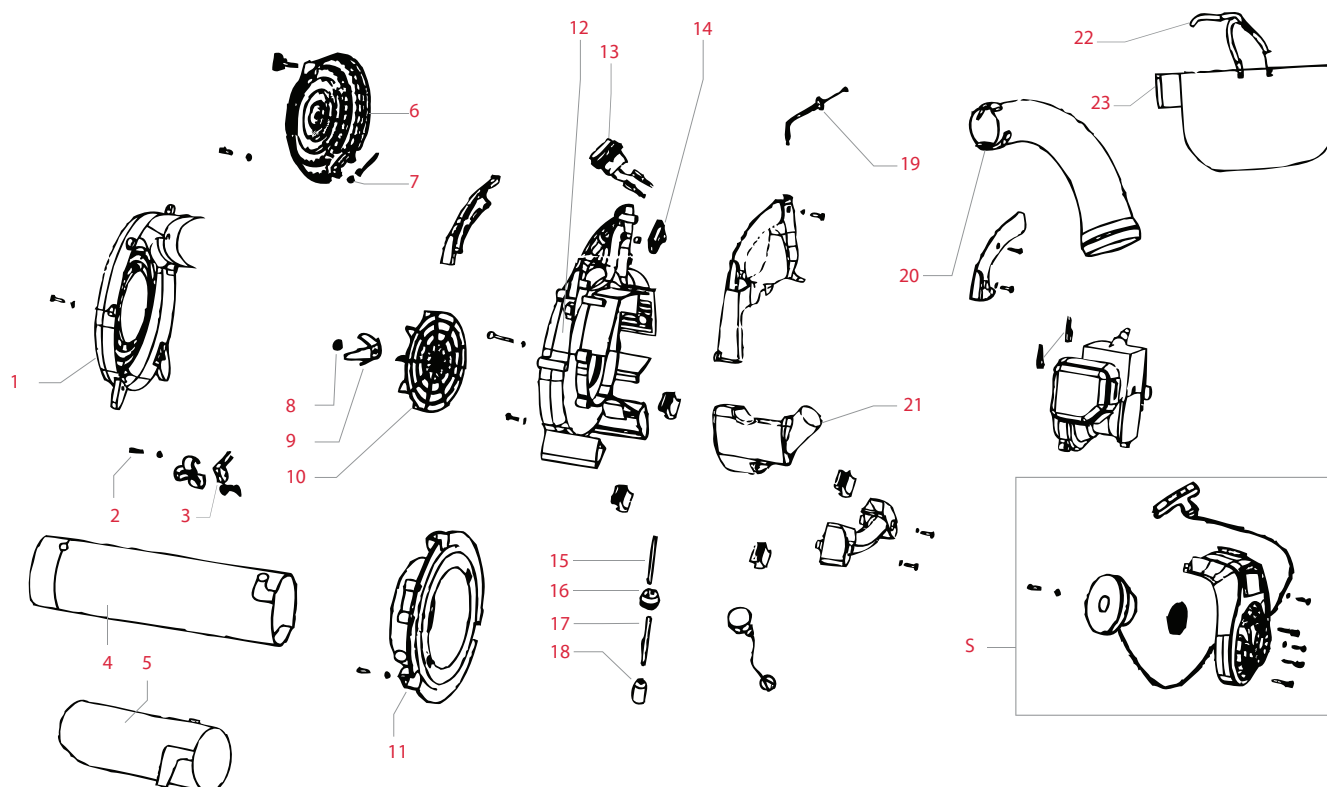

Blower SLB260, SLB262, SLB265




**Refer to page 890 for engine breakdown*

Picture for illustration purposes only.

Item	Part No.	Description
1	BL2-3	Fan cover
	BL2-20	Connect cover
2	BL2-18	Rear cochlea case
3	BL2-5	Spring
4	BL2-6	Washer
5	BL2-7	Spring shaft
6	BL2-17	Impeller
7	BL2-8	Left handle rubber cover
8	BL2-9	Stop switch
9	BL2-10	Short stop wire
10	BL2-12	Throttle lever shaft
11	BL2-11	Throttle lever
12	BL2-15	Pedestal

Item	Part No.	Description
13	BL2-21	Front cochlea case
14	EN1-76	Return fuel pipe
15	EN1-74	Fuel tank grommet
16	EN1-75	Inlet fuel pipe
17	BL2-33	Fuel filter
18	BL2-35	Throttle wire component
19	BL2-24	Upper handle
20	BL2-22	Fuel tank
21	BL2-25	Right handle rubber cover
22	BL2-23	Lower handle
23	BL2-42	Blow the breeze tube A
24	BL2-43	Blow the breeze tube B
25	BL2-S	Starter assembly (SLB260)
	BL2-SA	Starter assembly (SLB262, SLB265)
26	BL2-34	Fuel tank cap
27	BL2-28	Stop wire
28	BL2-36	Starting rope reel
29	BL2-37	Cole spring
30	BL2-40	Starter rope
31	BL2-41	Starter handle

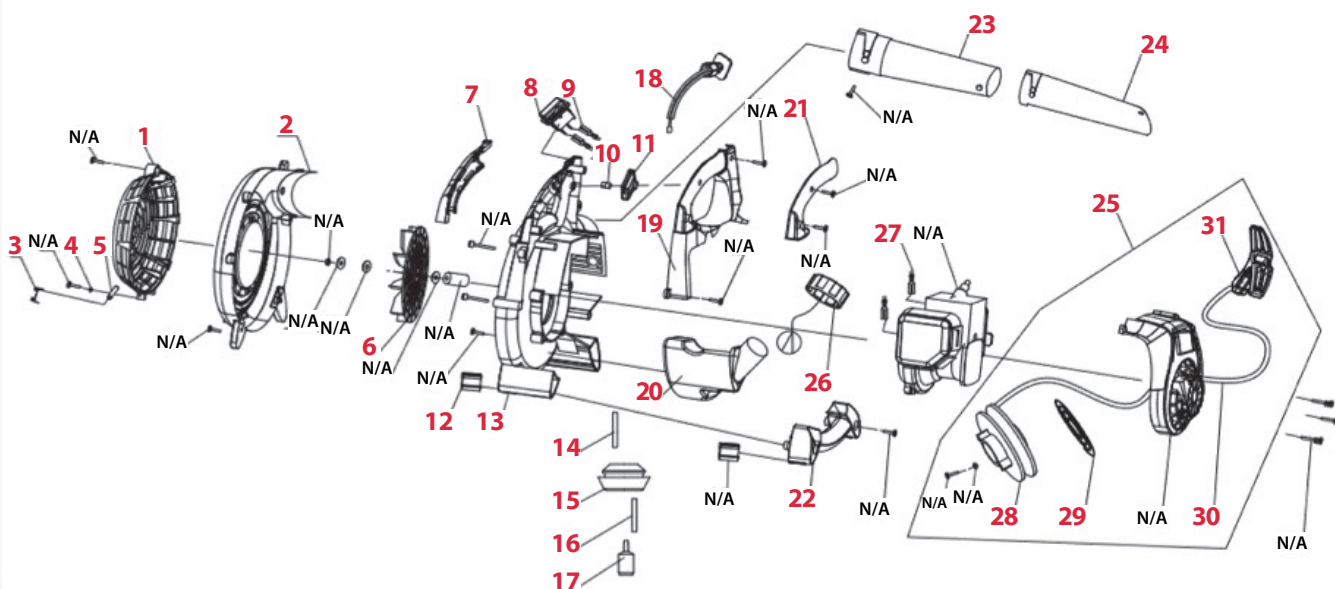


26cc Engine for BCB/BCS260, 262, 265, SPS260

Item	Part No.	Description
Crankcase Components		
1	EN1-43	Screw M5 x 14
2	EN1-16	Flywheel cover
3	EN1-17	Screw shaft
4	EN1-18	Washer
5	EN1-19	Clutch assembly
6	EN1-23	Nut
7	EN1-27	Flywheel
8	BC2-61	Screw assembly M5 x 25
9	EN1-14	Round pin
10	EN1-31	Front half crankcase
11	EN1-33	Crankcase gasket
12	EN1-35	Ball bearing 6001/P5
Air Filter Components		
13	EN1-1	Air filter cover screw
14	EN1-2	Air filter cover
15	EN1-3	Air filter
16	EN1-4	Screw Assembly (BCB/BCS260, SPS260)
17	EN1-5	Air filter cover base
Carburettor		
18	EN1-9	Carburettor assembly (BCB/BCS260, SPS260)
	EN1-255	Carburettor assembly (BCB/BCS262, BCB/BCS265)
	EN1-10	Carburettor gasket (BCB/BCS260, SPS260)
	EN1-459	Carburettor gasket (BCB/BCS262, BCB/BCS265)
19	EN1-33	Crankcase gasket
20	EN1-49	Screw M5 x 20
21	EN1-12	Inlet manifold
22	EN1-13	Gasket engine side
Fuel Tank		
23	EN1-62	Fuel tank cap assembly
24	EN1-69	Fuel tank
	EN1-170	Fuel tank (BCB/BCS262, BCB/BCS265)
25	EN1-70	Plate washer
26	EN1-70	Screw M5 x 20
27	EN1-76	Outlet fuel hose
28	EN1-75	Inlet fuel hose
	EN1-74	Fuel tank grommet (BCB/BCS260, SPS260)
	EN1-73	Fuel tank filter

Item	Part No.	Description
Starter Assembly		
30	EN1-57	Crankshaft / flywheel key
31	EN1-60	Gudgeon pin bearing
32	EN1-36	Crankshaft / con rod assembly
33	EN1-35	Ball bearing 6001/P5
34	EN1-34	Oil seal 12 x 22 x 7
35	EN1-14	Round Pin
36	EN1-37	Rear half crankcase
37	EN1-38	Starter pawl assembly
	EN1-032	Starter pawl assembly (BCB/BCS262, BCB/BCS265)
38	EN1-42	Starter assembly
39	EN1-15	Screw M4 x 16
Muffler Assembly		
40	EN1-52	Screw M5 x 55
41	EN1-29	Spring washer
42	EN1-30	Washer
43	EN1-51	Muffler
44	EN1-50	Muffler gasket
	EN1-328	Muffler gasket (BCB/BCS262, BCB/BCS265)
Cylinder & Cover		
45	EN1-43	Screw M5 x 14
46	EN1-44	Top cover (BCB/BCS260, SPS260)
	EN1-45	Engine cover (BCB/BCS260, SPS260)
	EN1-296	Engine cover (BCB/BCS262, BCB/BCS265)
47	EN1-46	Screw M4 x 12
48	EN1-24	Stop line
49	EN1-25	Primary cord grommet
50	EN1-15	Screw M4 x 16
51	EN1-26	Ignition coil assembly
52	EN1-29	Spring washer
53	EN1-30	Washer
54	RCJ6Y/BPMR7A	Spark plug
	EN1-77	Spark plug boot (BCB/BCS260, SPS260)
55	EN1-53	Cylinder (BCB/BCS260, SPS260)
56	EN1-54	Cylinder base gasket (BCB/BCS260, SPS260)
57	EN1-55	Piston rings / set
58	EN1-56	Piston
59	EN1-58	Stop ring
60	EN1-59	Gudgeon pin
61	EN1-61	Gudgeon pin circlip


26cc Engine for BCB/BCS260, 262, 265, SPS260

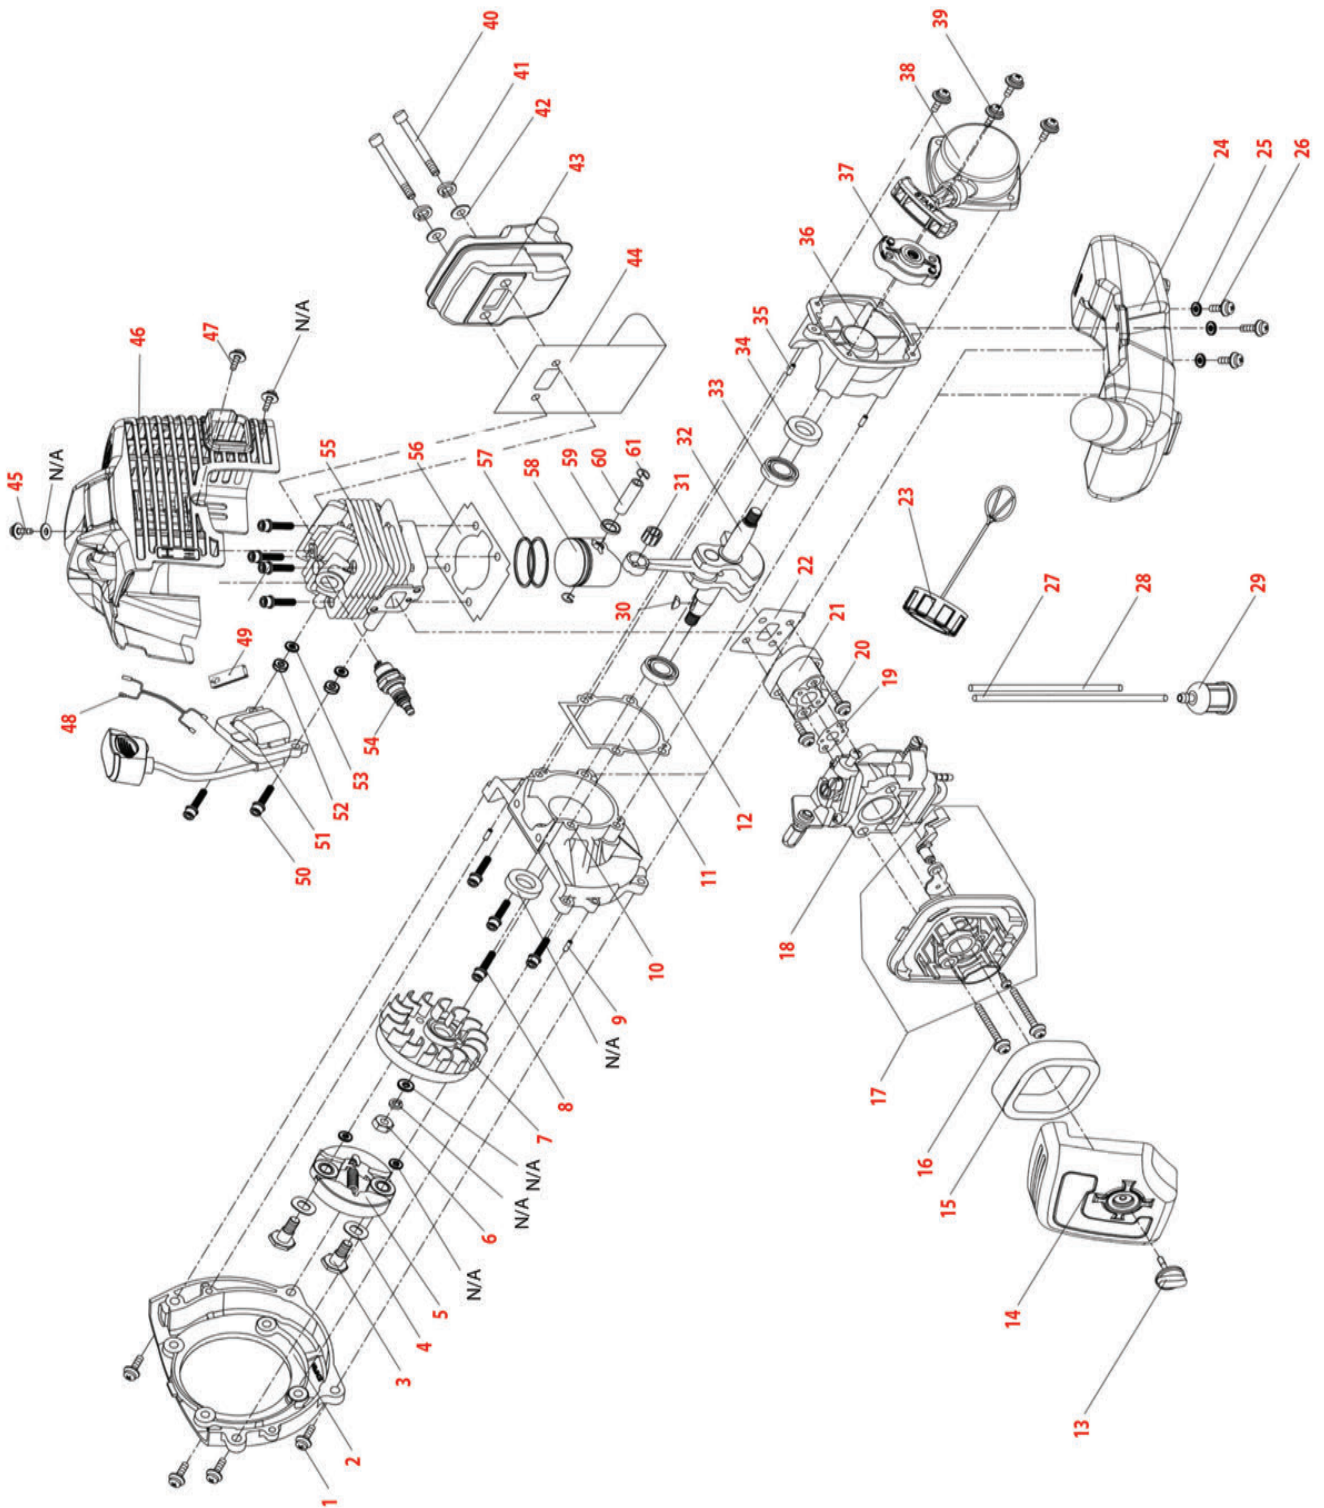

26cc Engine for SLB/SLBV260, SLB262, SLB265

Item	Part No.	Description
1	EN1-52	Muffler screw
	EN1-30	Heat insulator washer (SLB260)
2	BL1-7	Muffler
3	BL1-8	Muffler gasket (SLB260)
	BL2-141	Muffler gasket (SLB262/265)
4	RCJ6Y/BPMR7A	Spark plug
5	EN1-13	Inlet manifold gasket engine side (SLB260)
	BL2-082	Inlet manifold gasket engine side (SLB262/265)
6	EN1-12	Inlet manifold (SLB260)
	BL2-036	Inlet manifold (SLB262/265)
7	EN1-11	Screw M5 x 20 (SLB262/265)
8	EN1-10	Gasket carburettor side
9	EN1-9	Carburettor assembly (SLB260)
	BL2-045	Carburettor assembly (SLB262/265)
10	EN1-5	Air filter base assembly
11	EN1-3	Filter element
12	EN1-2	Air filter outer cover
13	EN1-1	Air filter cover screw
14	BL1-13	Coil mounting screw (SLB262/265)
15	BL1-14	Coil assembly (SLB260)
	BL2-024	Coil assembly (SLB262/265)


Item	Part No.	Description
16	EN1-54	Cylinder base gasket (SLB260)
	BL2-020	Cylinder Base Gasket (SLB262/265)
17	EN1-55	Piston rings / set
18	EN1-56	Piston (SLB260)
	BL2-006	Piston (SLB262/265)
19	EN1-59	Gudgeon pin
20	EN1-61	Gudgeon pin circlip
21	EN1-31	Crankcase front (SLB260)
22	EN1-57	Flywheel key
23	EN1-58	Stop ring (SLB260)
24	EN1-36	Crankshaft / con rod assembly (SLB260)
25	EN1-60	Gudgeon pin bearing (SLB260)
26	EN1-30	Washer
27	BL2-39	Bearing (SLB262/265)
28	EN1-37	Rear half crank case (SLB260)
	EN1-33	Crankcase casket (SLB260)
29	EN1-34	Oil seal 12 x 22 x 7
30	EN1-39	Starter pawl (SLB262/265)
	BL1-24	Impeller connecting shaft (SLB260)

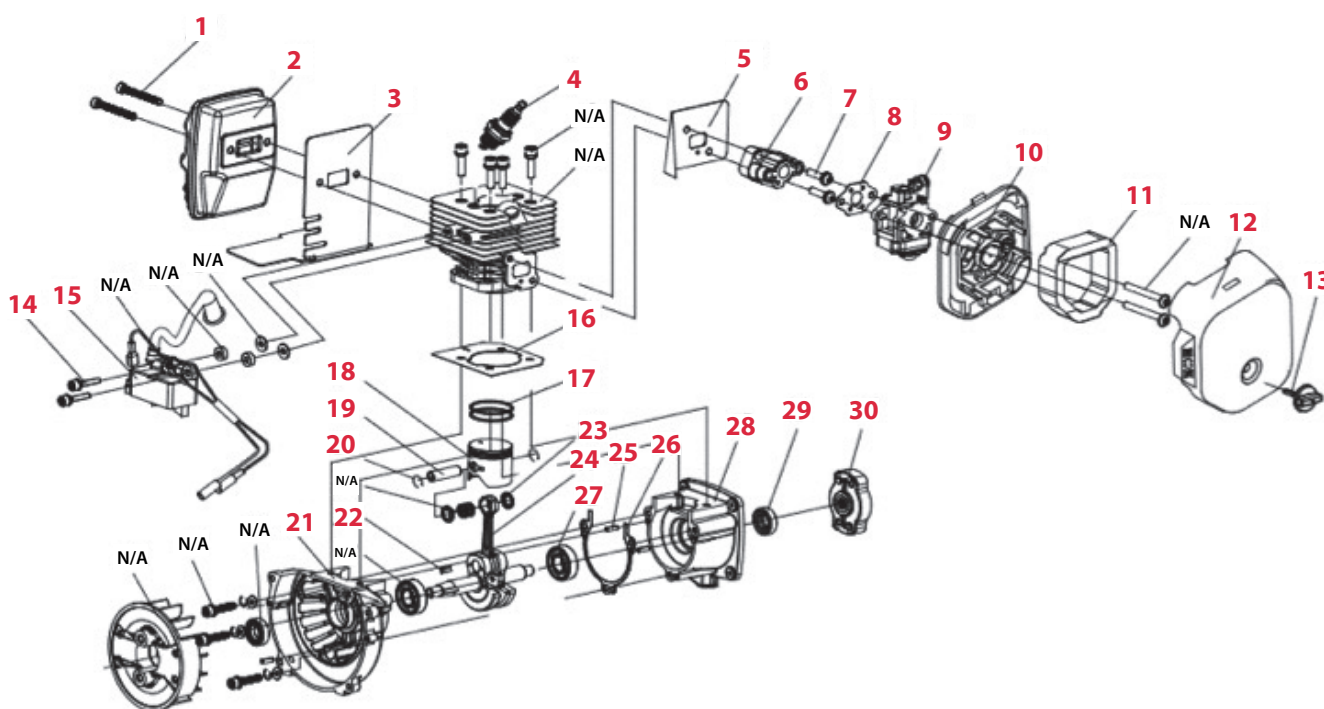

26cc Engine for SLHT600

Item	Part No.	Description
Starter Components		
1	HT1-44	Starter pawl assembly
2	EN1-15	Screw M4 x 16
3	HT1-45	Starter assembly
Ignition Coil Components		
4	EN1-26	Ignition coil
5	EN1-25	High voltage wire
Spark Plug		
6	RCJ6Y/BPMR7A	Spark plug
Engine Cover Components		
7	EN1-45	Engine cover
8	EN1-44	Cover
Crankcase Components		
9	EN1-30	Washer
10	EN1-31	Front half crankcase
11	EN1-37	Rear half crankcase
12	EN1-33	Crankcase gasket
13	EN1-34	Oil seal 12 x 22 x 7
14	EN1-35	Ball bearing 6001/P5
15	EN1-57	Crankshaft / flywheel key
16	EN1-36	Crankshaft / con rod assembly
Air Filter Components		
17	EN1-1	Air filter cover screw
18	EN1-2	Air filter cover
19	EN1-3	Air filter
20	EN1-5	Air filter cover base

Item	Part No.	Description
Carburettor Components		
21	HT1-46	Carburettor assembly
22	EN1-10	Carburettor side gasket
23	EN1-12	Inlet manifold
24	EN1-13	Cylinder side gasket
Clutch Components		
25	EN1-19	Clutch assembly
Engine Cylinder Components		
26	EN1-53	Cylinder
27	EN1-54	Cylinder base gasket
28	EN1-55	Piston rings / set
29	EN1-56	Piston
30	EN1-58	Stop ring
31	EN1-59	Gudgeon pin
32	EN1-60	Gudgeon pin bearing
33	EN1-61	Gudgeon pin circlip
Muffler Components		
34	EN1-52	Screw M5 x 55
35	EN1-51	Muffler
36	EN1-50	Muffler gasket
Fuel Tank Components		
37	EN1-75	Inlet fuel hose
38	EN1-74	Fuel tank grommet
39	EN1-76	Outlet fuel hose
40	EN1-73	Fuel tank filter
41	HT1-53	Fuel tank
42	EN1-62	Fuel cap assembly

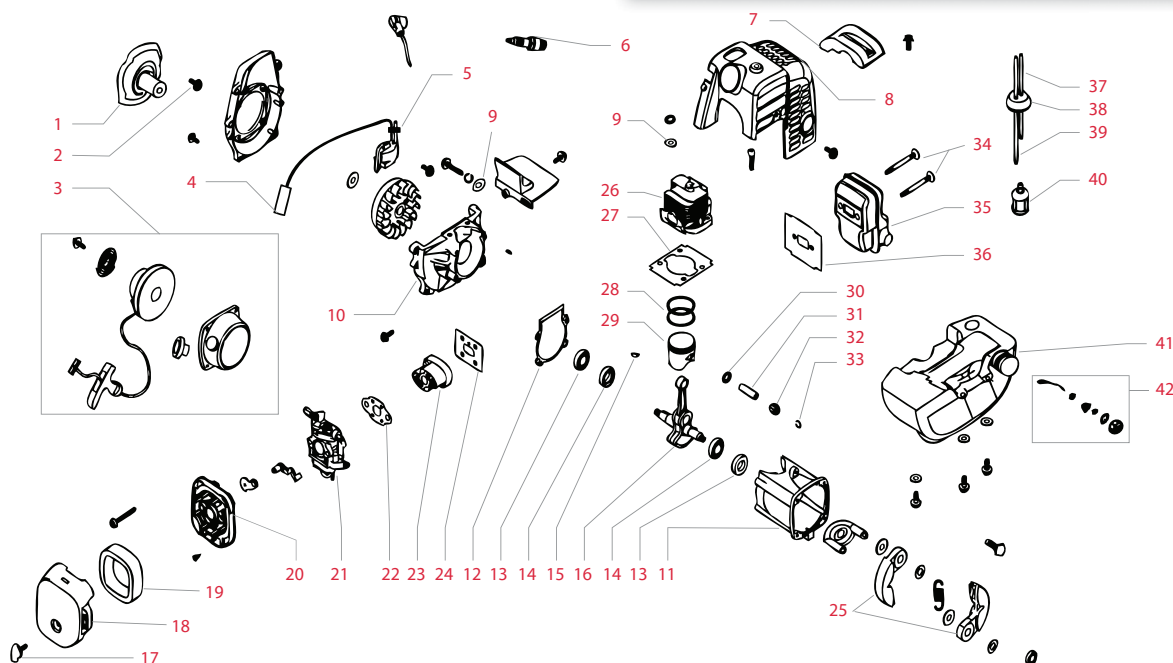

Notes

