



No.	Part No.	Husqvarna Part No.	Description	Qty.
1	36000001K16F000	522271901	MUFFLER COVER	1
2	36000006K16F000	522272101	BOLT	2
3	36000000K16F000	522271801	MUFFLER	1
4	36000005K16F000	522272001	GASKET MUFFLER	1
5	30502K04F930	522261601	BOLT	7
6	26600000K16F000	522255001	BRACKET	1
7	39000002K16F000	522276401	WIND BAFFLE,LEFT	1
8	26625K04F000	522255301	BOLT	2
9	26235K04F000	522254201	BREATHER VALVE	1
10	26243K04F000	522254301	GASKET BREATHER	4
11	30312K04F000	522260501	VALVE LIFTER	2
12	30106K04F000	522257701	VALVE RETAINER	2
13	30101K04F000	522256901	VALVE SPRING	2
14	30103K04F000	522257201	EXHAUST VALVE	1
15	30201K04F000	522258401	INTAKE VALVE	1
16	15503K04F000	522234001	GASKET, CYLINDER COVER	1
17	30000001K16F000	522256801	COVER, CYLINDER	1
18	26620K04F930	522255101	BOLT	8
19	22000002K34F000	522248401	BRACKET	1
20	AO9295305001	522376001	SPARK PLUG ( GL4RC - TORCH )	1
21	34000000K34F000	522269101	IGNITION COIL ASSEMBLY	1
21-1	NOT AVAILABLE	#N/A	NOT AVAILABLE	-
21-2				-
21-3				-
22	17584L01F930	522239401	PLAIN WASHER	1
23	26626K04F920	522255401	BOLT (Also Ignition coil Bolt)	1
24	26200004K16F000	522252101	O-RING	1
25	26210000K16F000	522253701	PIPE ASS'Y, OIL FILLER	1
26	26200003K04F000	522252001	O-RING	1
27	26220000K16F000	522253901	OIL CAP ASSEMBLY & DIPSTICK	1
	17100000K16F000	522234301	STARTER ASSY COMPLETE (ITEMS 28,30-36)	1
28	39110001K16F000	522277301	ENGINE COVER	1
29	39100009K16F000	522277201	DOMED NUT	3
30	181051C0300	522242301	STARTER HANDLE	1
31	17000001K16F000	522234201	STARTER REEL	1
32	20802K04F000	522247701	STARTER ROPE	1
33	20801K04F000	522247601	STARTER SPRING	1
34	20825K04F000	522248101	STARTER PAWLS	2
35	20823K04F000	522247901	CLIP	1
36	20822K04F000	522247801	GUIDE PLATE	1
37	39100002K16F000	522276701	SPACER	3

No.	Part No.	Husqvarna Part No.	Description	Qty.
38	20824K04F000	522248001	SCREW, STARTER REEL	1
39	15230K04F910	522232801	NUT	1
40				
41	29000005K16F000	522256101	HOSE CLAMP	2
42	29000001K34F000	522255701	FUEL HOSE	1
43	29100003K16F000	522256401	SPACER	2
44	B0133061565	522381601	BOLT	2
45	29100000K34F000	522256201	FUEL TANK	1
46	29200000K16F000	522256501	FUEL TANK CAP	1
47	29200002K34F000	522256701	FUEL FILTER	1
48	K802022103	522409801	O-RING	1
49	29200000K34F000	522256601	FUEL TAP ASSEMBLY	1
50	39200000K34F000	522277401	FAN COVER ASSEMBLY	1
51	19000004K16F000	522243201	THROTTLE CABLE CLIP	1
52	17403K04F000	522237601	STARTER CANISTER	1
53	39100003K16F000	522276801	DOUBLE END BOLT 78mm (Coil mount)	1
54	39100005K34F000	522277001	DOUBLE END BOLT 73mm	1
55	39100008K16F000	522277101	DOUBLE END BOLT 85.5mm	1
56	17449K04F000	522238101	SHROUD	1
57	17441K04F000	522237901	SHIELD	1
58	20400K16F000	522247401	FLYWHEEL ASSEMBLY	2
59	26627K04F920	522255501	BOLT	1
60	26209K04F000	522253501	O-RING	1
61	32207K04F000	522266001	GASKET TRANSFER TUBE	1
62	26500000K16F000	522254801	TOP CRANKCASE	1
63	26192K04F000	522251901	OIL SEAL	1
64	26000001K16F000	522249701	TRANSFER TUBE	1
65	32103K04F000	522265601	SEAL, CARBURETTOR	1
66	26000004K16F000	522250001	FLANGE PLATE, CARBURETTOR	1
67	26000007K16F000	522250201	O-RING	1
68	B02210501025	522382801	SCREW	1
69	22000003K34F000	522248601	CABLE CLAMP	-
70	22100000K34F000	522249201	GOVERNOR ASSEMBLY	1
71	22000004K16F000	522248801	AIR VANE, WIND POWER GOVERNOR	1
72	22000001K34F000	522248201	TENSION SPRING, GOVERNOR	1
73	22000005K16F000	522249001	TORSION ROD, GOVERNOR	1
74	22200001K34F000	522249501	BRACKET, SWITCH CONNECT ELEMENT	1
75	17571K04F000	522238601	CONNECT ELEMENT, SWITCH	1
76	34200002K16F000	522269901	GASKET, CARBURETTOR	1
77	34100000K34F000	522269401	CARBURETTOR	1
77-1	32100000C03F000	522265501	CARBURETTOR GASKET KIT (Bowl gskt & washers)	1

No.	Part No.	Husqvarna Part No.	Description	Qty.
78	331051C03000	522268801	GASKET, AIR FILTER	1
79	32002J02F000	522265401	CLIP	2
80	34000001K34F000	522269201	HOSE, FUEL	1
81	B04190600000	522384101	NUT, HEX-FLANGE	1
82	34200000K16F000	522269701	PRIMER ASSEMBLY	1
83	26105K04F000	522250701	TUBE, VENTILATION	1
84	37000004K34F000	522273401	DOUBLE END BOLT	2
85	37000006K16F000	522273501	BREATHER HOSE	1
86	37100000K34F000	522273901	AIR FILTER ASSEMBLY	1
86-4	37100003K34F000	522274201	WIRE SCREEN	1
86-5	AO9183305001	522370901	AIR FILTER ELEMENT	1
86-6	37100001K34F000	522274101	AIR FILTER COVER	1
86-7	B05004802502	522386601	SCREW, CROSS RECESSED PAN HEAD	1
87	B01330303065	522380701	SCREW	1
88	37000008K16F000	522273601	NUT, HEX-FLANGE	2
89	26000006K16F000	522250101	BOLT	2
90	39000001K16F000	522276101	WIND SHIELD, RIGHT	1
91	15400K13F000	522233901	PISTON RING SET	1
92	141081C03000	522227101	CLIP, PISTON PIN	1
93	15100K04FF10	522228401	PISTON	1
94	141121C03000	522227201	PISTON PIN	1
95	15130K13F000	522231301	CONNECTING ROD ASSEMBLY	1
95-1	NOT AVAILABLE	#N/A	CASE.CONNECTING ROD	
95-2			COVER.CONNECTING ROD	
95-3			BOLT, CONNECTING ROD	
96	15000003K16F000	522228101	KEY	1
97	15000001K34F000	522228001	CRANKSHAFT	1
98	15215K04F000	522232601	PIN	1
99	15237K04F000	522233301	DRIVE GEAR	1
100	26130K03F000	522251301	OIL SEAL	1
101	15235K04F000	522233201	WASHER	1
102	26208K04F000	522253401	PIN. DOWEL	2
103	26201K04F000	522252301	GASKET, CRANKCASE	1
104	26200K04F000	522252201	BOTTOM CRANKCASE	1
105	18105K04F000	522242401	WASHER	1
106	26202K04F000	522252701	PLUG, OIL DRAIN	1
107	26621K04F000	522255201	BOLT	6
108	30500K04F000	522261401	OIL SLINGER ASSEMBLY	1
109	30600K04F000	522263301	CAMSHAFT ASSEMBLY	1
110	29000003K34F000	522256001	BRACKET, FUEL TANK	1
111	17585L01F930	522239701	WASHER	3
112	B01210501065	522378701	BOLT, HEX-FLANGE	2
113	29000002K34F000	522255901	CUSHION, FUEL TANK	1