


BC 320 S - Engine



Fino a 17/10/2010
 Until 17/10/2010
 Jusqu'à 17/10/2010
 Hasta 17/10/2010
 Bis zu 17/10/2010

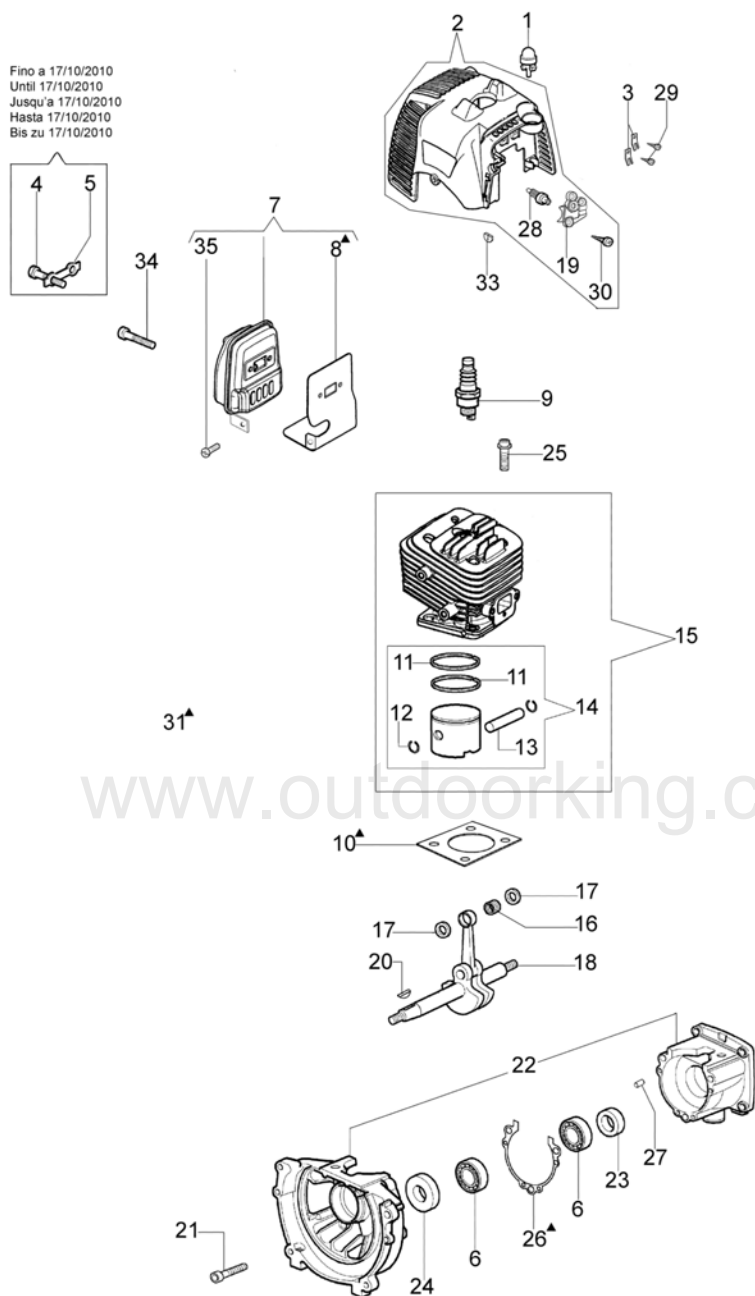


www.outdoorworking.com

BC 320 S - Engine



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318817R	Air purge				
2	1	61280101R	Cylinder cover				BT3-093-03/10
3	2	4191069B	Plate		matr.2180274184		BT3-105-01/11
4	2	3806014	Screw		17/10/2010		
5	1	61070055	Plate		10/10/2010		
6	1	3035040R	Bearing				
7	1	61280010CR	Muffler				BT3-089-10/09
8	1	61280008DR	Oil seal				BT3-089-10/09
9	1	3055120	Spark plug				
10	1	61280005R	Gasket				
11	2	093000091R	Piston ring				
12	2	093000167	Ring				
13	1	072700045R	Piston pin				
14	1	61282026	Piston assy Ø36				
15	1	61282027	Complete cylinder				
16	1	072700046R	Bearing				
17	2	074000267AR	Washer				
18	1	61280004R	Crankshaft				
19	1	61280100R	Stopper				BT3-093-03/10
20	1	3028013R	Key				
21	1	3860096	Screw				
22	1	61280043AR	Crankcase assy				BT3-089-10/09
23	1	3050038R	Seal ring				
24	1	3050039R	Sealing ring				
25	4	3860095R	Screw				
26	1	61280009R	Gasket				
27	3	61280044R	Plug				
28	1	61250249R	Adjust. pin				BT3-093-03/10
29	2	3960030	Screw		matr.2180274184		BT3-105-01/11
30	3	3960087AR	Screw				BT3-093-03/10
31	1	61282025B	Gasket set				
32	1	61282031R	Short block				
33	1	005000347A	Grommet				
34	2	4175162A	Screws	18/10/2010			
35	1	4175089A	Screw	matr.2189382465			BT3-089-10/09

BC 320 S - Starter Assy and clutch

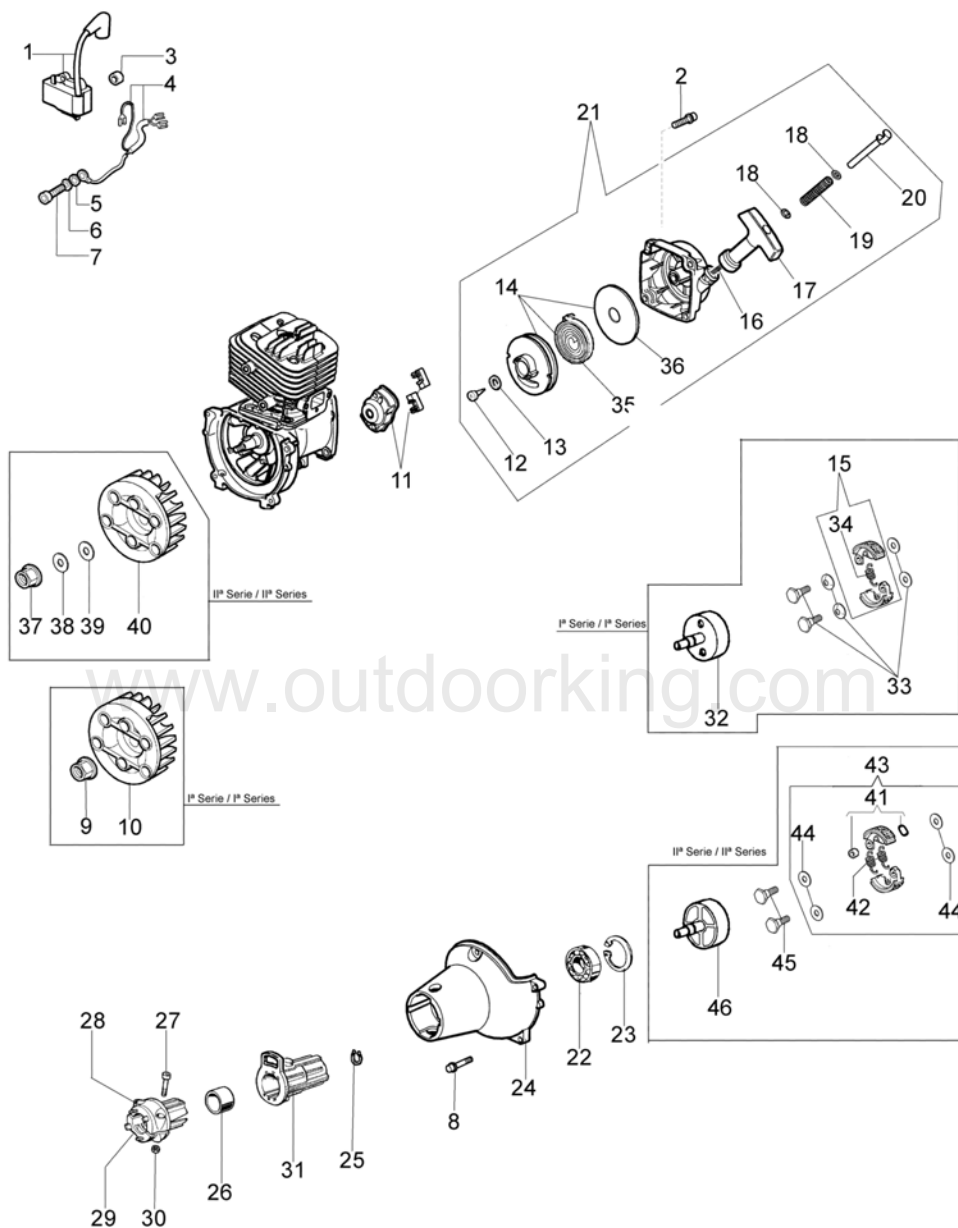

BC 320 S - Starter assy and clutch




Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61280023AR	Ignition coil				
2	4	61052008R	Screw				
3	2	61170014	Spacer				
4	1	61280123R	Cable	matr.2180274185			BT3-105-01/11
4	1	61170017R	Cable		matr.2180274184		BT3-105-01/11
5	2	3916004	Washer				
6	2	3819005	Washer				
7	2	006000085	Screw				
8	4	3801013R	Screw				
9	1	3980012	Nut		matr.2180474760		BT3-106-01/11
10	1	61280025R	Flywheel		matr.2180474760		BT3-106-01/11
11	1	56560034R	Clutch driver				
12	1	3960070	Screw				
13	1	094600054	Washer				
14	1	61172004R	Compl. pulley				
15	1	61070091R	Clutch		matr.2180474760		BT3-106-01/11
16	1	61070019AR	Starter rope				
17	1	56530018R	Starter handle				
18	1	56530021	Washer				
19	1	56530019	Spring				
20	1	56530020	Insert				
21	1	61170060R	Starter assy				
22	1	3035023R	Bearing				
23	1	3025019	Ring				
24	1	61170105R	Starter case				
25	1	3024012	Ring				
26	1	4161364	Bushing				
27	2	3801016R	Screw				
28	1	61200059R	Adaptor				
29	1	61200060R	Adaptor				
30	2	3914003R	Nut				
31	1	4161428	Sleeve				
32	1	61170050AR	Clutch drum		matr.2180474760		BT3-106-01/11
33	1	61170137B	Screw/washer kit		matr.2180474760		BT3-106-01/11
34	1	61070090R	Spring		matr.2180474760		BT3-106-01/11
35	1	61070036R	Spring				
36	1	61170173R	Washer				
37	1	3912009	Nut	matr.2180474761			BT3-106-01/11
38	1	3833080	Washer	matr.2180474761			BT3-106-01/11
39	1	3916009	Washer	matr.2180474761			BT3-106-01/11
40	1	61280109R	Flywheel	matr.2180474761			BT3-106-01/11
41	1	61280151	Set (Spacer)	matr.2181219931			BT3-110-06/11
42	2	4138494	Spring	matr.2180474761			BT3-106-01/11
43	1	61280135AR	Clutch	matr.2181219931			BT3-106-01/11, BT3-110-06/11
44	4	3918007	Washer	matr.2180474761			BT3-106-01/11, BT3-110-06/11


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	2	3806040	Screw	matr.2180474761			BT3-106-01/11
46	1	61280130R	Clutch drum	matr.2180474761			BT3-106-01/11

www.outdoorking.com

BC 320 S - Fuel tank and air filter

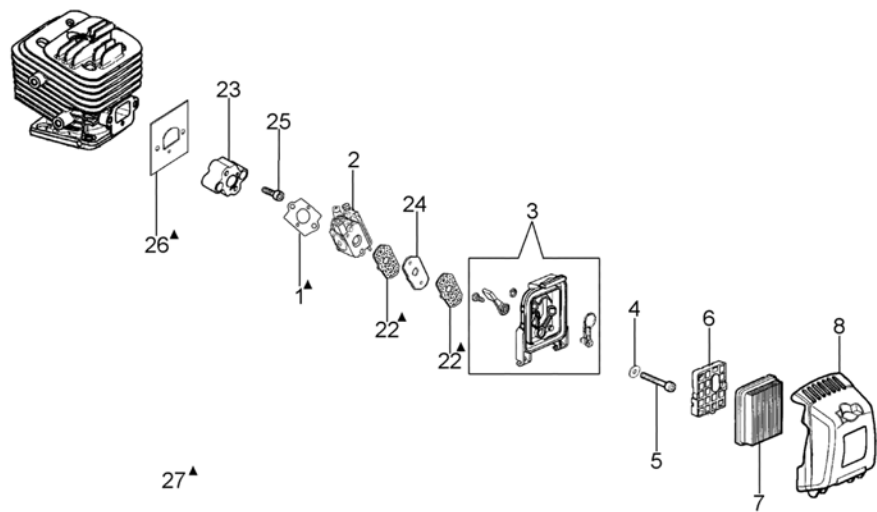

www.outdoorking.com

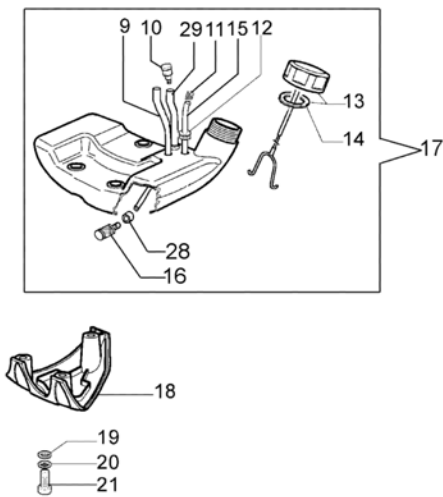


BC 320 S - Fuel tank and air filter




Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	072700077AR	Gasket				
2	1	2318705BR	Carburetor				
3	1	61280030R	Support				
4	2	3833073R	Washer				
5	2	4175163	Screw				
6	1	61170052A	Guard				
7	1	61170016R	Air filter				
8	1	61170144AR	Filter cover				
9	1	61280055	Tube				
10	1	61070011AR	Breather valve				
11	1	4098377	Band				
12	1	4161211	Bush				
13	1	61070079R	Tank cap				
14	1	61070006	Gasket				
15	1	61280056	Tube				
16	1	094600450R	Fuel filter				
17	1	61282029R	Fuel tank				
18	1	61170041	Stand				
19	3	3918005	Washer				
20	3	3819006	Washer				
21	3	3801013R	Screw				
22	2	61280059R	Gasket				
23	2	074000130C	Insulator				
24	1	61290004R	Spacer				
25	2	3960069AR	Screw				
26	1	072700076A	Gasket				
27	1	61282025B	Gasket set				
28	1	61110162	Bushing				
29	1	61070078	Hose				

BC 320 S - Transmission

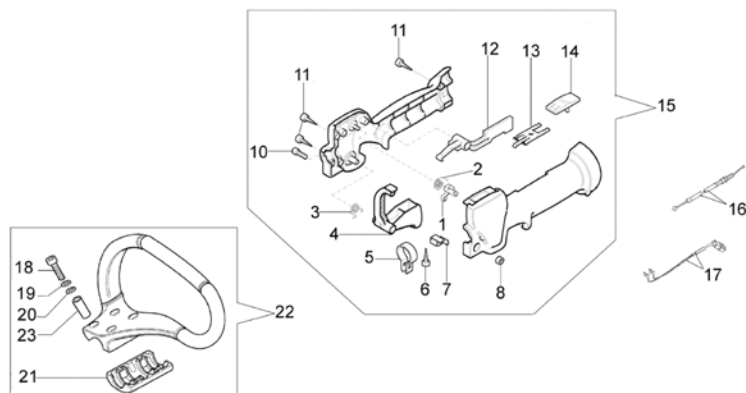

I^a Serie / I^a Series

II^a Serie / II^a Series

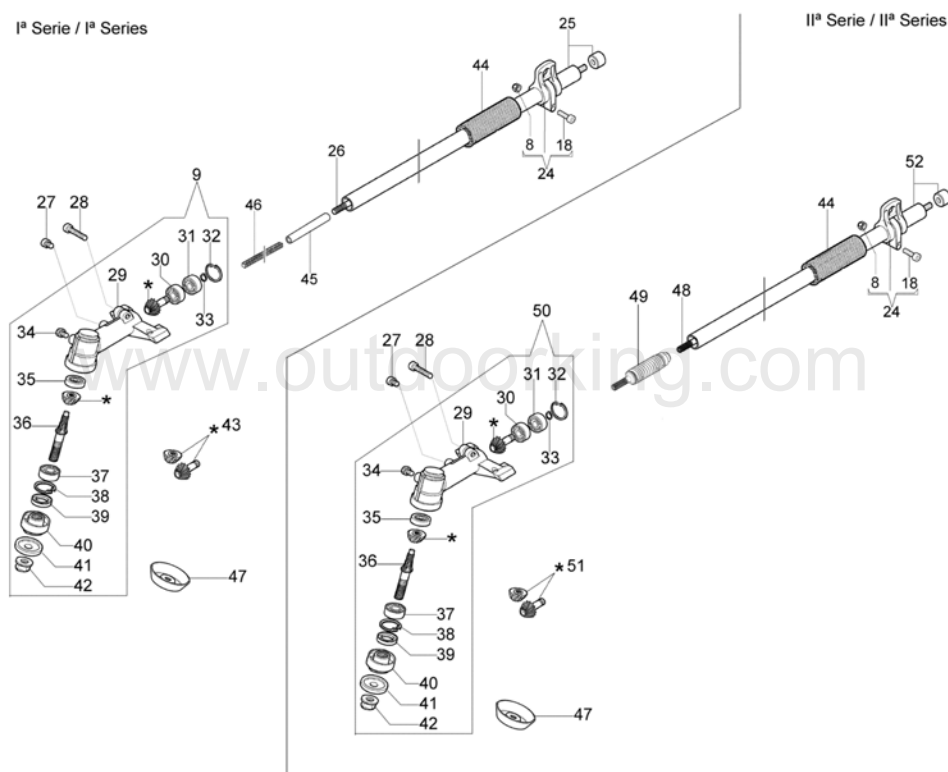

BC 320 S - Transmission



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61040052	Pawl				
2	1	61040057R	Spring				
3	1	61040056R	Spring				
4	1	61040049	Throttle lever				
5	1	61010019	Band				
6	1	3960061AR	Screw				
7	1	61040054	Plate				
8	2	3914003R	Nut				
9	1	61320046R	Bevel gear Ø26		matr. 2180474760		BT3-106-01/11
10	1	3801011	Screw				
11	3	3960067AR	Screw				
12	1	61040050AR	Lever				
13	1	61040053	Plate				
14	1	61070042	Slide control				
15	1	61012006A	Handle				
16	1	61280061AR	Throttle cable				BT3-093-03/10
17	1	61280122R	Cable	matr.2180274185			BT3-105-01/11
17	1	61280060AR	Cable		matr.2180274184		BT3-093-03/10, BT3-105-01/11
18	4	3801015	Screw				
19	4	3819006	Washer				
20	4	3916005R	Sealing washer				
21	1	61170117R	Clamp				
22	1	62030039A	Complete handle				
23	4	61170133	Insert				
24	1	4161619R	Band d.26				
25	1	61280069R	Tube Ø26		matr. 2180474760		BT3-106-01/11
26	1	61280066R	Drive shaft				
27	1	3901008	Screw				
28	1	3901016	Screw				
29	1	61320035R	Gear case				
30	1	3034008	Bearing				
31	1	3035044	Bearing				
32	1	3025026	Ring				
33	1	3024009R	Ring				
34	1	3906030	Screw				
35	1	3035045R	Bearing				
36	1	61170122	Shaft				
37	1	3034008	Bearing				
38	1	3025018R	Ring				
39	1	61170134	Seal ring				
40	1	61170123	Hub				
41	1	61170124	Thrust washer				
42	1	3933105	Nut				

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
43	1	61282028	Bevel gear set		matr. 2180474760		BT3-106-01/11
44	1	4160262B	Knob				
45	1	61280065R	Joint		matr. 2180474760		BT3-106-01/11
46	1	61280064AR	Shaft		matr. 2180474760		BT3-106-01/11
47	1	61110074R	Guard				
48	1	61250274R	Flexible shaft	matr. 2180474761			BT3-106-01/11
49	1	61280129AR	Torsion damper	matr. 2180474761			BT3-106-01/11
50	1	61280133R	Bevel gear	matr. 2180474761			BT3-106-01/11
51	1	61170135	Bevel gear set	matr. 2180474761			BT3-106-01/11
52	1	61280140R	Tube	matr. 2180474761			BT3-106-01/11


www.outdoorking.com

BC 320 S - Carburetor



Walbro mod. WT-930B

compl. p.n. 2318705BR

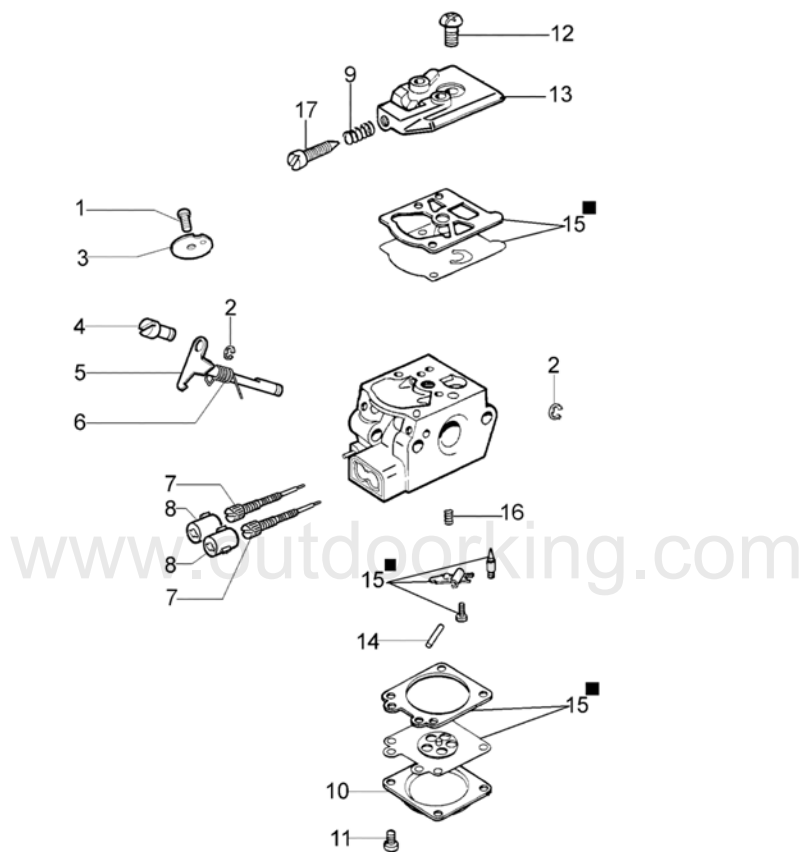





15 ■ KIT RIPARAZIONE
REPAIR KIT

BC 320 S - Carburetor



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	074000240	Adjust.screw				
2	2	095000164	Ring				
3	1	375100078	Shutter				
4	1	2318211	Pin				
5	1	2318737	Shaft				
6	1	072700347	Spring				
7	1	2318631	Adjust. screw				
8	2	2318687	Caps-lock				
9	1	094600148	Spring				
10	1	2318191	Cover				
11	4	035000162	Screw				
12	1	003300202	Screw				
13	1	50050107	Cover				
14	1	003300201	Spindle				
15	1	2318671	Repair kit				
16	1	094600430	Spring				
17	1	074000240	Adjust.screw				

www.outdoorking.com

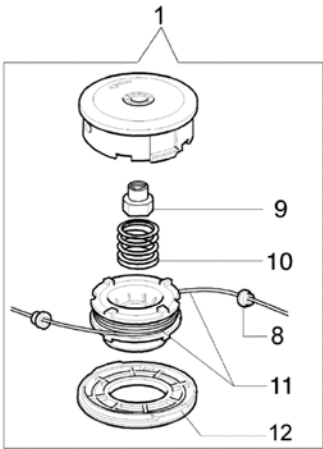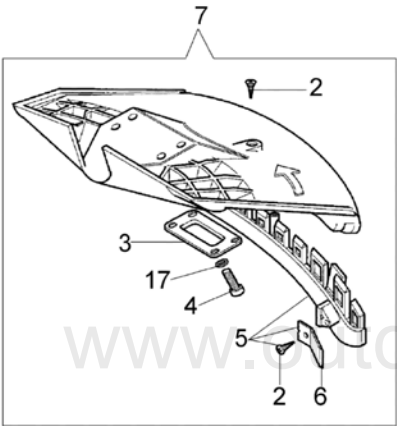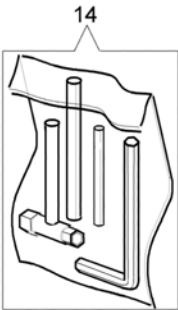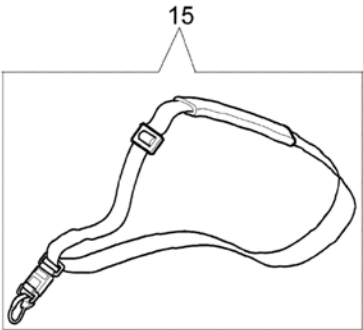

BC 320 S - Accessories



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61172019A	Compl. nylon head Ø2,4				
2	2	3960040R	Screw				
3	1	61240161R	Plate				
4	4	3801010R	Screw				
5	1	4179113A	Skirt w/blade				
6	1	4174275R	Blade				
7	1	61102032	Guard				
8	2	4199005A	Bushing				
9	1	61110076	Insert				
10	1	4199004	Spring				
11	1	4199014A	Nylon spool Ø2,4				
12	1	4199046	Cover				
13	1	4095673AR	Disk				
14	1	61260029	Tool kit				
15	1	4160463AR	Harness				
16	1	61282023	Labels kit				
17	4	3819006	Washer				

www.outdoorking.com