
Tanaka.

Parts Catalog

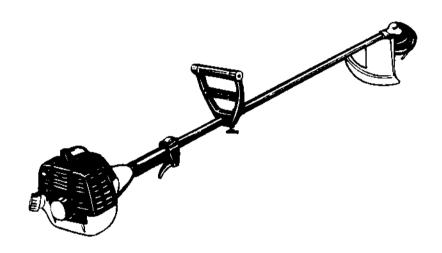

Brush Cutter

Model: TBC-300

Part # 10832 02-10-98

TBC-300

OPTIONS AND ACCESSORIES


NYLON LINE




746156 .095, Box, 50 ft. 746157 .105, Box, 50 ft. 746160 .095, 1/2 lb. Box, 143 ft. 746161 .105, 1/2 lb. Box, 110 ft 746165 .095, 1 lb. Box, 285 ft. 746166 .105, 1 lb. Box, 235 ft. 746169 .095, 3 lb. spool, 855 ft. 746170 .105, 3 lb. spool, 705 ft. 746173 .095, 5 lb. spool, 1425 ft.

746174 .105, 5 lb. spool, 1175 ft.

SHOULDER STRAPS





PSS-175

SS-400

SEMI-AUTO HEAD



746153 PNH-180

Parts List

| Body |
|-----------|
| Cap |
| Adapter |
| Spool |
| Eyelet |
| Spring |
| Bump Disk |
| |

TMC-200 CULTIVATOR



BLADES



746101 Weed Blade, 9"X4T 746103 Weed Blade, 9"X48T 746104 Saw Blade, 9"X80T 746192 Carbide Blade, 9"X36T

ALUMINUM MANUAL HEAD



PCH-100 (746180)

PCH-300 (746190)

PERFECT MIX® 2-Cycle Engine Oil




700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

MANUALS / CATALOGS

046014E DPL-BC300-HST Parts Catalog WSM-TBC

Owner's Manual Service Manual

BLADE SAFETY DISK

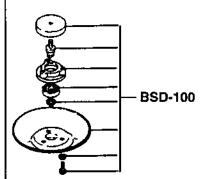

SPECIAL TOOLS

| 9373-500 Pinion Fitting Tool 9000-000 Tachometer 900W-500 Pressure Tester 900W-501 Carb. Tool Kit |
|--|
| |



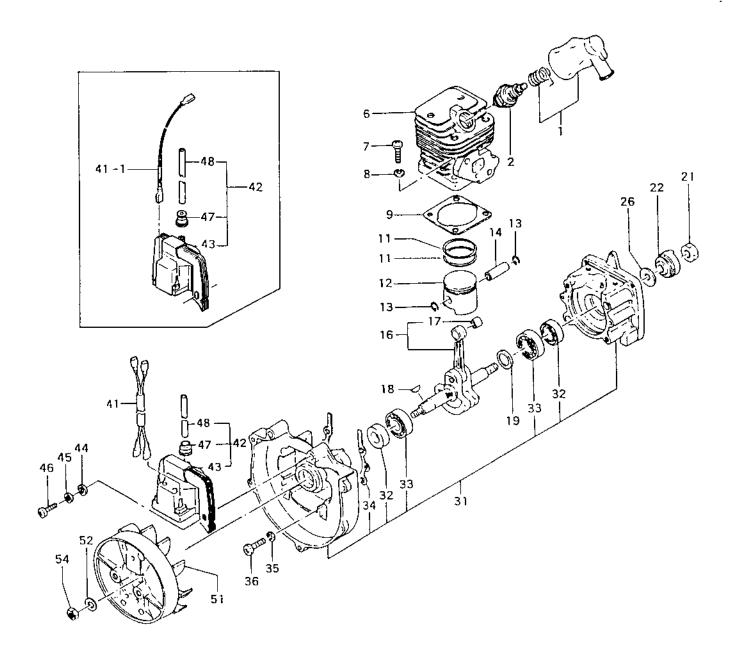









FIG. 1 ENGINE



| REF. | PART NO. | PART DESCRIPTION | Q | Ç | S | SERIAL NO. | REMARKS |
|------|---------------|-------------------------|----|---|---|------------|-----------------------------------|
| 1 | 157-0097A-900 | CAP,SPARK PLUG,ASS'Y | 1 | | В | | |
| 2 | 018-02233-200 | PLUG,SPARK | 1 | | D | | |
| 6 | 002-01280-20 | CYLINDER | 1 | | С | | |
| 7 | 990-11050-161 | SCREW,5X16 | 4 | | В | | |
| 8 | 992-10050-012 | WASHER,S,5 | 4 | 1 | Α | | |
| 9 | 017-01280-20 | GASKET,CYLINDER | 1 | | В | | |
| | | | | | | | |
| 11 | 041-01700-200 | RING,PISTON | 2 | | В | | |
| 12 | 031-01280-20 | PISTON | 1 | | С | | |
| 13 | 039-00000-201 | CIRCLIP, PISTON PIN | 2 | | Α | | |
| 14 | 037-01700-200 | PIN,PISTON | 1 | | В | | |
| 16 | 046-01280-80 | CRANKSHAFT | 1 | | D | ~N199200 | |
| 16 | 046-01280-81 | CRANKSHAFT | 1 | | D | N199201~ | |
| | | | | | | | |
| 17 | 999-62091-338 | BEARING,NEEDLE,KTV91313 | 1 | | С | | |
| 18 | 068-10100-200 | KEY,WOODRUFF,3X13X4.5 | 1 | | c | | |
| 19 | 330-00200-210 | SHIM,12.2X19X.10 | l۷ | | D | | |
| 19 | 330-00200-220 | SHIM,12.2X19X.15 | l۷ | | D | | Shims are "as needed" to obtain |
| 19 | 330-00200-230 | SHIM,12.2X19X.20 | l۷ | | D | | correct c/s side clearance. |
| 19 | 330-00200-240 | SHIM,12.2X19X.30 | l٧ | | D | | |
| | | | | | | | |
| 21 | 991-01080-011 | в,тим | 1 | | В | | |
| 22 | 798-01630-200 | PULLEY,STARTER | 1 | | D | | |
| 26 | | WASHER,CLUTCH B | 1 | | A | | |
| 31 | 072-01280-90 | CRANKCASE,ASS'Y | 1 | ŀ | D | - | Includes bearings, seals & gasket |
| 32 | 999-66122-240 | SEAL,OIL,12227 | 2 | | A | | |
| 33 | 999-61600-100 | BEARING,BALL,#6001 | 2 | | В | | |
| | | | | | | | |
| 34 | 090-00601-206 | GASKET,CRANKCASE | 1 | | В | | |
| | | WASHER,S,5 | 4 | | A | | |
| | | SCREW,5X25 | 4 | | D | | |
| | 178-01280-80 | CORD,STOP,380mm | 2 | | D | ~N199200 | |
| 41 | 178-06550-80 | CORD,STOP,180mm | 1 | | | N199201~ | |
| 42 | 167-20521-90 | COIL,IGNITION | 1 | | D | | |
| | | · | | | 1 | | |
| 43 | 167-20521-80 | COIL,IGNITION | 1 | | Ь | | w/o high tension lead & cap. |
| 44 | | WASHER,SMALL,5 | 2 | | c | | |
| | | WASHER,S,5 | 2 | | Ā | | |
| i I | 990-11050-201 | SCREW,MX20 | 2 | | D | | |
| | | CAP,RUBBER | 1 | | c | | |
| 1 | | LEAD, HIGH TENSION | 1 | | c | | |
| | | , | | | | | |
| 51 | 155-20509-800 | ROTOR,MAGNETO | 1 | | D | | |
| | 992-00080-011 | WASHER,8 | 1 | | ם | | |
| | 991-01080-011 | NUT,8 | 1 | | В | | |
| | | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

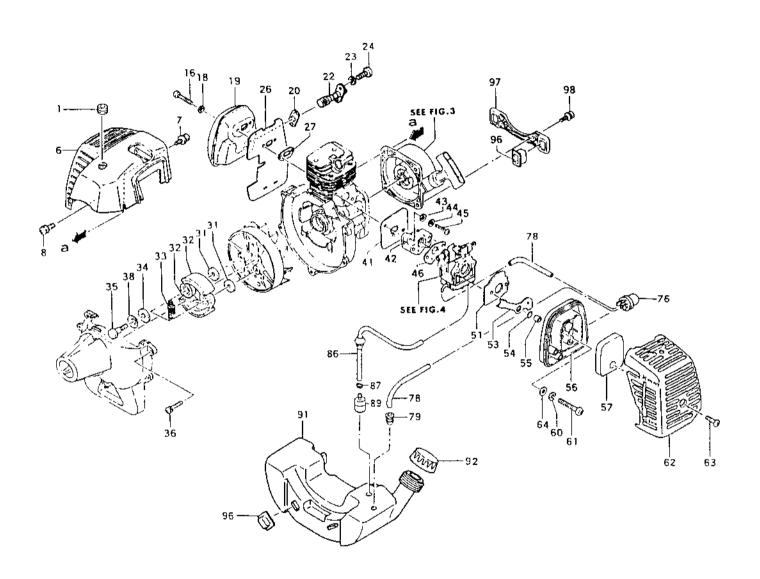

| REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO. | REMARKS |
|------|---------------|-------------------------|----|---|---|------------|---------|
| 1 | 202-01003-201 | GROMMET, SECONDARY CORD | 1 | | С | | |
| 6 | 738-0097A-21 | PROTECTOR, MUFFLER | 1 | | С | | |
| 7 | 994-15040-222 | SCREW,PS,4X22 | 2 | | Α | | |
| 8 | 994-15050-122 | SCREW,5X12/PS | 2 | | С | | |
| 16 | 990-53060-503 | SCREW,HEX,6X50 | 2 | | С | | |
| 18 | 992-01060-011 | WASHER,6 | 2 | | Α | | |
| | | , | | | | | |
| 19 | 706-0165V-800 | MUFFLER | 1 | | D | : | |
| 20 | 751-04200-201 | GASKET,MUFFLER | 1. | | С | | |
| 22 | 721-0098A-80 | PIPE,TAIL | 1 | | D | , | |
| 23 | | WASHER,S,4 | 2 | | В | | |
| 1 | | SCREW,4X8 | 2 | | С | | |
| 26 | i | SHIELD,HEAT | 1 | | С | | |
| | | | | | | | |
| 27 | 737-0165A-201 | GASKET,MUFFLER | 1 | | В | | |
| 31 | 359-02103-200 | WASHER,CLUTCH,B | 2 | | В | | |
| 32 | | SHOE,CLUTCH | 2 | | Α | | |
| | | SPRING,CLUTCH | 1 | | Α | | |
| | | WASHER,CLUTCH A | 2 | | в | | |
| 35 | 357-0075T-200 | · | 2 | | Α | | |
| | | | | | | | |
| 36 | 994-14050-162 | SCREW,S,5X16 | 3 | | С | | ; |
| 38 | 992-05080-030 | WASHER,8 | 2 | | C | | |
| 41 | 403-0097A-200 | GASKET INLET MANIFOLD | 1 | | в | | |
| 1 | | INSULATOR, CARBURETOR | 1 | | С | | |
| 1 | Į. | WASHER,SMALL,5 | 2 | | С | | |
| 44 | ! | WASHER,S,5 | 2 | | Α | | |
| | | | | | | | |
| 45 | 990-11050-241 | SCREW,5X24 | 2 | | D | | |
| 46 | 402-0602K-21 | GASKET,CARBURETOR | 1 | | В | | |
| 51 | 436-0162V-20 | BASE,CLEANER | 1 | | С | | |
| 53 | 528-0097A-210 | PLATE,CHOKE | 1 | | D | | |
| 54 | 999-67008-012 | O-RING,S-8 | 1 | | С | | į |
| 55 | 470-0602N-200 | COLLAR, CLEANER | 1 | | С | | |
| | | | | | | | , |
| 56 | 423-0637C-800 | BODY,CLEANER | 1 | | В | | |
| 57 | 446-0637C-200 | ELEMENT, CLEANER | 1 | | Α | | |
| 60 | 992-10050-012 | WASHER,S,5 | 2 | | Α | | |
| 61 | 990-11050-602 | SCREW,5X60 | 2 | | Ç | | |
| 62 | 452-0165V-21 | COVER,CLEANER | 1 | | C | | |
| 63 | 380-0637C-200 | BOLT, CLEANER | 1 | | ₿ | | |
| | | | | | |] | |
| 64 | 992-00050-011 | WASHER,SMALL,5 | 2 | | С | | |
| 76 | 442-25143-800 | PUMP,PRIMING | 1 | | В | | |
| 78 | 700-02504-080 | PIPE,FUEL,2.5X4X80 | 2 | | С | - | |
| | <u> </u> | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

| REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO. | REMARKS |
|------|---------------|--------------------|---|---|---|------------|---------|
| 79 | 534-32710-200 | GROMMET, FUEL PIPE | 1 | | Ç | | |
| 86 | 223-0162V-900 | PIPE,FUEL,ASS'Y | 1 | | Α | | |
| 87 | 680-00731-201 | CLIP | 1 | | В | | |
| 89 | 675-04042-80 | FILTER,FUEL | 1 | | Α | | |
| 91 | 591-0165V-202 | TANK,FUEL | 1 | | С | | |
| | | | | | | | |
| 92 | 595-0650A-90 | CAP,TANK | 1 | | Α | | |
| 96 | 655-00940-201 | CUSHION, FUEL TANK | 4 | | Α | | |
| 97 | 653-0097A-20 | BRACKET,TANK | 1 | | В | | |
| 98 | 994-15040-222 | SCREW,PS,4X22 | 2 | | Α | | |
| | | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


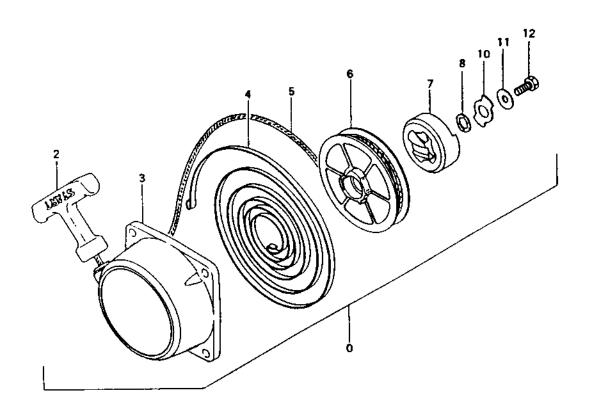


FIGURE 3

| | , | + "······ · · · · · · · · · · · · · · · | | | | | |
|------|---------------|---|---|---|---|------------|---------|
| REF. | PART NO. | PART DESCRIPTION | Q | C | s | SERIAL NO. | REMARKS |
| 0 | 762-00940-901 | STARTER,RECOIL ASS'Y | 1 | | Α | | |
| 2 | 785-00940-200 | HANDLE,STARTER | 1 | Ì | С | | |
| 3 | 772-00940-801 | BODY,STARTER | 1 | | С | | |
| 4 | 780-00940-200 | SPRING,RECOIL | 1 | | Α | | |
| 5 | 783-00940-200 | ROPE,STARTER | 1 | | В | | |
| 6 | 774-00940-200 | REEL,STARTER ROPE | 1 | | С | | |
| | | | | | | ĺ | |
| 7 | 788-00940-200 | PAWL,STARTER | 1 | | С | | |
| 8 | 801-05015-200 | WASHER, STARTER PULLEY | 1 | | В | | |
| 10 | 837-05015-21 | PLATE, FRICTION | 1 | | C | | |
| 11 | 822-05015-21 | SHIM,STARTER PULLEY | 1 | | В | | |
| 12 | 839-05015-20 | BOLT,SET | 1 | | C | | |
| Ĺ | | | | | | | |

FIG.4 CARBURETOR

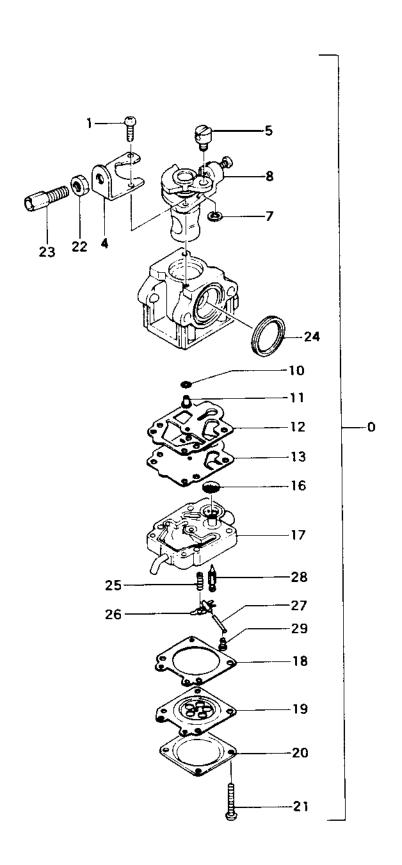

| | 750 000 1 A1110 210 1110 | | | | | | | | | | | |
|------|--------------------------|-------------------------|-----|---|---|------------|---------------------------------|--|--|--|--|--|
| REF. | | PART DESCRIPTION | Q | С | _ | SERIAL NO. | | | | | | |
| 0 | 455-25148-90 | CARBURETOR, ASSY | 1 | | F | ~Q050711 | See PI 3058 | | | | | |
| 0 | 455-25148-91 | CARBURETOR,ASS'Y | 1 | | С | Q050712~ | See PI 3058 | | | | | |
| 1 | 514-25100-200 | SCREW,THROTTLE SET | 2 | | D | | | | | | | |
| 4 | 544-25120-200 | STAY,ADJUST,CABLE | 1 | | D | | | | | | | |
| 5 | 539-25120-200 | SWIVEL | 1 | | D | | | | | | | |
| 7 | 489-25100-200 | RING,STOP | 1 | | D | | | | | | | |
| | 1 | | | | | | | | | | | |
| 8 | 488-25129-800 | VALVE,THROTTLE | 1 | | С | | | | | | | |
| 10 | ~~~ | O-RING | 1 | | С | | | | | | | |
| 11 | 599-200AW-42 | JET,MA!N # 42 | 1 | | C | ~P224030 | See Pl 3058 | | | | | |
| 11 | 599-2000W-440 | JET,MAIN,#44 | 1 | | | P224031~ | See Pl 3058 | | | | | |
| 12 | ~~~ | *GASKET,PUMP | 1 | | В | | | | | | | |
| 13 | ~~~ | *DIAPHRAGM,PUMP | 1 | | В | | | | | | | |
| | | | | | | | | | | | | |
| 16 | | *SCREEN,INLET | 1 | | С | | * Contained in Carb. Repair Kit | | | | | |
| 1 | 575-25147-80 | BODY,PUMP ASS'Y | 1 | | D | | 650-25124-900 | | | | | |
| 18 | ~~~ | *GASKET,DIAPHRAGM .78mm | 1 | | D | | (Not availiable individually) | | | | | |
| 19 | | *DIAPHRAGM,METERING | 1 | | Α | | | | | | | |
| ļ | 476-25004-200 | COVER,DIAPHRAGM | 1 | | D | | | | | | | |
| 21 | 548-25101-200 | SCREW,SET | 4 | | D | | ļ | | | | | |
| | | | | | | | 1 | | | | | |
| 21 | | NUT,6 | 1 | | B | | | | | | | |
| 23 | | ADJUSTER,CABLE | 1 | | D | | | | | | | |
| 24 | | PACKING,CLEANER | 1 | | С | | | | | | | |
| 25 | 477-25147-20 | SPRING, VALVE | [1] | | D | | | | | | | |
| 26 | ~~~ | *HINGE,VALVE | 1 | | C | | | | | | | |
| 27 | ~~~ | *PIN,FLOAT | 1 | | D | | | | | | | |
| | | l | | | | | | | | | | |
| 28 | ~~~ | *VALVE,NEEDLE | [1] | | C | | | | | | | |
| 29 | 546-25147-20 | SCREW,SET,HINGE PIN | 1 | | D | | | | | | | |
| | ! | | | | | | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG. 5 CLUTCH CASE

UNITS BEFORE SER. # P216350

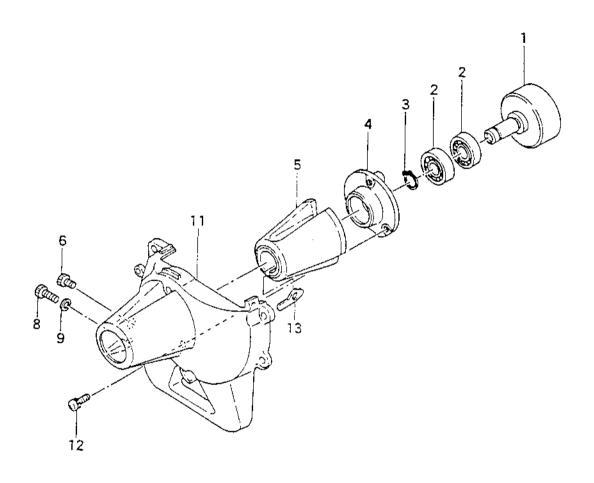


FIGURE 5

| REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO. | | REMARKS | 3 |
|------|---------------|---------------------|---|---|---|------------|-------|--------------|---|
| 1 | 289-0631A-802 | DRUM,CLUTCH | 1 | | Α | | 11.2. | - | |
| 2 | 999-61600-102 | BEARING,BALL,#6001Z | 2 | | В | | | | |
| 3 | 993-50012-002 | RING,STOP,C-12 EX | 1 | | Α | | | | |
| 4 | 374-0631A-20 | FLANGE,CLUTCH | 1 | | В | | | | |
| 5 | 599-0165A-801 | CUSHION | 1 | | D | | | | |
| 6 | 990-51050-103 | BOLT,HEX.HOLE,5X10 | 1 | | c | | | | |
| | | | | | | | | | |
| 8 | 990-51050-203 | BOLT,HEX.HOLE,5X20 | 1 | | C | | | | |
| 9 | 992-10050-062 | WASHER,S,5 | 1 | | D | | | | |
| 11 | 112-0097A-201 | CASE,FAN | 1 | | c | | | | |
| 12 | 994-14050-122 | SCREW,S,5X12 | 3 | | В | | | | |
| 13 | 249-0165A-21 | SPACER | 1 | | D | | | | |
| | | | | | | | | | |

FIG. 5 CLUTCH CASE

UNITS AFTER SER. # P216351


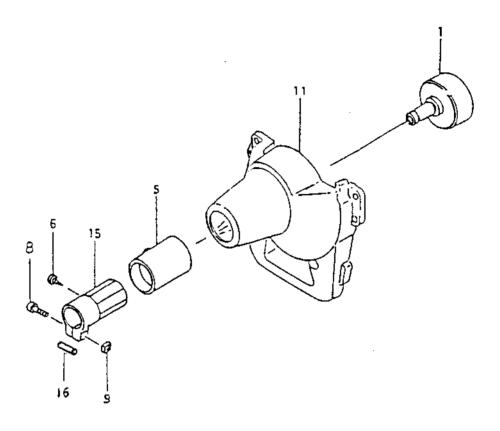


FIGURE 5

| REF. | PART NO. | PART DESCRIPTION | 16 | _ | SERIAL NO | DELMENO |
|------|---------------|----------------------|----|----|-----------|---|
| | | | 10 | | SERIAL NO | REMARKS |
| 1 | 289-00980-80 | DRUM,CLUTCH | 1 | В | | |
| 5 | 599-00980-20 | CUSHION,RUBBER | 1 | В | ~R267790 | |
| 5 | 599-00980-21 | CUSHION,RUBBER | 1 | В | R267791~ | |
| 6 | 990-73045-124 | SCREW,TAPPING,4.5X12 | 1 | D | -R267790 | |
| 6 | 990-74045-164 | SCREW,TAPPING 4.5x16 | 1 | D | R267791~ | |
| 8 | 990-54050-203 | BOLT,HEX,5X20 | 1 | C | R267791~ | |
| | | | | | | |
| 8 | 990-54050-253 | BOLT,HEX 5x25 | 1 | D | R267791~ | |
| 9 | 991-91050-001 | NUT,5 | 1 | С | | |
| 11 | 112-01280-80 | CASE,FAN | 1 | В | ~R267790 | Includes bearings |
| 11 | 112-01280-81 | CASE,FAN COMP. | 1 | В | R267791~ | Includes bearings |
| 15 | 360-01280-20 | HOLDER | 1 | С | -R267790 | |
| 15 | 360-01280-21 | HOLDER | 1 | С | R267791- | |
| | } | | | | | |
| 16 | 096-04300-20 | COLLAR 6.3x18 | 1 | Ç, | R267791~ | |
| | 112-01280-00 | FAN CASE SET | 1 | В | | Use to update older units (PI-3072) |
| | | | _ | | | includes clutch drum and anti-vib parts |

FIG.6 HANDLE

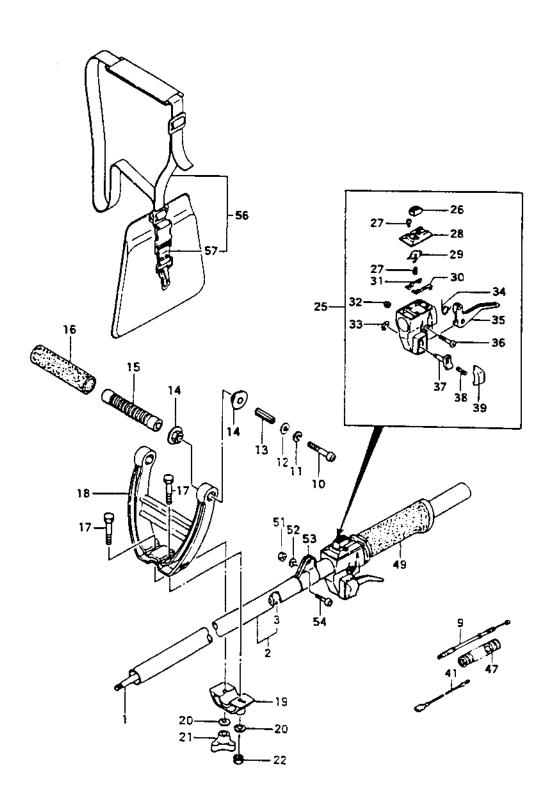

| REF. | PART NO. | PART DESCRIPTION | | | | SERIAL NO | REMARKS |
|------|------------------------|---------------------|---|----|----|-----------|----------|
| 1 | 343-37300-200 | SHAFT,DRIVE | 1 | | Α | " | |
| 2 | 341-37356-80 | PIPE,DRIVE SHAFT | 1 | | Ç | | |
| 3 | 347-37356-900 | BUSHING | 5 | | Ç | | |
| 9 | 885-0097A-800 | WIRE,THROTTLE | 1 | | | ~N199200 | |
| 9 | 885-37394-80 | WIRE,THROTTLE | 1 | | С | N199201~ | |
| | 1 | SCREW,6X55 | 2 | li | С | | |
| | | , | - | | _ | | |
| 11 | 992-10060-062 | WASHER,S,6 | 2 | | Α | | |
| 12 | 761-37400-200 | WASHER,A 2.3 | 2 | | С | | |
| 13 | 513-37400-200 | HOLDER,HANDLE | 2 | | С | | |
| 14 | 319-37400-200 | CUSHION | 4 | | Ç | | |
| 15 | 490-37400-800 | HANDLE,INNER | 1 | | С | | |
| 16 | | GRIP, HANDLE | 1 | | В | | |
| | · | | ľ | | | | |
| 17 | 990-21060-504 | BOLT,6X50 | 2 | | Ç | | |
| ŧ I | | HANDLE | 1 | | D | | |
| i I | | BRACKET,HANDLE A | 1 | | D | | |
| 20 | | WASHER,CLUTCH,B | 2 | | В | | |
| !! | | KNOB HANDLE | 1 | | c | | |
| | 991-01060-041 | NUT,6 | 2 | ı | D | | |
| | | · | | | | | |
| 25 | 870-37003-900 | LEVER,THROTTLE,26MM | 1 | | в | | |
| 1 1 | | SWITCH,STOP | 1 | | c | | |
| 1 1 | | SCREW, TAPPING, 3X8 | 3 | | Ď | | |
| 1 1 | | BASE,STOP SWITCH | 1 | | Ç | | |
| 1 i | | SPRING,STOP SWITCH | 1 | | D | | |
| 1 1 | | TERMINAL,EARTH B | 1 | | cl | | |
| ļ | | ŕ | | - | | | |
| 31 | 176-37101-200 | TERMINAL,EARTH A | 1 | | ם | | |
| 32 | 991-86050-000 | NUT,LOCK,5 | 1 | | Ы | | |
| 33 | 993-55060-001 | RING,STOP,6 | 1 | | D | | |
| 1 1 | | SPRING,RETURN | 1 | | c | | |
| 35 | 880-37101-200 | ARM,THROTTLE | 1 | | в | | |
| 36 | 994-31050-251 | SCREW,S.,5X25 | 1 | | c | | |
| | | | | | | | |
| 37 | 853-37101-200 | SHAFT,LOCK BUTTON | 1 | | D | | |
| 38 | 958-37101 - 200 | SPRING,LOCK,BUTTON | 1 | | D | | |
| 39 | 956-37101-200 | BUTTON,LOCK | 1 | | Ы | | |
| 41 | 178-37300-801 | CORD,STOP | 2 | | c | ~N199200 | |
| 41 | 178-37394-80 | CORD,STOP | 2 | | c | N199201~ | |
| 47 | 164-13014-010 | TUBE,PROTECTION | 1 | | П | ~N199200 | |
| | | | | | | | |
| 47 | 164-10019-00 | TUBE,PROTECTION | 1 | | c | N199201~ | |
| 49 | 504-37003-200 | GRIP,RUBBER | 1 | | D | | i |
| 51 | 991-01050-041 | NUT,5 | 1 | | c | | |
| | | | | | | | 1 |


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 6 cont.

| REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO | REMARKS |
|------|---------------|------------------|---|---|---|-----------|--------------|
| 52 | 992-10050-062 | WASHER,S,5 | 1 | | D | | - |
| 53 | 335-33682-200 | METAL,LIFTING | 1 | | Ç | | |
| 54 | 990-51050-163 | BOLT,HEX,5X16 | 1 | | С | | |
| 56 | SS-250 | STRAP,SHOULDER | 1 | | С | | |
| 57 | 748-33564-900 | HOOK,ASS'Y | 1 | | D | | |
| | | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.7 GEAR CASE

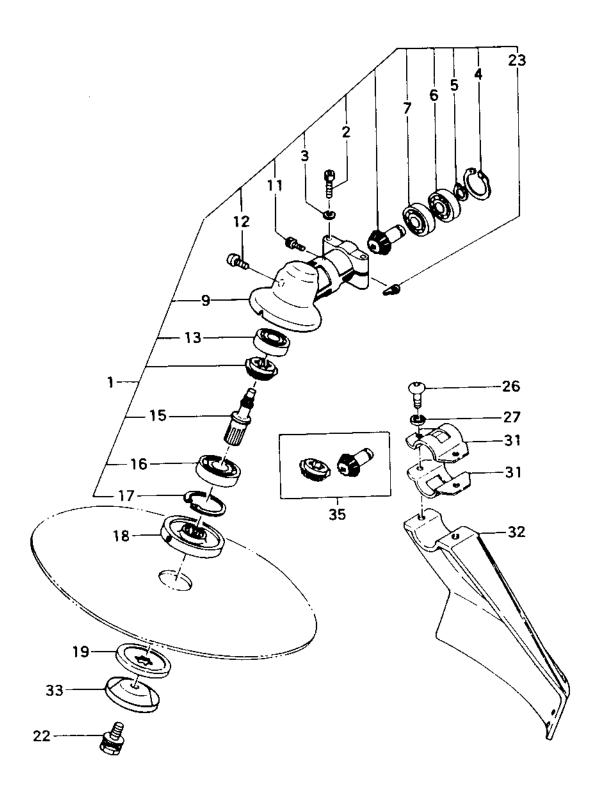

| | INCOM FRANCE | | | | | | | | | | |
|-----|--------------|---------------|---------------------|----|---|----|------------|---------|--|--|--|
| | REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO. | REMARKS | | | |
| | 1 | 300-37380-90 | CASE,GEAR,ASS'Y | 1 | | | ~N199200 | | | | |
| | 1 | 300-37452-90 | CASE,GEAR ASS'Y | 1 | | С | N199201~ | | | | |
| | 2 | 990-51050-253 | BOLT,HEX,5X25 | 2 | | В | | | | | |
| | 3 | 992-10050-062 | WASHER,S,5 | 2 | | D | | i | | | |
| | 4 | 993-51024-002 | RING,STOP,C-28,IN | 1 | | С | | • | | | |
| 1 | 5 | 993-50009-002 | RING,STOP,C9 | 1 | | D | | i | | | |
| 1 | | | | | | | | | | | |
| 1 | | 999-61609-002 | BEARING,BALL,#609Z | 1 | | D. | | | | | |
| 1 | 7 | 999-61609-000 | BEARING,BALL,#609 | 1 | | D | | | | | |
| 1 | | 300-37380-20 | CASE,GEAR | 1 | | D | | | | | |
| 1 | 11 | 990-51050-103 | BOLT,HEX.HOLE,5X10 | 1 | | С | | | | | |
| 1 | | 990-14080-104 | SCREW,8X10 | 1 | | Α | | | | | |
| 1 | 13 | 999-61628-000 | BEARING,BALL,#628 | 1 | | D | | | | | |
| | | | | | | _ | | | | | |
| - | | 304-37380-20 | SHAFT,GEAR | 1 | | D | | | | | |
| 1 | | 999-61620-103 | BEARING,BALL #6201D | 1 | | D | | | | | |
| | 17 | 993-51032-002 | RING,STOP,C-32 IN | 1 | | C | | | | | |
| | | 310-37623-202 | HOLDER,CUTTER | 1 | | В | | | | | |
| | | 311-37300-20 | CAP, CUTTER HOLDER | 1 | | Α | | | | | |
| | 22 | 312-33386-20 | BOLT, FIXING, L.H. | 1 | | C | | | | | |
| | | | | ١. | | _ | | | | | |
| | | 324-37350-20 | WASHER,GEAR CASE | 1 | | D | | | | | |
| | | 990-53060-153 | BOLT,HEX,6X15 | 2 | | В | | | | | |
| | 27 | 992-10060-062 | WASHER,S,6 | 2 | | Α | | | | | |
| | | 442-33671-201 | BRACKET | 2 | | В | | | | | |
| | 32 | 441-33905-800 | GUARD, SAFETY | 1 | | Α | | | | | |
| | ~~ | | | | | ١. | | | | | |
| | | | PROTECTOR,BOLT | 1 | | A | NIAOROOG | | | | |
| | 35 | 301-37380-00 | SET,GEAR PINION | 1 | | l | ~N199200 | | | | |
| | 35 | 301-33395-00 | SET,GEAR/PINION | 1 | | C | N199201~ | | | | |
| - 1 | | 1 | 1 | 1 | ı | • | 1 | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 TOOLS & NYLON HEAD

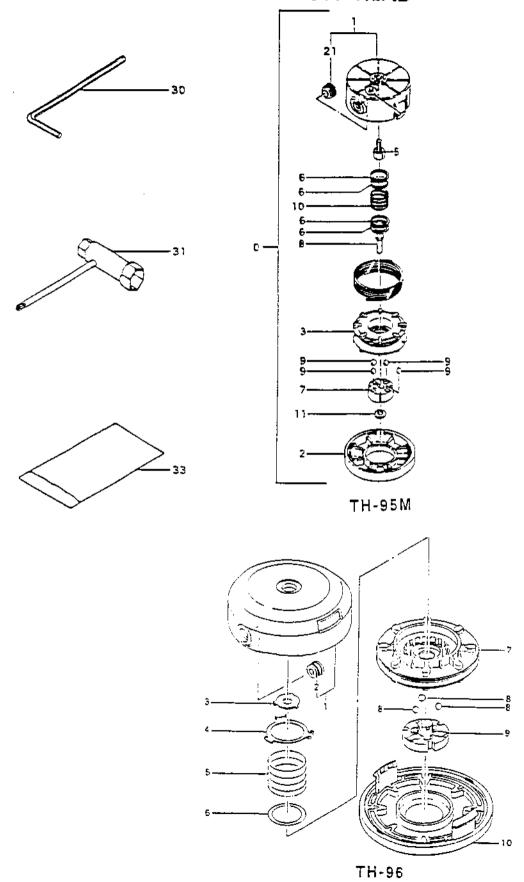

| REF. | PART NO. | PART DESCRIPTION | Q | C | Ş | SERIAL NO | REMARKS |
|------|---------------|---------------------|---|---|---|-----------|---------|
| 0 | 783-33910-91 | HEAD,1R486,AUTO,(M) | 1 | | Α | ~Q203631 | TH-95M |
| 1 | 786-33004-900 | BODY,CUTTING,ASS'Y | 1 | | Α | | |
| 2 | 789-33004-21 | CAP,BODY | 1 | | Α | | |
| 3 | 787-33004-202 | REEL,(R S M X) | 1 | | Α | | |
| 5 | 314-33670-20 | BOLT,8X1.25 LH GOLD | 1 | | Α | | |
| 6 | 792-33004-200 | WASHER,REEL | 4 | | Α | | |
| | | | | | | | |
| 7 | 790-33004-200 | SLIDER,REEL | 1 | | Α | | |
| 8 | 791-33004-200 | HOOK,REEL SLIDER | 1 | | Α | | |
| 9 | 673-35600-20 | BALL,STEEL | 4 | | В | | |
| 10 | 793-33910-20 | SPRING,REEL | 1 | | Α | | |
| 11 | 358-02103-200 | WASHER,CLUTCH A | 1 | | Α | | |
| 21 | 788-33071-20 | EYELET | 2 | | Α | | |
| | | | | | | | |
| 30 | 813-20000-200 | WRENCH,HEX,4 | 1 | | D | | |
| 31 | 829-20000-80 | SPANNER,COMBI,13X19 | 1 | | C | ~M218333 | |
| 31 | 826-20000-80 | SPANNER,COMBI,17X19 | 1 | | C | M218334~ | |
| 33 | 948-39907-200 | BAG,TOOL | 4 | | D | | |
| | | | | | | | |

| REF. | PART NO. | PART DESCRIPTION | Q | | S (| SERIAL NO | REMARKS |
|------|--------------|--------------------|-----|-------|-----|-----------|--------------------------------------|
| 0 | 783-33810-90 | HEAD,AUTO,(TH-96) | 1 | E | 3 (| Q203632~ | TH-96 |
| 1 | 786-33810-90 | BODY,CUTTING | 1 | E | 3 | | |
| 2 | 788-33071-20 | EYELET | 2 | - 17 | Α | | NOTE: This head can be fitted on any |
| 3 | 760-33810-20 | WASHER, MOUNTING | 1 | - / | A | | TBC-300 |
| 4 | 785-33810-20 | BASE,ADJUSTMENT | 1 | E | в | | |
| 5 | 793-33810-21 | SPRING, REÉL, BLK. | 1 | - 1 | ۸ | | |
| | | |]] | | | | |
| 6 | 792-33810-20 | WASHER,ADJUSTMENT | 1 | 1 | Αļ | | |
| 7 | 787-33810-20 | REEL | 1 | | В | | |
| 8 | 673-35600-20 | BALL,STEEL | 3 | 6 | в | | |
| 9 | 790-33810-20 | SLIDER,REEL | 1 | 1 | в | | |
| 10 | 789-33810-20 | CAP,BODY | 1 | | в | | |
| | | | | | | | |

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan, used C=Interchangeability S=Stocking code: A-Fast moving B=Med, fast C=Med, move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

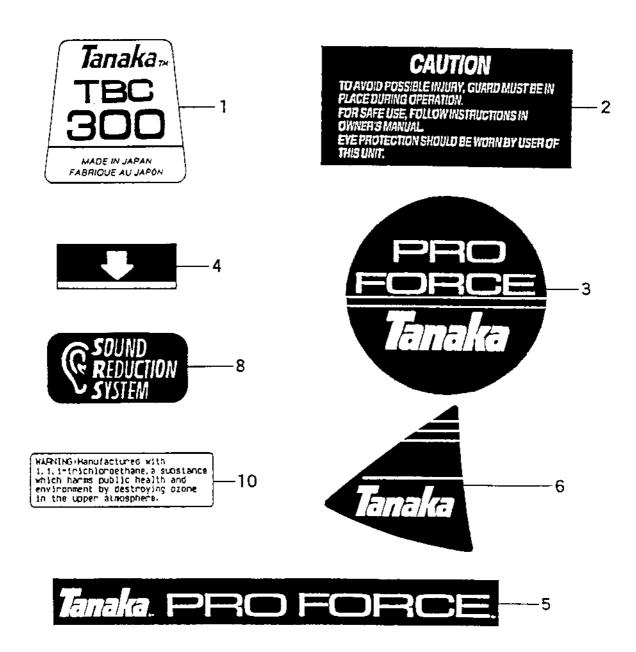


FIGURE 9

| REF. | PART NO. | PART DESCRIPTION | Q | С | S | SERIAL NO | REMARKS |
|------|---------------|-------------------|---|---|---|-----------|---------|
| 1 | 906-37391-20 | DECAL,TBC-300 | 1 | | D | | |
| 2 | 919-37701-200 | DECAL | 1 | | D | | |
| 3 | 950-37900-200 | DECAL,PRO-FORCE A | 1 | | C | 1 | |
| 4 | 923-37400-200 | DECAL,LEVEL | 1 | | D | | |
| 5 | 951-31310-200 | DECAL,PRO-FORCE B | 1 | | D | | |
| 6 | 933-37301-200 | DECAL,SYMBOL | 1 | | D | | |
| 8 | 911-06500-200 | DECAL,SRS | 1 | | D | | |
| | | | | | | | |